




SARA-R4 / LEXI-R422 series

Firmware update with uFOTA, FOAT and EasyFlash
Application note

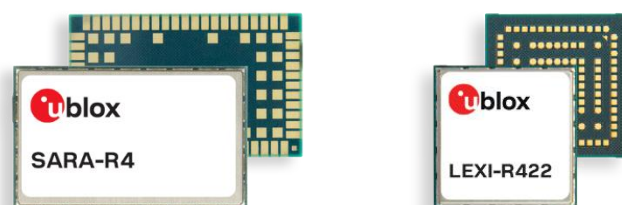

Abstract

u-blox cellular modules offer flexibility by providing multiple options of firmware updates. The options include Firmware Over The Air update (FOTA) via u-blox's uFOTA server with the LwM2M client or via FTP and tethered updates via Firmware Over AT command (FOAT). In addition, the module can be flashed directly via the USB interface with u-blox's EasyFlash tool. This application note covers all these available options.

Document information

Title	SARA-R4 / LEXI-R422 series	
Subtitle	Firmware update with uFOTA, FOAT and EasyFlash	
Document type	Application note	
Document number	UBX-17049154	
Revision and date	R13	23-Nov-2023
Disclosure restriction	C1-Public	

This document applies to the following products:

Product name	
SARA-R410M	Except for "01B" product versions
SARA-R412M	
SARA-R422	
SARA-R422S	
SARA-R422M8S	
SARA-R422M10S	
LEXI-R422	

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, modification or disclosure to third parties of this document or any part thereof is only permitted with the express written permission of u-blox.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit www.u-blox.com.

Copyright © u-blox AG.

Contents

Document information	2
Contents	3
1 Introduction	6
2 Firmware update via uFOTA	7
2.1 Functional overview	7
2.1.1 Security considerations.....	9
2.2 Unsolicited result codes management.....	10
2.2.1 Download success example	10
2.2.2 Download resume example	10
2.3 Download control	11
2.4 uFOTA configuration.....	12
2.4.1 Download only.....	12
2.4.2 Wait for ack.....	13
2.4.3 uFOTA disabled.....	14
2.5 Firmware package installation	14
2.6 Server registration lifetime (SRLT)	15
2.6.1 Server registration lifetime configuration	16
2.6.2 Server registration lifetime configuration by +UFOTACONF	17
2.7 Application design for FOTA compliance.....	18
2.7.1 Enable URCs to support uFOTA update	18
2.7.2 TCP window size	21
2.7.3 Module reboot per uFOTA server request	21
2.7.4 Firmware download	21
2.7.5 Firmware installation	22
2.7.6 Cancelling the uFOTA process.....	23
2.7.7 Actions after firmware installation.....	23
2.8 uFOTA campaign	24
2.8.1 Requirements	24
2.8.2 Approval.....	24
2.8.3 Application design review	24
2.8.4 Test campaign.....	24
2.8.5 Final campaign	24
2.9 uFOTA server access.....	25
2.9.1 u-blox uFOTA server	25
2.9.2 Softbank MNO profile	25
2.9.3 Verizon MNO profile	26
2.9.4 2G PDP context management.....	26
3 Firmware download via FTP	28
3.1 FTP service configuration +UFTP.....	28
3.1.1 Syntax	28

3.2	FTP command +UFTPC	29
3.2.1	Syntax	29
3.3	FTP download operation URCs.....	29
3.3.1	SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 FTP download operation URC.....	29
3.3.2	SARA-R410M / SARA-R412M FTP download operation URCs	30
3.4	Example.....	30
3.5	Error result codes.....	32
4	Firmware download via HTTP	33
4.1	HTTP profile configuration +UHTTP.....	33
4.1.1	Example	33
4.2	HTTP command +UHTTTPC	34
4.2.1	Example	34
4.3	Error result codes	34
5	Firmware download via AT (FOAT).....	35
5.1	+UFWUPD AT command	35
5.1.1	SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 usage...36	
5.1.2	SARA-R410M / SARA-R412M usage	37
5.2	+UDWNFILE AT command.....	38
5.2.1	Syntax	38
6	Firmware installation +UFWINSTALL	39
6.1	SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 FW installation.....	40
6.1.1	Syntax specifications.....	40
6.1.2	Defined values	41
6.1.3	Installation performance.....	41
6.1.4	Firmware installation with +UFWINSTALL example	41
6.1.5	Extended error result codes	42
6.2	SARA-R410M / SARA-R412M firmware installation	43
6.2.1	Syntax specifications.....	43
6.3	Performing EFS backup after flashing FW update with delta package	43
7	AT commands forbidden during FW download.....	44
8	Power Save Mode (PSM).....	45
9	EasyFlash	46
9.1	EasyFlash and Backup & Restore feature	50
9.1.1	Setting preferred message storage after FW update	50
10	FW update: device files and settings.....	51
	Appendix	53
A	Glossary	53
B	MNO certification notes.....	54
B.1	Verizon.....	54
B.1.1	Non-Verizon FW update capability	54

B.1.2 Firmware update with Verizon FOTA server55

Related documentation 57

Revision history 58

Contact..... 58

1 Introduction

The device firmware (FW) management is a key feature for devices integrating a cellular module. u-blox cellular modules provide Over-the-Air (**FOTA**) and tethered (**FOAT**) techniques to update their firmware. Over-the-Air updates are downloaded over cellular technology using the LwM2M protocol via the u-blox uFOTA service or via FTP or via HTTP (where supported). Tethered updates are downloaded over the USB/UART interfaces from a host processor.

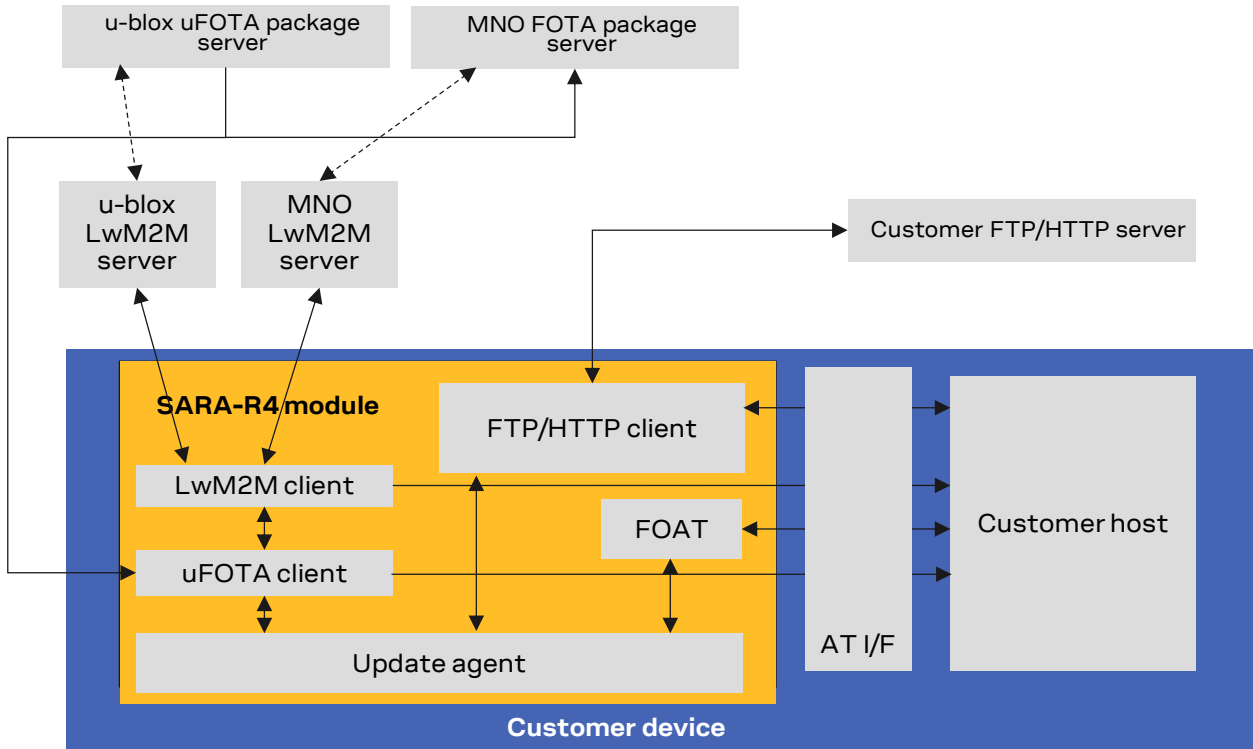


Figure 1: uFOTA, FOAT, FOTA ecosystem

This document describes u-blox implementation of both FOTA and FOAT methods and provides design-in details and recommendations. In addition, it provides guidelines about the EasyFlash tool.

	uFOTA	Change lifetime value	FTP	HTTP	FOAT
SARA-R410M	•	•	•		•
SARA-R412M	•	•	•		•
SARA-R422	•	•			•
SARA-R422M8S	•	•	•	•	•
SARA-R422S	•	•	•	•	•
SARA-R422M10S	•	•	•	•	•

Table 1: FOTA and FOAT methods compatibility matrix

The following symbols are used to highlight important information within the document:



An index finger points out key information pertaining to integration and performance.



A warning symbol indicates actions that could negatively impact or damage the module.

2 Firmware update via uFOTA

uFOTA is u-blox's solution to a managed and automated FOTA service based on the LwM2M protocol. This service uses "campaigns" to manage the firmware upgrade of multiple modules. The behavior of the module during the uFOTA procedure is described in section 2.1. The process to start an upgrade campaign is described in section 2.8. Figure 2 depicts a complete overview of the uFOTA system architecture.

The embedded LwM2M client offers these LwM2M features:

- Device management
- Secure communication with server over the DTLS protocol
- Full control of the application logic that includes firmware upgrades.



During a uFOTA download, the PSM is held off from entering the low power state.

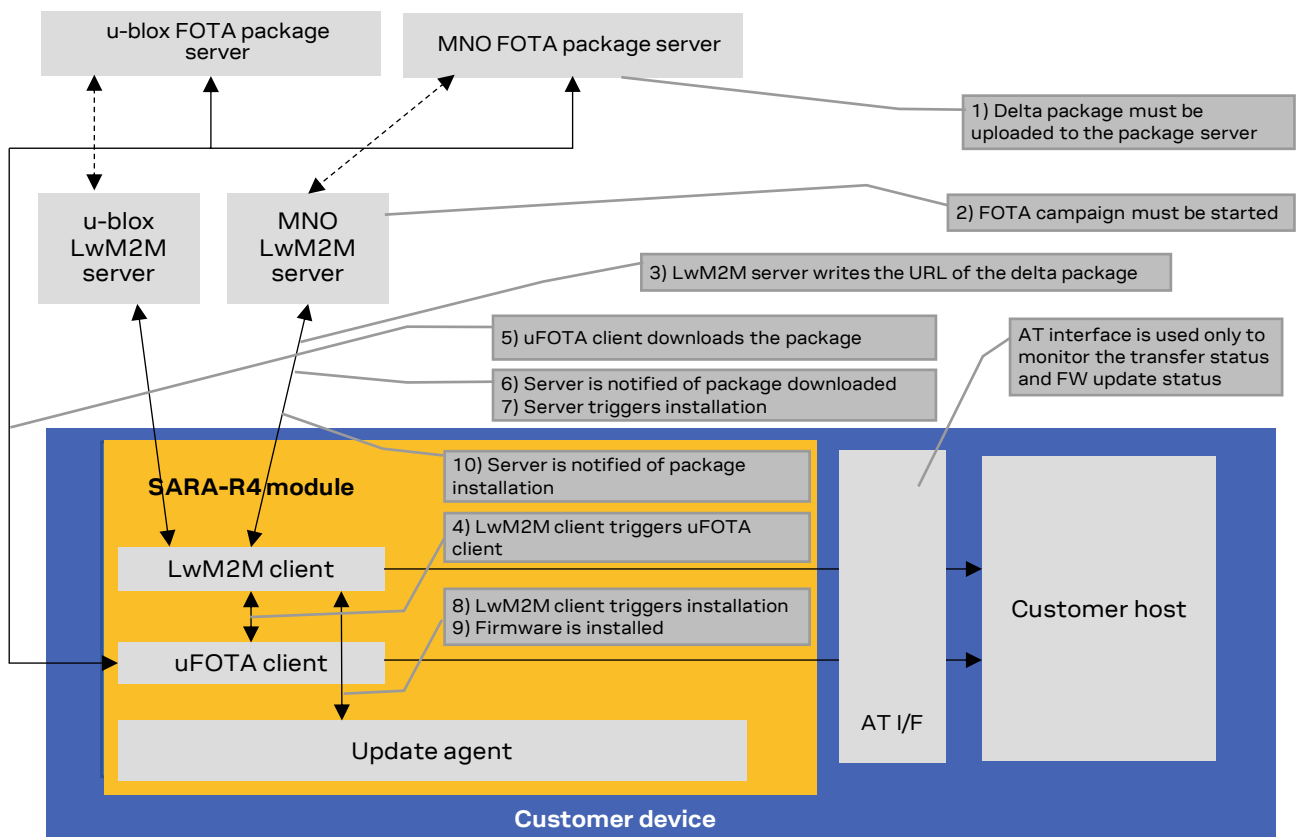


Figure 2: uFOTA system architecture options

2.1 Functional overview

When the module powers up for the first time (factory-programmed configuration) after the module is attached to a cellular network, and if the active MNO profile set by the host application has both LwM2M and uFOTA enabled, the LwM2M client starts and registers to the uFOTA server. The LwM2M client will then check the uFOTA server upon the expiration of the server registration lifetime (SRLT).

Registration with the uFOTA server is performed to:





- Extend the lifetime of a registration.
- Notify the uFOTA server of a parameter change.

- Indicate that objects and/or object instances have been added or removed.


Before lifetime expiration, the LwM2M client performs a registration update to extend the lifetime of the registration. By default, the lifetime value is 86400 s (1 day). If there are no changes to the lifetime, binding mode, SMS number, or objects and object instances, then there is no communication with the server during the remainder of the period.

If, during a registration update, the uFOTA server finds an active campaign for the module and a firmware update package is available, then the server will initiate an observation request on the firmware update object's state and update Result resources and will write the URL of the firmware update package to the package URI resource. This will trigger the LwM2M client to start the download at the next practical opportunity.

The LwM2M client will send unsolicited response codes (URCs) to indicate download start, progress, and result. The LwM2M client notifies the uFOTA server of changes to the Firmware Object's State and Update Result resources.

-  On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S, LEXI-R422, SARA-R410M-02B, SARA-R410M-52B, and SARA-R412M-02B product versions the package download is by HTTP protocol.
-  On SARA-R4 "63B", "73B", "83B" product versions, the package download can be either by the Block-Wise CoAP over DLTS protocol or by HTTPS.
-  On the SARA-R410M "52B" product version and on SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R410M-63B-00, SARA-R410M-73B-00, SARA-R410M-83B-00, SARA-R412M-02B-00, SARA-R412M-02B-01, and SARA-R412M-02B-02 product versions, uFOTA over IPv6 is not supported.
-  The update packages are signed.

The uFOTA server will send an execute command on the firmware object's update resource when the firmware object's state transitions to downloaded. As a result, the module will reset and attempt to install the update package.

-  On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422, during this phase the device will send unsolicited result codes (URCs) to indicate the progress of delta package installation.

When the installation is complete, the module will restart. At the next registration update, the uFOTA server will initiate observation requests for the firmware update object's state and update result resources. The LwM2M client will notify the server of the state and update result.

The server URL address is always configured. For more details, see the +UMNOPROF AT command in SARA-R4 series AT commands manual [\[1\]](#).

The approximate data payload size of the LwM2M server registration procedure depends on:

- The number of servers in MNO profile
- The types of object instances in the MNO profile
- Whether or not LwM2M server(s) request additional information

Typical registration payload for only the u-blox's uFOTA server is about ~ 1.1 kB to 1.4 kB.

If FOAT download or FTP download commands are issued while the u-blox LwM2M client is downloading a firmware package, an error result code will be returned. For more details, see section [7](#).

On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422, be sure not to use the FOAT or FTP/HTTP download commands while the u-blox LwM2M client is downloading a firmware package. For more details, see section 7.

2.1.1 Security considerations

On SARA-R410M-63B, SARA-R410M-73B, SARA-R410M-83B, SARA-R422S-00B, and SARA-R422M8S, the connection of the LwM2M client to the uFOTA server requires the pre-shared key (PSK). If the secure data suite features on the module are disabled before the LwM2M client makes the first registration attempt to the server, then registration will fail and firmware update via uFOTA will not be possible. To check if secure data suite features are disabled, issue the +USECMODE read command. If answer is 0, the features are disabled.

However, if the command AT+USECMODE=0 is issued after the LwM2M client has made the first registration attempt to the server, then firmware update via uFOTA will be possible. However, if later:

- The SRLT (see section 2.6) expires before the LwM2M client has connected to the uFOTA server (e.g., because the module is shut down), or,
- The LwM2M client is reset (AT+ULWM2M=2)

and the module is rebooted, then the registration of the LwM2M client to the server will fail and firmware update via uFOTA will not be possible.

The command AT+ULWMREG? can be used to check the status of the LwM2M client registration to the uFOTA server.

SARA-R422S-00B / SARA-R422M8S

Command	Response	Description
AT+ULWM2MREG?	+ULWM2MREG: 721,3,86281 OK	The uFOTA server, whose ID is 721, was successfully registered (<status>=3) and firmware update via uFOTA is possible.
AT+ULWM2MREG?	+ULWM2MREG: 721,0 OK	The uFOTA server is in the deregistered state (<status>=0). The LwM2M client will try to register again to the server the next time the module is restarted.
AT+ULWM2MREG?	+ULWM2MREG: 721,4 OK	The LwM2M client has failed the registration (<status>=4) to the uFOTA server. If AT+USECMODE? answers 0 on the restart, then the LwM2M client will fail to register to the server, and firmware update via uFOTA will not be possible.

SARA-R410M-63B / SARA-R410M-73B / SARA-R410M-83B

Command	Response	Description
AT+ULWM2MREG?	+ULWM2MREG: 721,2,86281 OK	The uFOTA server, whose ID is 721, was successfully registered (<status>=2) and firmware update via uFOTA is possible.
AT+ULWM2MREG?	+ULWM2MREG: 721,0 OK	The uFOTA server is in the deregistered state (<status>=0). The LwM2M client will try to register again to the server the next time the module is restarted.
AT+ULWM2MREG?	+ULWM2MREG: 721,3 OK	The LwM2M client has failed the registration (<status>=3) to the uFOTA server. If AT+USECMODE? answers 0 on the restart, then the LwM2M client will fail to register to the server, and firmware update via uFOTA will not be possible.

For detailed description of the command syntax, see the SARA-R4 series AT commands manual [1].

2.2 Unsolicited result codes management

The +UFOTASTAT, +ULWM2MSTAT and +UFWINSTALL AT commands (where supported) enable/disable the unsolicited result codes (URCs) events which are reported back to the host.

Table 2 reports the supported URCs and their default configuration for each product version.

Products	Supported URCs	Default configuration
SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S/LEXI-R422	+UFOTASTAT	Disabled
	+ULWM2MSTAT	Disabled
	+UFWINSTALL	Disabled
SARA-R410M-63B / SARA-R410M-73B / SARA-R410M-83B	+UFOTASTAT	Enabled
	+ULWM2MSTAT	Enabled
SARA-R410M-02B-03 / SARA-R412M-02B-03 / SARA-R410M-02B-04 / SARA-R412M-02B-04	+UFOTASTAT	Disabled
	+ULWM2MSTAT	Disabled
SARA-R410M-52B	+ULWM2MSTAT	Enabled
SARA-R410M-02B-00 / SARA-R410M-02B-01 / SARA-R410M-02B-02 / SARA-R412M-02B-00 / SARA-R412M-02B-01 / SARA-R412M-02B-02	+ULWM2MSTAT	Enabled

Table 2: uFOTA URCs default configuration

For a detailed description of the command syntax, see the SARA-R4 series AT commands manual [1].

 It is recommended to enable URCs for uFOTA download.

2.2.1 Download success example

When a uFOTA download is successful, a URC is displayed to indicate the status.

Command	Response	Description
SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S/LEXI-R422/SARA-R410M-63B / SARA-R410M-73B / SARA-R410M-83B, and SARA-R410M-02B-03 / SARA-R412M-02B-03 / SARA-R410M-02B-04 / SARA-R412M-02B-04	+UFOTASTAT: 2,2,100	100% downloaded.
SARA-R410M-52B and SARA-R410M-02B-00 / SARA-R410M-02B-01 / SARA-R410M-02B-02 / SARA-R412M-02B-00 / SARA-R412M-02B-01 / SARA-R412M-02B-02	+ULWM2MSTAT: 2,100	100% downloaded.

2.2.2 Download resume example

The uFOTA download can be resumed if it was interrupted for any of the following reasons:

- Signal fading or loss
- Connectivity loss
- Power loss
- Unsolicited device reset

When the device is active, a pending FOTA update will trigger the download to be resumed from the last flash image page written on the module. When the FOTA resumes some URCs will be issued to indicate the resuming status and the percentage of FOTA update.

Command	Response	Description
SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S/LEXI-R422/SARA-R410M-63B / SARA-R410M-73B / SARA-R410M-83B, and SARA-R410M-02B-03 / SARA-R412M-02B-03 / SARA-R410M-02B-04 / SARA-R412M-02B-04		
...		... download resume....
	+UFOTASTAT: 0,1,63	63% downloaded.
SARA-R410M-52B and SARA-R410M-02B-00 / SARA-R410M-02B-01 / SARA-R410M-02B-02 / SARA-R412M-02B-00 / SARA-R412M-02B-01 / SARA-R412M-02B-02		
...		... download resume....
	+ULWM2MSTAT: 1,63	63% downloaded.

SARA-R410M / SARA-R412M

In case of signal or connectivity loss, when the device is active, a pending uFOTA download will resume. Resume retry algorithm involves 4 attempts, follows this timing:

1. 60 s
2. 120 s after the first attempt
3. 180 s after the second attempt
4. 240 s after the third attempt

The total retry time is 10 minutes, after which uFOTA download failure is declared towards the server.

SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422


In case of signal or connectivity loss, a pending uFOTA download will resume. The resume retry algorithm involves 60 attempts spaced 10 seconds apart.

The total retry time is 10 minutes, after which:


- In case of signal loss, uFOTA download failure is declared towards the server
- In case of connectivity loss, the URC +UFOTASTAT: 2,3,105 is issued and the resume starts automatically after a device reboot

2.3 Download control

While the LwM2M session is in progress and the firmware is being downloaded to the device, the download can be cancelled by issuing the AT+UFOTA=0 command. A URC will be given once the download has been cancelled.

-  On SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R412M-02B-00, SARA-R412M-02B-01, SARA-R412M-02B-02, and SARA-R410M-52B, the download can be cancelled by issuing the AT+ULWM2M=0 command.

Command	Response	Description
SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / SARA-R410M-63B / SARA-R410M-73B / SARA-R410M-83B, and SARA-R410M-02B-03 / SARA-R412M-02B-03 / SARA-R410M-02B-04 / SARA-R412M-02B-04		
AT+UFOTA=0	OK	Cancel the download.
...	 sometime later....
	+UFOTASTAT: 2,3,100	The uFOTA download is cancelled by the host.
SARA-R410M-52B and SARA-R410M-02B-00 / SARA-R410M-02B-01 / SARA-R410M-02B-02 / SARA-R412M-02B-00 / SARA-R412M-02B-01 / SARA-R412M-02B-02		
AT+ULWM2M=0	OK	Cancel the download.
...	 sometime later....
	+ULWM2MSTAT: 3,100	The uFOTA download is cancelled by the host.

 Create another uFOTA “Campaign” to start the uFOTA download process again if the current one was cancelled. For more details, see section [2.8](#).


Similarly, it is also possible to pause and resume the uFOTA download with the AT+UFOTA=1 and AT+UFOTA=2 commands. In addition, the AT+UFOTA? command retrieves the download status, the number of bytes currently downloaded and the total size of the delta packet.

Command	Response	Description
SARA-R422-01B-01 / SARA-R422S-01B-01 / SARA-R422M10S-01B-01 / LEXI -R422		
	+UFOTASTAT: 0,1,8	Download in progress.
	+UFOTASTAT: 0,1,9	Download in progress and 9% of the delta package has been downloaded.
AT+UFOTA=1		Pause the download.
		Pausing the download in progress.
	+UFOTASTAT: 0,2,10	The uFOTA download is paused by the host when 10% of the delta package has been downloaded.
AT+UFOTA?	+UFOTA: 1,6864144,710656 OK	The download has been paused, and currently 710656 bytes out of 6864144 have been downloaded.
AT+UFOTA=2	OK	Resume the download.
	+UFOTASTAT: 1,0,0	Resuming the download in progress.
	+UFOTASTAT: 0,1,11	Download in progress.

After pausing the download of the delta package with AT+UFOTA=1, resume the download with AT+UFOTA=2 even after the module has been turned off and then on again or reboot.

For the complete description of +UFOTA AT command, see the SARA-R4 AT commands manual [\[1\]](#).

2.4 uFOTA configuration

 This section is not applicable to SARA-R410M, SARA-R412M, SARA-R422-00B, SARA-R422S-00B, and SARA-R422M8S products.

Through AT+UFOTACONFIG and AT+UFOTAACK, the host can make multiple choices about the management of uFOTA.

By default, when the uFOTA server initiates a FW update campaign on a device, the process of downloading and delta installation take place without the host being able to intervene. The host can only cancel, pause, or resume the download by the AT+UFOTA command.

AT+UFOTACONFIG allows the following modes to manage the delta download and installation process:

- Download only
- Wait for ack
- uFOTA disabled

The AT+UFOTACONFIG command also allows the configuration of HTTP send and HTTP receive timeouts that will be used during the FW download.

2.4.1 Download only

When this mode is set, the device only performs the delta download and does not automatically install it at the end of the download. Then the host can install it using the AT+UFWINSTALL command.

Command	Response	Description
AT+UFOTACONFIG=721,1,255,2,5	OK	Set the mode to "Download only". Moreover, the HTTP send and HTTP receive timeout timers have been configured to 2 and 5 minutes, respectively.
<FOTA campaign starts>		The uFOTA server triggers the FW upgrade.
	+UFOTASTAT: 1,0,0	The download is triggered.
	+UFOTASTAT: 0,1,30	Download in progress. 30% downloaded.
	+UFOTASTAT: 2,2,100	100% downloaded. The download is complete and successful.
AT+UFWINSTALL	OK	The device reboots and installs delta

2.4.2 Wait for ack


When this mode is set, an URC informs that the uFOTA server is requesting a FW update and is waiting for approval or rejection from the host.

2.4.2.1 Approve the FW update

Command	Response	Description
AT+UFOTACONFIG=721,2,255	OK	Set the mode to "Wait for ack".
<FOTA campaign starts>		The uFOTA server triggers the FW upgrade.
	+UFOTASTAT: 0,3,0	There is a pending request from the uFOTA server to start the download (and subsequent automatic installation) of delta.
AT+UFOTAACK=30	OK	The host accepts the download of the delta and decides to start the download in 30 seconds.
	+UFOTASTAT: 1,0,0	30 seconds later, the download is triggered. Delta is downloaded and installed at the end of the download.

2.4.2.2 Reject the FW update

Command	Response	Description
AT+UFOTACONFIG=721,2,255	OK	Set the mode to "Wait for ack".
<FOTA campaign starts>		The uFOTA server triggers the FW upgrade.
	+UFOTASTAT: 0,3,0	There is a pending request from the uFOTA server to start the download (and subsequent automatic installation) of delta.
AT+UFOTAACK=0	OK	The host rejects the download of the delta.
	+UFOTASTAT: 2,3,100	The download is rejected by the host.

 If the host does not accept or reject within an hour, the device automatically accepts the FW update request and starts the download.

2.4.3 uFOTA disabled

When this mode is set, FW update is disabled. The device receives the FW update request from the uFOTA server, but automatically rejects it.

Command	Response	Description
AT+UFOTACONFIG=721,3,255	OK	Set the mode to "uFOTA disabled".
<FOTA campaign starts>		The uFOTA server triggers the FW upgrade.
	+UFOTASTAT: 1,0,0	The download is triggered.
	+UFOTASTAT: 2,3,100	The download is rejected by the device.


2.5 Firmware package installation

A firmware package (referred to as FOTA package) can consist of the following combinations:

1. Firmware update only
2. Carrier profile update only
3. Firmware and carrier profile update

After a FOTA package is successfully downloaded, the uFOTA server shall command the device to reboot and automatically complete the firmware update process.

The AT interface is not available during the firmware upgrade.

 On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422 the +UFWINSTALL URCs will be issued to indicate the progress of delta package installation.

Command	Response	Description
<Module reboot>		
	+UFWINSTALL: 1	Firmware installation started.
	+UFWINSTALL: 3	
	...	
	+UFWINSTALL: 92	
	+UFWINSTALL: 100	
	+UFWINSTALL: 128	Firmware installation completed. Once the last URC (+UFWINSTALL: 128) is received, the module reboots again to new firmware release.


 It is not possible to cancel a firmware update once in progress.

Table 3 reports the delta package update estimates.

Delta package size	Estimated OTA download times	FW installation / update time
3 kB – 6 MB ¹	LTE Cat NB1: up to 100 minutes LTE Cat M1: up to 10 minutes (depends on package size and signal strength)	<ul style="list-style-type: none"> • SARA-R410M / SARA-R412M: up to 21 minutes². • SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S: up to 35 minutes (with 10 MB delta). • SARA-R422x-01B-01 and LEXI-R422 product variants up to 3 minutes.

Table 3: Delta FOTA package update estimates

¹ Values are just guidelines and are fixed expected limits

² For SARA-R410M-02B-03 and SARA-R412M-02B-03 FW installation takes up to 23 minutes

2.6 Server registration lifetime (SRLT)


The SRLT is the time the module waits before connecting to the u-blox uFOTA server and checking the availability of new firmware. The factory-programmed value is 24 hours.

The SRLT value can be changed by the LwM2M server when the module registers and checks into the LwM2M server.

If the host application needs to prevent or reduce periodic connection (24 hours default lifetime) to the u-blox LwM2M server (SSID 721) and cannot shut down the LwM2M client with the +ULWM2M AT command at the boot-up, it is possible to either:

- Extend the lifetime value.
- Remove the uFOTA server from LwM2M client database (DB).

To extend the lifetime value, see section [2.6.1](#) and [2.6.2](#), or SARA-R4 / SARA-R5 series LwM2M object and commands application note [\[8\]](#), which also covers how to remove the uFOTA server from DB.

 It is only possible to extend or modify the lifetime value on SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R410M-52B-00, SARA-R410M-52B-01, SARA-R410M-52B-02, SARA-R412M-02B-00, SARA-R412M-02B-01, and SARA-R412M-02B-02. The uFOTA server cannot be removed from LwM2M client DB.

2.6.1 Server registration lifetime configuration

For the server registration lifetime (SRLT) configuration on SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R410M-52B-00, SARA-R410M-52B-01, SARA-R410M-52B-02, SARA-R412M-02B-00, SARA-R412M-02B-01, and SARA-R412M-02B-02, see section 2.6.2.

The host can change the SRLT value using the +ULWM2MWRITE AT command, which can configure the resource 1 of the corresponding LwM2M server object instance.

On the SARA-R4 “63B” product version, the Softbank profile (+UMNOPROF: 28) does not permit the lifetime value to be modified with AT commands. It is set to a default value of 1 week.

The +ULWM2MDEREG AT command can deregister the module from the LwM2M server, until a module reboot or a further call to +ULWM2MREG AT command. The host can use this to control when to perform an LwM2M registration.

As mandated by the LwM2M specification, a change to the lifetime value will trigger a registration update. Frequent changes to the lifetime value are not recommended and may result in higher than the expected data usage.

For production devices do not set an enabled static timer to any value less than the factory-programmed value, because that will result in frequent check-ins with the uFOTA server.

For testing, it is recommended to keep the timer value above 1200 s (20 minutes).

To modify the SRLT, the Object URI must be specified when modifying the server object. The table below reports the URI to select for each product and MNO profile.

Product	+UMNOPROF profile	Server Object URI <uri>	Description
SARA-R41	<mno>: 2, 3, 198, or 206	/1/721	Applicable to AT&T, Verizon, AT&T 2-4-12 and FirstNet
SARA-R41	<mno>: 20	N.A.	Not applicable to DoCoMo profile since u-blox server is already not present by default
SARA-R41	Others <mno>	/1/1	
SARA-R42	Any	/1/10	

The lifetime value is modified with following sequence:

Command	Response	Description
Check server lifetime value		
AT+ULWM2MREAD=<uri>	+ULWM2MREAD: {"bn":<uri>,"e":[{"n":"0","v":721},{"n":"1","v":<Lifetime value>}]	Confirm present lifetime value for server ID 721
Write server lifetime		
AT+ULWM2MWRITE="{\"bn\": \"<uri>\", \"e\": [{\"n\": \"1\", \"v\": 2592000}]}"	OK	Lifetime changed for <uri> as per table above. Set to suggested 30 days
Wait at least 40 s		
AT+CFUN=15	OK	Reboot to apply the new configuration
Confirm updated server lifetime value		
AT+ULWM2MREAD=<uri>	+ULWM2MREAD: {"bn":<uri>,"e":[{"n":"0","v":721},{"n":"1","v":2592000}]}	Confirm applied lifetime value to server ID 721

Upon deletion of the server instance or changing of the server lifetime value, the client will perform a registration update to the listed servers to notify them of the change. Registration update success is not mandatory for the change to apply.



The new configuration is stored in the NVM. The change can be reverted with any of the following:

- Re-bootstrap via the AT+ULWM2M=2 command
- Re-bootstrap via server command
- MNO profile change via the +UMNOPROF AT command


This example below shows how to set SRLT on standard Europe MNO (+UMNOPROF: 100).

Command	Response	Description
AT+ULWM2MREAD="/1/1"	+ULWM2MREAD: {"bn":"/1/1/", "e":[{"n":"0", "v":721}, {"n":"1", "v":86400}, {"n":"2", "v":10}, {"n":"3", "v":60}, {"n":"5", "v":86400}, {"n":"6", "bv":false}, {"n":"7", "sv": "UQ"}, {"n":"30000/1", "v":30}, {"n":"30000/0", "v":0}]} OK	Read LwM2M server object instance to confirm that resource 0 (short server id) is 721, which is for the u-blox FOTA server, and the present lifetime value.
AT+ULWM2MWRITE="{\"bn\":\"/1/1/\", \"e\" : [{"n\":\"1\", \"v\":604800}]}"	OK	Write new timer to this instance with 604800 s (1 week). Setting the timer will trigger a check-in to the LwM2M server.
		Wait at least 40 s.
AT+CFUN=15	OK	Reboot to apply new configuration.
AT+ULWM2MREAD="/1/1"	+ULWM2MREAD: {"bn":"/1/1/", "e":[{"n":"0", "v":721}, {"n":"1", "v":604800}, {"n":"2", "v":10}, {"n":"3", "v":60}, {"n":"5", "v":86400}, {"n":"6", "bv":false}, {"n":"7", "sv": "UQ"}, {"n":"30000/1", "v":30}, {"n":"30000/0", "v":0}]} OK	Confirm applied lifetime value to server ID 721.

The +ULWM2MDEREG AT command combined with the +ULWM2MREG AT command is an alternative option to using the lifetime value for the host to control when a check-in is desired.

-  If the +ULWM2MDEREG AT command is issued, then reset or reboot the module before performing a registration again.
-  On SARA-R4 "63" product version, for the NTT DoCoMo MNO profile (+UMNOPROF: 20), <op_code>=3 and 4 of the +ULWM2M AT command are used to disable and enable communication with the NTT DoCoMo LwM2M server.

2.6.2 Server registration lifetime configuration by +UFOTACONF

-  The SRLT configuration by the +UFOTACONF AT command is not supported by SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 / SARA-R4 "63B" / "73B" / "83B" product versions or by SARA-R410M-02B-00, SARA-R410M-02B-03 / SARA-R412M-02B-03 / SARA-R410M-02B-04 / SARA-R412M-02B-04 product versions.

The host can change the SRLT value using the +UFOTACONF AT command, and there is the option of disabling it completely.

Setting +UFOTACONF to any value less than the factory-programmed value is only intended for testing and demonstrations purposes.

For production devices, do not set an enabled static timer to any value less than the factory-programmed value, to prevent frequent check-ins with the uFOTA server.

For testing, it is recommended to keep the timer value above 1200 s (20 minutes).

To disable the lifetime setting, use the `AT+UFOTACONF=2,-1` command and not `AT+UFOTACONF=1,0`. Disabling the lifetime triggers a check-in within 60 s, after the command is sent.

The example below shows how setting SRLT with same value as previous triggers a check-in with uFOTA server.

Command	Response	Description
<code>AT+UFOTACONF=2</code>	<code>+UFOTACONF: 2,86400</code> <code>OK</code>	Reads the present timer value, which is 86400 s.
<code>AT+UFOTACONF=2,86400</code>	<code>OK</code>	Set the timer value to the same previous 86400 s. Within the next 60 s, the module will attempt to check in with LwM2M server and again when the timer expires after 86400 s. The key point in this example, is that issuing this command triggers an immediate check to the uFOTA server.

The example below shows how setting SRLT triggers a check-in with uFOTA server.


Command	Response	Description
<code>AT+UFOTACONF=2</code>	<code>+UFOTACONF: 2,86400</code> <code>OK</code>	Reads the present timer value, which is 86400 s.
<code>AT+UFOTACONF=2,31536000</code>	<code>OK</code>	The new timer value is set to 31536000 s (1 year). The module will now immediately attempt to check in with LwM2M server, and again when the timer expires after 31536000 s.

2.7 Application design for FOTA compliance


The host must behave correctly when the uFOTA process has started, as it might disturb the download or installation process. This section describes what the application must do and not do for a correct uFOTA operation.

2.7.1 Enable URCs to support uFOTA update

2.7.1.1 uFOTA update URCs


 For more details on the uFOTA update URCs on SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R410M-52B-00, SARA-R410M-52B-01, SARA-R410M-52B-02, SARA-R412M-02B-00, SARA-R412M-02B-01, and SARA-R412M-02B-02, see section [2.7.1.2](#).

The `+ULWM2MSTAT` URC provides the status of the LwM2M client. The download and update status are reported by the `+UFOTASTAT` URC. The FOTA package installation status is reported by `+UFWINSTALL` URC. All these URCs can be monitored by the host application.

 The `+ULWM2MSTAT`, `+UFOTASTAT` and `+UFWINSTALL` URCs (where supported) must be explicitly enabled by the user before launching the uFOTA process in SARA-R410M-02B, SARA-R412M-02B, SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422.

SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422

Below is an example what may be observed in a delta package update from the uFOTA server.


Command	Response	Description
AT+ULWM2MSTAT=1	OK	Enable the Lwm2M status URC. It is disabled by default.
AT+UFOTASTAT=1	OK	Enable the download and update URC. It is disabled by default.
AT+UFWINSTALL=,,1	OK	Enable installation URCs. They are disabled by factory-programmed configuration.
	+UFOTASTAT: 3,1,0	Lwm2M client starts. Typically seen when either the device boots up or when client is stopped then started by the host.
	+ULWM2MSTAT: 1,721,3	Lwm2M client registers with the uFOTA server which has ID 721.
<FOTA campaign starts>		The FOTA server triggers the FW upgrade.
	+UFOTASTAT: 1,0,0	The uFOTA download is triggered.
	+UFOTASTAT: 0,1,30	Download in progress. 30% downloaded.  For small packages such as the "99" labeled package it may not report intermediate download progress with +UFOTASTAT <event> parameter 0, but it will skip to <event> parameter 2.
...	+UFOTASTAT: 0,1,65	65% downloaded.
	+UFOTASTAT: 2,2,100	100% downloaded. Download is complete and successful.
	+ULWM2MSTAT: 3,721,/5/0/3	Notification to the server of FW related resource change.
	...	The uFOTA server sends a command to the module to reboot and install.
<Module reboot>		
<New firmware installation>		New firmware installation, for more details on the process duration, see section 2.5.
<Wait>	+UFWINSTALL: 1 +UFWINSTALL: 3 ... +UFWINSTALL: 92 +UFWINSTALL: 100 +UFWINSTALL: 128	Firmware installation started. Firmware installation completed. Once the last URC (+UFWINSTALL: 128) is received, the module reboots again to new firmware release.
<Module reboot>		
AT	OK	Send "AT" to see if the module is ready yet. The final result code is returned: the module has rebooted.



For further details on the Lwm2M firmware update object resources, visit http://www.openmobilealliance.org/tech/profiles/LWM2M_Firmware_Update-v1_0_3.xml.

After the firmware update, re-enable +UFOTASTAT and +ULWM2MSTAT URCs at the module reboot.

SARA-R410M / SARA-R412M


Below is an example of what may be observed in a delta package update from the uFOTA server.

Command	Response	Description
AT+ULWM2MSTAT=1	OK	Enable the Lwm2M status URC. It is disabled by default.  On SARA-R4 "63B" / "73B" / "83B" product versions this step is not mandatory: the Lwm2M status URC is enabled by factory-programmed configuration.
AT+UFOTASTAT=1	OK	Enable the download and update URC. It is disabled by default.

Command	Response	Description
		 On SARA-R4 "63B" / "73B" / "83B" product versions this step is not mandatory: the FOTA status URC is enabled by factory-programmed configuration.
	+UFOTASTAT: 3,1,0	LwM2M client start. Typically seen when either the device boots up or when client is stopped then started by the host.
	+ULWM2MSTAT: 1,721,3	LwM2M client registers with the uFOTA server where in this example it has ID 721.
<FOTA campaign starts>		The FOTA server triggers the FW upgrade.
	+UFOTASTAT: 1,0,0	The uFOTA download is triggered.
	+UFOTASTAT: 0,1,30	Download in progress. 30% downloaded.
		 For small packages such as the "99" labeled package it may not report intermediate download progress with +UFOTASTAT <event> parameter 0, but it will skip to <event> parameter 2.
...	+UFOTASTAT: 0,1,65	65% downloaded.
	+UFOTASTAT: 2,2,100	100% downloaded. Download is complete and successful.
	+ULWM2MSTAT: 3,721,/5/0/3	Notification to the server of FW related resource change.
	...	The uFOTA server sends a command to the module to reboot and install.
<Module reboot>		
<New firmware installation>		New firmware installation, for more details on the process duration, see section 2.5.
<Module reboot>		
AT	OK	Send "AT" to see if the module is ready yet. The final result code is returned: the module has rebooted.

For further details on the LwM2M firmware update object resources, visit http://www.openmobilealliance.org/tech/profiles/LWM2M_Firmware_Update-v1_0_3.xml.

2.7.1.2 Legacy uFOTA update URC

 For more details on uFOTA update URCs on SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S, LEXI-R422, SARA-R410M-63B, SARA-R410M-73B, SARA-R410M-83B, SARA-R410M-02B-03, SARA-R412M-02B-03, SARA-R410M-02B-04, and SARA-R412M-02B-04 see section 2.7.1.1.


The +ULWM2MSTAT URC informs the host how the LwM2M client is handling the uFOTA operation. Enabling this URC will allow the host to know if there is new firmware that the module will start to download. The host can cancel the download at this point if required.

When the module has finished the download, the URC will inform the host that it is about to reset the module and start the installation process. The host cannot cancel the installation at this point.

Command	Response	Description
AT+ULWM2MSTAT=1	OK	Enable the LwM2M FOTA URC.
...	sometime later....
	+ULWM2MSTAT: 0,0	The uFOTA download is triggered
	+ULWM2MSTAT: 1,5	5% downloaded
	+ULWM2MSTAT: 1,35	35% downloaded
	+ULWM2MSTAT: 1,78	78% downloaded
	+ULWM2MSTAT: 1,98	98% downloaded
	+ULWM2MSTAT: 2,100	100% downloaded

Command	Response	Description
	...	
	...	The uFOTA server sends a command to the module to reboot and install.
<Module reboot>		
<New firmware installation>		
		New firmware installation, for more details on the process duration, see section 2.5.
<Module reboot>		
AT	OK	Send "AT" to see if the module is ready yet. The final result code is returned: the module has rebooted.

2.7.2 TCP window size


 This section is not applicable to SARA-R4 "00B", "52B", "63B", "73B", "83B" product versions, or SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R410M-02B-03, SARA-R412M-02B-00, SARA-R412M-02B-01, SARA-R412M-02B-02 and SARA-R412M-02B-03 product versions.

When running a uFOTA test campaign (for more details, see section 2.8) or for FOTA over LwM2M, such as with Verizon, if the delta package download reach 100% as indicated by a network error code: +UFOTASTAT: 2, 3, 102, then the TCP window size may need to be adjusted and tuned to optimize the download data flow. With tuning satisfied in the test campaign, as an extra precaution for deployed updates, it is good for the host to be able to adjust in the field if needed.

The table below shows how to read and set TCP receive window size for uFOTA.

Command	Response	Description
AT+UFOTACONF=4	+UFOTACONF: 4,8192 OK	Read TCP receive window size for uFOTA / FOTA download
AT+UFOTACONF=4,4096	OK	Change and reduce TCP receive window size for uFOTA / FOTA download to 4096 bytes and try update campaign again.

2.7.3 Module reboot per uFOTA server request

 This section is applicable to SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-52B-00, SARA-R410M-52B-01, SARA-R412M-02B-00, SARA-R412M-02B-01.

Perform a uFOTA server triggered reboot before to download the FW delta package. Upon checking-in with the uFOTA server when the lifetime expires, if there is a valid update package available, then the uFOTA server will then send a command to reboot the module. After the reboot, the module will check in again with the uFOTA server to proceed with the download of a configuration file (~4 kB), reboot again, then proceed with the delta packages.


2.7.4 Firmware download

Depending on the delta package file size, the download of new firmware can be quite intensive with the amount of data being transferred. When the host device receives the +ULWM2MSTAT: 2,100 or +UFOTASTAT: 2,2,100 (according to the product version) URC the download is complete.

 Ensure the host application closes all open sockets when or before the download is completed.

Some AT commands may affect the download and should be blocked. See section 7 for a list of commands that are blocked or forbidden.


2.7.5 Firmware installation

 On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422, the +UFWINSTALL AT command enables the +UFWINSTALL URC to specify the serial interface where this URC is reported. For the complete description of the +UFWINSTALL AT command, see the SARA-R4 AT commands manual [1].



When the LwM2M client receives the execute operation on the update resource, the module will reset to apply the update. At this stage the host cannot cancel the upgrade.

During the update process, if the delta package does not change NVM setting for GPIOs (see Table 8), then a GPIO pin configured for “Module status indication” (GPIO pins 1 to 6 are available) can be used as an indicator when the device is in idle / update mode (low), and when the device has completed its update (returns high after boot-up). This method would be combined with observation of receiving the URC (+ULWM2MSTAT: 2,100 or +UFOTASTAT: 2,2,100) to track the update states. Alternatively, monitor the module’s UART RX pin, which is low when AT interface is unavailable during the update and returns high when booting up after the update.

If the host cannot monitor a GPIO pin, then the host needs to understand a firmware upgrade is in progress and should be patient for the AT interface to come back after it has upgraded. Without HW indication, after the host receives the +ULWM2MSTAT:2,100 or +UFOTASTAT: 2,2,100 URC, it should then move into an AT interface check loop which regularly checks for when it is available again.

 On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422 during the installation operations, the +UFWINSTALL URCs display the progress and the operation result on the serial interface set via the +UFWINSTALL AT command. The progression of the installation is incremental, but the increment can be different than 1. The last URC with a value greater than 100 indicates the update operation result (e.g., 128 means operation completed with success). For more details about firmware install final result codes, see the SARA-R4 series AT commands manual [1].

Depending on the size of the update package, the installation may take a significant amount of time. The host device should use the state information to avoid unnecessary reset of the module during the update.

-  Do not remove the power supply or reset the module during the installation procedure. The module will reboot automatically at the end of update procedure.
-  If the firmware update includes a boot code update, then an interruption during the update process of this code section can cause unrecoverable image corruption of the module . Types of interruptions include:
 - Removing or loss of power supply to the module
 - Unstable power supply to the module
 - Host application applies an external reset to module
 - Turning off the module with PWR_ON or RESET_N pin

If the module does not reset within 180 s from the time is received the download complete URC (+ULWM2MSTAT: 2,100 or +UFOTASTAT: 2,2,100) the host device may reset the module to trigger the installation. This manual trigger of the installation by reset is to provide a failsafe to cover the unlikelihood of the server / network not being able to deliver the execute command to initiate the firmware installation.

2.7.6 Cancelling the uFOTA process

The host can only cancel the uFOTA download (`AT+ULWM2M=0` or `AT+UFOTA=0`) of the new firmware while it is receiving the `+ULWM2MSTAT: 1,xx` or `+UFOTASTAT: 0,1,xx` URCs. The host cannot cancel the upgrade process once the module has downloaded the firmware.

2.7.7 Actions after firmware installation

Once the new firmware has been installed, the module will reboot and re-register with the network and the LwM2M client will connect with the server(s). The LwM2M client notifies a change in the observed state and update result resources of the firmware update object.

It is good practice for the host to send a message to the application cloud service to state the upgrade has succeeded. The message should include the new firmware version.


To read the updated firmware or carrier profile version, wait for the device to fully boot up, then the host application can query the module for the firmware version by `ATI` (applicable only to SARA-R410M and SARA-R412M), `ATI9` or `+CGMR AT` commands as shown in the following examples.


Example of a method to read firmware version:

Command	Response	Description
<code>ATI9</code>	<code>I0.0.00.00.05.12,A.02.19</code> <code>OK</code>	Check for modem and application version with <code>ATI9</code>


Example sequence to read carrier profile version:

Command	Response	Description
<code>AT+UMNOPROF=,1</code>	<code>OK</code>	Issue the test command to read out carrier profile version.
<code>AT+UMNOPROF=?</code>	<code>+UMNOPROF:</code> <code>0: SW default</code> <code>1: SIM ICCID select</code> <code>6: CT 5.0</code> <code>4: Telstra 5.0</code> <code>21: TELUS 5.1</code> <code>5: TMO 5.2</code> <code>3: Verizon 5.0</code> <code>2: ATT 5.0</code> <code>OK</code>	Read out carrier profile versions

 On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422, after the module boot to the new firmware, issue a reboot with the `AT+CFUN=16` command before setting any configuration.

 On SARA-R422-01B, SARA-R422S-01B, SARA-R422M10S-01B and LEXI-R422, after the first reboot, the `AT+ULWM2M=0` command must be issued in addition to other configuration commands required by the module. After a subsequent reboot (`AT+CFUN=16`) to apply the settings configured, the module is ready with the LWM2M client enabled which permits to conclude the uFOTA campaign properly.

2.7.7.1 Performing EFS backup after flashing FW update with delta package

 The EFS / Backup & Restore feature is not supported by SARA-R4 “52” / “63” / “73” / “83” product versions or by SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R412M-02B-00, SARA-R412M-02B-01, and SARA-R412M-02B-02.

If a firmware with the Backup & Restore feature is being updated via FOTA / uFOTA with a delta package, then after the successful update the host needs to perform a backup with the +UBKUPDATA AT command before testing or relying on this the Restore feature.

For more details on +UBKUPDATA, see the SARA-R4 series AT commands manual [1] and SARA-R4 series application development guide [6].

2.8 uFOTA campaign

To start the uFOTA upgrade process, a “campaign” must be requested for the modules to be updated. Send the request to the nearest u-blox office or sales representative.

2.8.1 Requirements

To specify a campaign the following information is required:

- The product type
- The starting and destination FW version (modem and application)
- The IMEI list of the devices participating to the campaign
- The location area
- The requested schedule (date, time, duration) for the campaign
- Transfer over HTTPS or Block-Wise CoAP over DTLS (applicable to SARA-R4 “63” / “73” / “83” product versions)

2.8.2 Approval

The campaign request will need to be approved by u-blox before the campaign starts. The module’s host should be approved to make sure it is able to cope with the LwM2M upgrade process and a test campaign should be executed before the final campaign happens.

2.8.3 Application design review

Before starting the campaign, a design review of the application shall be performed by u-blox support:

- The application shall not reset the module during the FOTA process
- The application shall have the ultimate decision on performing the FOTA update
- The application shall be aware of the duration of FOTA process
- The application shall disable eDRX during the FOTA process
- At least from one device it should be possible to get an AT log and/or trace log for debugging

2.8.4 Test campaign

Before all the modules in the campaign will be updated via uFOTA, it is strongly suggested to perform a test campaign first. This small trial run would involve a few of the modules, up to 5, from the full list of modules.

This test campaign will verify the host is working for uFOTA and that the network/deployment is adequate for the uFOTA download & update.

2.8.5 Final campaign

If the test campaign is successful, u-blox will provide a report back to the customer. If the user is satisfied with the test campaign, the final campaign can start.

The u-blox service team will monitor the uFOTA progress and provide a report once finished.

2.9 uFOTA server access


2.9.1 u-blox uFOTA server

On certain product versions, for specific MNO profiles, the LwM2M client or uFOTA server is not enabled by default. Thus, after setting and activating the MNO profile, the LwM2M client may need to be enabled. Also, the uFOTA server may need to be enabled if the host device is to support uFOTA FW delta updates. To see if the LwM2M client and uFOTA is enabled by default for a specific MNO profile see the “Mobile Network Operator profiles” section in the appendix in the SARA-R4 series AT commands manual [1]. To enable LwM2M client or uFOTA server, then see SARA-R4 / SARA-R5 series LwM2M object and commands application note [8].


SARA-R410M / SARA-R412M


If the MNO profile supports the u-blox uFOTA server, then it is necessary that the network provides access to the following uFOTA LwM2M and download server domain names:


- LwM2M server: lwm2m-fota.services.u-blox.com (port 5684)
- FOTA package download server: ucsphhttpcontent.services.u-blox.com (port 80)

 On SARA-R410M-73B and SARA-R410M-83B, the LwM2M server domain name is:

- LwM2M server: ucsplwm2m.services.u-blox.com (port 5684)

 On SARA-R410M-63B, on the NTT DoCoMo MNO profile (+UMNOPROFILE: 20), the u-blox LwM2M server is not supported. The LwM2M FOTA is performed with the NTT DoCoMo LwM2M server.

 On SARA-R410M-63B-01 the default LwM2M binding mode on the module’s client is different than that of the LwM2M server and this mismatch prevents the client to register with the server and its support for FOTA. For more details on how to correct this by changing the binding mode on the module’s LwM2M client to support the NTT DoCoMo FOTA feature, see the SARA-R4 series application development guide [6].

 By MNO requirement the lifetime value with NTT DoCoMo LwM2M server is set to 604800 s (7 days).

SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422

In SARA-R422S-01B and SARA-R422M10S, the LwM2M and download server domain names are:

- LwM2M server: ucsplwm2m.services.u-blox.com (port 5684) and lwm2m-fota.services.u-blox.com (port 5684), depending on whether secure data suite features are enabled
- FOTA package download server: ucsphhttpcontent.services.u-blox.com (port 80)

In SARA-R422S-00B and SARA-R422M8S, the LwM2M and download server domain names are:

- LwM2M server: ucsplwm2m.services.u-blox.com (port 5684)
- FOTA package download server: ucsphhttpcontent.services.u-blox.com (port 80)

In SARA-R422, the LwM2M and download server domain names are:

- LwM2M server: lwm2m-fota.services.u-blox.com (port 5684)
- FOTA package download server: ucsphhttpcontent.services.u-blox.com (port 80)

2.9.2 Softbank MNO profile

On SARA-R410M-63B, for the Softbank MNO profile 28 (+UMNOPROFILE: 28), the u-blox LwM2M and download server use a fixed IP address. Access to this server is automatically handled between


the device and the network where it is routed over a dedicated PDP context #2, which cannot be viewed or edited by the host application.

All LwM2M communication and FOTA download is routed over PDP context #2.

The LwM2M and download server domain names are:

- LwM2M server: ucsplwm2msb.services.u-blox.com (port 5684)
- FOTA package download server: ucspscontentsb.services.u-blox.com (port 80)

2.9.3 Verizon MNO profile

 This section on setting the APN is applicable to SARA-R410M “52B” product version and SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02.

This section addresses configuring the APN for uFOTA on Verizon private networks or with the use of static SIMs.

LwM2M clients routes all uFOTA related traffic through <cid>=3 for the Verizon Wireless network profile (+UMNOPROF: 3). The default APN for uFOTA is “vzwinternet” for <cid>=3 and can be checked by the +CGDCONT read command. If the Verizon network provides an APN different than “vzwinternet” on <cid>=1, the same APN must be used in <cid>=3. To configure the APN name, the host application can use the +CGDCONT AT command.

For example, if the APN pushed down by the network for <cid>=1 is “so01.vzwstatic”, then the host must re-configure the <cid>=3 APN from “vzwinternet” to “so01.vzwstatic” using the command `AT+CGDCONT=3,"IP","so01.vzwstatic"`.

2.9.4 2G PDP context management


 This section applies to SARA-R412M.


Unlike LTE Cat M1 or NB-IoT, on 2G RAT the active PDP context cannot be shared simultaneously between LwM2M and data services available to the host. If the PDP context is activated by the host via the +CGACT AT command, then the LwM2M client cannot perform a data call to reach the u-blox uFOTA server.

The LwM2M client will activate the PDP context when it performs the check-in and will stay up if there is an update to be downloaded.

A uFOTA server check-in is performed by the LwM2M client when either:

- Lifetimer expires
- Lifetimer value is set to new or same value as previously configured
- Host triggers check-in with +ULWM2MREG (if command supported)

 For SARA-R412M-02B-00, SARA-R412M-02B-01 and SARA-R412M-02B-02, using the +UFOTACONF AT command to set the lifetime value will trigger a check-in within 60 s after sending the command. This check-in will happen regardless of the timer value being set. For SARA-R412M-02B-03, SARA-R412M-02B-04 to set the lifetime value, use +ULWM2MWRITE AT command.


 For SARA-R412M-02B-03 and SARA-R412M-02B-04, use the +ULWM2MREG AT command to trigger a check-in within 60 s after sending the command.


The following are suggested options to manage the 2G PDP context between the host and the LwM2M client for uFOTA purposes.

Triggering a manual check-in

If the host expects an update package from the uFOTA server because the device owner has set up a campaign to perform an update, then when the PDP context is down, use the +UFOTACONF / +ULWM2MREG AT commands to trigger the FOTA download.

To find out if there is an update package, the host can optionally use +UFOTACONF / +ULWM2MREG AT commands to trigger a periodic check-in as an alternative to ensuring the PDP context is not host activated when the lifetime should expire.

 Upon check-in with the server, if there is a package available from the uFOTA server, then the uFOTA update process notifies the host with related URCs, and the PDP context activation is not suspended until the uFOTA operation is complete.

 If no package is available, then depending on the product type the PDP context becomes activated when either +UFOTACONF AT command sets the lifetime value or when registration is forced with +ULWM2MREG. The PDP context will then later deactivate when the uFOTA server registration is complete and the server does not indicate any package available. After deactivation, there are no uFOTA URCs.

Allowing for check-in when lifetime expires upon boot-up

On every boot, after 10 s check if the PDP context is active via the +CGDCONT AT command. If the PDP context is up, then the LwM2M client checks in with uFOTA server because the lifetime has expired. In this scenario, wait additional 10 s or until PDP context is deactivated before the host attempt to activate PDP context.


If the host opts to manage the check-ins purely with the +UFOTACONF / +ULWM2MREG AT commands and does not care about blocking this potential lifetime expiration check-in, then the wait is not necessary.

Devices that do not power-down

For devices that do not power down and the host keeps the PDP context up most of the time, the host can either:

- Find a window to bring down the PDP context trigger periodic check-in with the +UFOTACONF AT command.
- Keep track of the lifetime, then near timer expiration if the host had activated the PDP context beforehand, it should deactivate the PDP context to allow LwM2M to check-in when lifetime expires.


3 Firmware download via FTP

 The embedded FTP feature is not supported by SARA-R422.

The firmware for the SARA-R4 series modules can be downloaded using standard FTP. This section goes through the AT commands required to download a firmware update from an FTP server.

The host needs to first configure an FTP profile with the server parameters to start the FW download.


Once the firmware update is downloaded, install the new firmware using the +UFWINSTALL AT command; for more details, see section 6.

 On SARA-R410M and SARA-R412M if FTP download commands are issued while the u-blox LwM2M client is downloading a firmware package, an error result code will be returned. For more details, see the section 7.

3.1 FTP service configuration +UFTP

Before starting a firmware download via FTP, the host needs to configure the FTP profile with the FTP server and other parameters.

The +UFTP AT command sets up a parameter for the FTP service or resets a parameter to its factory-programmed value. The set/reset command needs to be executed for each single <op_code>. The read command returns the current setting of all the FTP parameters, one per line (i.e., the FTP profile). The FTP parameter values set with this command are all volatile (not stored in non-volatile memory).

 If the set command is issued without <param1> parameter, the corresponding <op_code> parameter is reset to the default value.

3.1.1 Syntax

Type	Syntax	Response	Example
Generic syntax			
	AT+UFTP=<op_code>[,<param1>[,<param2>]]	OK	AT+UFTP=7,21
FTP server IP address			
	AT+UFTP=0,<ip address>	OK	AT+UFTP=0,"192.168.1.0"
FTP server name			
	AT+UFTP=1,<server name>	OK	AT+UFTP=1,"ftp.server.com"
Username			
	AT+UFTP=2,<username>	OK	AT+UFTP=2,"username"
Password			
	AT+UFTP=3,<password>	OK	AT+UFTP=3,"password"

For a complete description of the FTP profile configuration, see the SARA-R4 series AT commands manual [1].

3.2 FTP command +UFTPC

The `AT+UFTPC=100,<remote_filename>[,<fw_download_status>]` command triggers, cancels or resumes a firmware package download from an FTP server. The host must be properly configured as an FTP client and must log in successfully before starting the download. Once the host cancels a download session, it cannot be resumed, and the host shall need to start a new download session.

The resume download feature enables the host to continue a firmware package download near the point at which it was stopped even if due to a power cycle. When an interruption happens, all of the downloaded data may not have yet been stored. Therefore, when the resume download starts, the resume point (the `<stored_byte>` in the status URC) may be smaller than that displayed in the last known status URC of the interrupted session.

- On SARA-R410M / SARA-R412M:
- When the start download command is issued, it takes about 16 s to get ready and display the “OK” final result code.
 - When the cancel download command is issued, it may take about 20 to 50 s, depending on the network condition.
 - The `<remote_file_name>` parameter must match in all commands and it is case sensitive even when compared against the file name on server.
 - If `<op_code>=100` (retrieves the FOTA update file), the `<remote_filename>` parameter cannot include the file path and its maximum length is 64 characters.

If the host cancels a download session, the host should wait for the `+UUFTPCR: 100,0` URC before start a new download session.

3.2.1 Syntax

Type	Syntax	Response	Example
Start download			
	<code>AT+UFTPC=100,<remote_file_name></code>	OK	<code>AT+UFTPC=100,"/ublox-ftp/fota/R410_L0.0.02_M.bin"</code>
Suspend download			
	<code>AT+UFTPC=100,<remote_file_name>,0</code>	OK	<code>AT+UFTPC=100,"/ublox-ftp/fota/R410_L0.0.02_M.bin",0</code>
Resume download			
	<code>AT+UFTPC=100,<remote_file_name>,1</code>	OK	<code>AT+UFTPC=100,"/ublox-ftp/fota/R410_L0.0.02_M.bin",1</code>

3.3 FTP download operation URCs

3.3.1 SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 FTP download operation URC

The `+UUFTPCR` URC provides the final result of the download operation. In case of success the URC provides the MD5 checksum of the file downloaded.

3.3.1.1 Syntax

Type	Syntax	Response	Example
Result		<code>+UUFTPCR: 100,<ftp_result>[,<md5_sum>]</code>	<code>+UUFTPCR: 100,1,"960d9502ed3d71505b681e8aa19f03c8"</code>

3.3.1.2 Defined values

Parameter	Type	Description
<ftp_result>	Number	Operation result: <ul style="list-style-type: none"> • 0: fail • 1: success
<md5_sum>	Number	MD5 checksum of the FOTA update file downloaded

3.3.2 SARA-R410M / SARA-R412M FTP download operation URCs

While the firmware object is being downloaded from the FTP server, URCs provide the status and the result of the file transfer.

The status URC will be displayed during the firmware package download and the result URC will be displayed upon the completion of the transfer. "+UUFTPCR: 100,1" indicates that the <total_byte> are stored completely and successfully.

3.3.2.1 Syntax

Type	Syntax	Response	Example
Status		+UUFTPCR: 100,<stored_byte> / <total_byte>	+UUFTPCR: 100,202752 / 1103692
Result		+UUFTPCR: 100,<ftp_result>	+UUFTPCR: 100,1

3.3.2.2 Defined values

Parameter	Type	Description
<ftp_result>	Number	Operation result: <ul style="list-style-type: none"> • 0: fail • 1: success
<stored_byte>	Number	Positive number and it represents stored byte in byte
<total_byte>	Number	Positive number and it represents total byte of the binary in byte



3.4 Example

SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422

Command	Response	Description
AT+UFTP=1,"ftp.firmware.com"	OK	Configure server name
AT+UFTP=2,"username"	OK	Set username
AT+UFTP=3,"password"	OK	Set password
AT+UFTP=6,1	OK	Set passive mode
AT+UFTPC=1	+UUFTPCR: 1,1 OK	Log in to FTP
AT+UFTPC=100,"/ublox-ftp/fota/FWupdate_4489_HSFf.udp"	OK	Start FTP download
	+UUFTPCR: 100,1,"960d9502ed3d71505b681e8aa19f03c8"	URC reports file transfer complete

Suspend and Resume download over SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422

Command	Response	Description
AT+UFTP=1,"ftp.firmware.com"	OK	Configure server name
AT+UFTP=2,"username"	OK	Set username
AT+UFTP=3,"password"	OK	Set password
AT+UFTP=6,1	OK	Set passive mode
AT+UFTPC=1	+UUFTPCR: 1,1 OK	Log in to FTP
AT+UFTPC=100,"/ublox-ftp/fo ta/FWupdate_4489_HSFf.udp"	OK	Start FTP download
AT+UFTPC=100,"/ublox-ftp/fo ta/FWupdate_4489_HSFf.udp", 0	+UUFTPCR: 100,0 0	Suspend the download
AT+UFTPC=100,"/ublox-ftp/fo ta/FWupdate_4489_HSFf.udp", 0	OK	Resume the download
	+UUFTPCR: 100,1,"960d9502ed3d71505b681e8aa 19f03c8"	URC reports file transfer complete

-  It is necessary to wait for the +UUFTPCR: 100,0 URC to ensure that the suspend has been done correctly and then the download can be resumed.
-  The download of the FW “.udp” packet is done in chunks of about 200kB. To progress with the download, the suspend action shall be executed after the time required to download at least a chunk of data. Otherwise, the download process would not proceed.

SARA-R410M / SARA-R412M

Command	Response	Description
AT+UFTP=1,"ftp.firmware.com"	OK	Configure server name
AT+UFTP=2,"username"	OK	Set username
AT+UFTP=3,"password"	OK	Set password
AT+UFTP=4,"FOTA-account"	OK	Set account
AT+UFTP=6,1	OK	Set passive mode
AT+UFTPC=1	+UUFTPCR: 1,1 OK	Log in to FTP
AT+UFTPC=100,"/ublox- ftp/fota/R410_L0.0.02_M.bin"	OK	Start FTP download
	+UUFTPCR: 100,2048 / 1103692	URC file transfer status update
	+UUFTPCR: 100,102400 / 1103692	
	...	
	+UUFTPCR: 100,1009664 / 1103692	
	+UUFTPCR: 100,1	URC reports file transfer complete

3.5 Error result codes

If a download session returns “+UUFTPCR: 100,0”, the host can retrieve the error reason using the +UFTPER AT command. It retrieves the last +UFTPC operation result. See the definition of the <error_class> and <error_code> parameters in the “FTP class error codes” section of the SARA-R4 series AT commands manual [1].

In the example below, the host canceled a download session.

Type	Syntax	Response	Example
Action	AT+UFTPER	+UFTPER:<error_class>,<error_code> OK	+UFTPER: 8,40 OK

4 Firmware download via HTTP

 Firmware download via HTTP is not supported by SARA-R410M / SARA-R412M / SARA-R422.


This section goes through the AT commands required to download a firmware update from a server via HTTP.


The host needs to configure a HTTP profile with the server parameters before starting the FW download. Once the firmware update is downloaded, install the new firmware using the +UFWINSTALL AT command. For more details, see section 6.

4.1 HTTP profile configuration +UHTTP

Before starting firmware download via HTTP, the host needs to configure the HTTP application profile parameters.

The +UHTTP AT command defines one or more HTTP profiles and configures their parameters. The set command needs to be executed for each single parameter. The HTTP parameter values set with this command are all volatile, i.e., not stored in non-volatile memory (NVM).

 It is not possible to read the current setting for all parameters of a given HTTP profile, but it is possible to read one parameter at a time by issuing the set command specifying the profile and the parameter code.

 It is possible to reset all parameters of a given HTTP profile to their factory-programmed values by issuing the set command with only the profile ID parameter.

4.1.1 Example

The following command sequence indicates the HTTP profile parameters required to start a successful firmware download; the selected HTTP profile identifier is 0.

Syntax	Response	Example
HTTP server IP address		
AT+UHTTP=<profile_id>,0,<server_IP_addr>	OK	AT+UHTTP=0,0,"192.168.1.0"
HTTP server name		
AT+UHTTP=<profile_id>,1,<server_name>	OK	AT+UHTTP=0,1,"server.com"
Username		
AT+UHTTP=<profile_id>,2,<username>	OK	AT+UHTTP=0,2,"username"
Password		
AT+UHTTP=<profile_id>,3,<password>	OK	AT+UHTTP=0,3,"password"

The following syntax reads a specific parameter of a HTTP profile and resets a given HTTP profile.

Syntax	Response	Example
Read HTTP server IP address		
AT+UHTTP=<profile_id>,0	+UHTTP: profile_id>,0, <server_IP_addr> OK	AT+UHTTP=0,0 +UHTTP: 0,0,"192.168.1.0" OK
HTTP reset all parameters		
AT+UHTTP=<profile_id>	OK	AT+UHTTP=0

For a complete description of the HTTP profile configuration, see the SARA-R4 series AT commands manual [1].

4.2 HTTP command +UHTTPC

The `AT+UHTTPC=<profile_id>,100,<path>` command triggers a firmware package download from a server via HTTP. When the file transfer is complete, the `+UUHTTPCR` URC reports the md5 checksum of the FOTA update file.

4.2.1 Example

Syntax	Response	Example
Download the update file		
<code>AT+UHTTPC=<profile_id>,100,<path></code>	OK	<code>AT+UHTTPC=0,100,"/test/plain/uploads/update_file.zip"</code>
Download success		
	<code>+UUHTTPCR: <profile_id> +UUHTTPCR: 0,100,1,200,"960d9502ed3d,100,1,<status_code>,<m 71505b681e8aa19f03c8" d5_sum></code>	
Download failure		
	<code>+UUHTTPCR: <profile_id> +UUHTTPCR: 0,100,0,0,100,0,0</code>	

4.3 Error result codes

If a download session returns “`+UUHTTPCR: 100,0`”, the host can retrieve the error reason using the `+UHTTPER` AT command. It retrieves the last `+UHTTPC` operation result for a given profile. For the definition of the `<error_class>` and `<error_code>` parameters, see the “HTTP class error codes” section of the SARA-R4 series AT commands manual [1].

In the example below, the operation failed due to server hostname lookup failure.

Type	Syntax	Response	Example
Action	<code>AT+UHTTPER=<profile_id></code>	<code>+UHTTPER: <profile_id>,<error_class>,<error_code></code> OK	<code>AT+UHTTPER=0</code> <code>+UHTTPER: 3,23</code> OK

5 Firmware download via AT (FOAT)

FOAT download provides tethered data transfer methods to perform firmware download over USB/UART interfaces with a host processor.

FOAT download does not support the resume feature. Therefore, the download must be re-started after any failure, external interrupt or timeout. The FOAT system is illustrated in [Figure 3](#).

Once the firmware update is downloaded, install the new firmware using the +UFWINSTALL AT command. For more details, see [section 6](#).

Two different AT commands can download the firmware package:

- +UFWUPD, which uses the Xmodem protocol,
- +UDWNFILE, which is used to manage the module file system

During a FOAT download, the PSM is held off from entering the low power state.

On SARA-R410M / SARA-R412M / SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422, if FOAT download commands are issued while the u-blox Lwm2m client is downloading a firmware package, an error result code will be returned. For more details, see the [section 7](#).

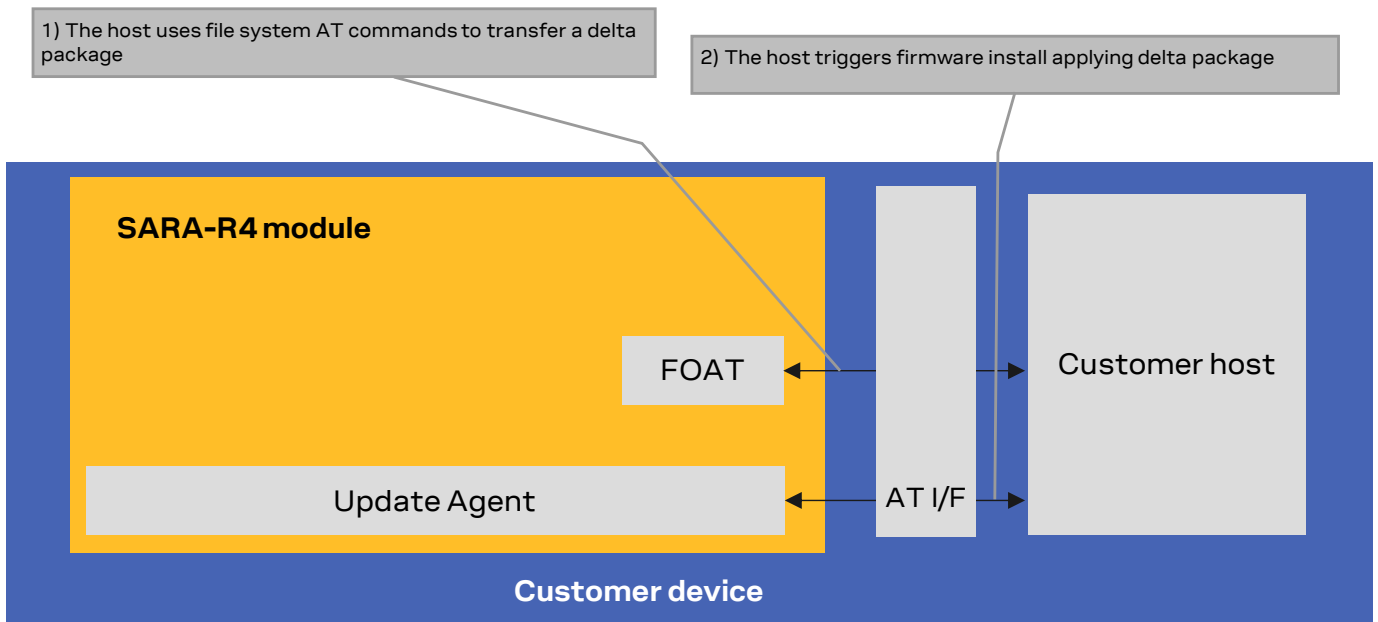


Figure 3: FOAT system architecture

5.1 +UFWUPD AT command

The +UFWUPD AT command triggers the download of the update package using the Xmodem or Xmodem-1k protocol. The extension of the update package is “.upd”. The host must start the download process on the primary UART interface at the speed set by the +IPR AT command (default is 115,200 b/s). After the successful download, use the +UFWINSTALL AT command to install the new firmware. For more details, see [section 6](#).

In case of power loss during the download by the +UFWUPD AT command, at the next module wake-up the module is again in normal mode.

Even if the firmware installation procedure by the +UFWINSTALL AT command is fault tolerant, it is strongly recommended to not remove the power supply or reset the module during the installation process! The module will reboot automatically at the end of the update procedure.

5.1.1 SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 usage

On receiving the +UFWUPD AT command, the module sends the "+UFWUPD: ONGOING" URC to the host terminal via the AT interface, followed by up to three "C" (0x43) characters and up to ten <NACK> (0x15) characters. The first three "C" characters are sent with a 3 s timeout after the last one, and the next ten <NACK> characters are sent with a 10 s timeout after the last one. The total timeout is 109 s. This is the timeout within which the host terminal must send TX data. During this time interval the module will not accept any AT commands.

If data is sent while the "C" character is coming, the protocol uses the CRC method to detect transmission errors, otherwise the standard CHECKSUM method is used.

In the event of a timeout (109 s) while sending the update file via Xmodem protocol, the "ERROR1" error result code is issued on the UART interface; the FW is unchanged and still usable.

5.1.1.1 Syntax specifications

Type	Syntax	Response	Example
Set	AT+UFWUPD=<filetype>	+UFWUPD: ONGOING CCC..... OK	AT+UFWUPD=3 +UFWUPD: ONGOING CCC..... OK
Test	AT+UFWUPD=?	+UFWUPD: (list of supported <filetype>s) OK	+UFWUPD=3 OK

5.1.1.2 Defined values

Parameter	Type	Description
<filetype>	Number	Indicates download type: <ul style="list-style-type: none"> • 3: firmware package download

The following example shows the FOAT procedure and provides more command details and times.

Command	Response	Description
AT+UFWUPD=3	+UFWUPD: ONGOING	The host starts the download process on the primary UART interface at speed set by +IPR AT command.
	CCC<NACK><NACK><NACK><NACK><NACK><NACK><NACK><NACK><NACK><NACK><NACK>	Up to 3 "C"s and up to 10 <NACK>s. <ul style="list-style-type: none"> • "C" rate: 1/3 s • <NACK> rate: 1/10 s
<Send firmware image using Xmodem or Xmodem-1k protocol at speed set by +IPR AT command over the primary UART interface>		See Additional Rate note below

It takes approximately 5 s to prepare the FOAT command to download binary data. The following will be displayed for the following commands.

- +UFWUPD displays "+UFWUPD: ONGOING"

Once the +UFWUPD AT command is ready to transfer binary data, it will not accept any AT commands for approximately 109 s.

When the file transfer is complete, the final result code will be issued. Upon completion, the module will accept and respond to AT commands.

Additional rate: in addition to the allowed +IPR values declared in the SARA-R4 series AT commands manual [1], it is possible to set the baud rate also to 921,600 or 3,000,000 bit/s before triggering the file download by means of the AT+UFWUPD=3 command. Increasing the baud rate to 921,600 or 3,000,000 bit/s will reduce the time required for the firmware download.

Command	Response	Description
AT+IPR=3000000	OK	Set the baud rate to 3,000,000. Also the host baud rate shall be set to 3,000,000 bit/s.
AT+UFWUPD=3	+UFWUPD: ONGOING CCC..... OK	The download will be at 3,000,000 bit/s with Xmodem or Xmodem-1k protocol.

5.1.1.3 Timeout event example

The following example shows a timeout expiring while sending the update file via Xmodem protocol.

Command	Response	Description
AT+UFWUPD=3	+UFWUPD: ONGOING CCC..... Timeout ERROR1 OK	The "ERROR1" error result code is issued on the UART interface; after a timeout event while sending the update file via Xmodem protocol.

5.1.2 SARA-R410M / SARA-R412M usage

5.1.2.1 Syntax specifications

Type	Syntax	Response	Example
Set	AT+UFWUPD=<filetype>	+UFWUPD: ONGOING OK	AT+UFWUPD=3 +UFWUPD: ONGOING OK
Test	AT+UFWUPD=?	OK	+UFWUPD: (3) OK

5.1.2.2 Defined values

Parameter	Type	Description
<filetype>	Number	Indicates download type: <ul style="list-style-type: none"> 3: Firmware package download

It takes approximately 20 s to prepare the FOAT command to download binary data. The following will be displayed for the following commands.

- +UFWUPD displays “+UFWUPD: ONGOING”

Once the +UFWUPD AT command is ready to transfer binary data, it will not accept any AT commands for approximately 2 minutes.

When the file transfer is complete, there is no response, URC or other indication that the file transfer is complete. Upon completion, the module will accept and respond to AT commands.

5.2 +UDWNFILE AT command

5.2.1 Syntax

The command downloads a firmware delta package by the specific file tag ("FOAT"):

Type	Syntax	Response	Example for FW download
Set	AT+UDWNFILE=<file_name>,<delta file size>[,<tag>] >	OK	AT+UDWNFILE=, 12300, "FOAT" >

Firmware delta packages can contain just a carrier profile update.

It takes approximately 5 s to prepare the +UDWNFILE AT command to download binary data. The ">" character will be displayed once the preparation is done to prompt transfer.

On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422, in addition to the allowed +IPR values declared in the SARA-R4 series AT commands manual [1], it is possible to set the baud rate to 921,600 or 3,000,000 bit/s before triggering the file download by the +UDWNFILE AT command. Increasing the baud rate to 921,600 or 3,000,000 bit/s will reduce the the firmware download time.

Command	Response	Description
AT+IPR=3000000	OK	Set the baud rate to 3,000,000 bit/s. Also the host baud rate shall be set to 3,000,000 bit/s.
AT+UDWNFILE=, 12300, "FOAT"	OK	The download will be at 3,000,000 rate.

The +UDWNFILE AT command can also be used with its "profile" file tag to download and automatically install a carrier profiles file (.mbn file) that has not been packaged in a delta file:

Type	Syntax	Response	Example for carrier profile download
Set	AT+UDWNFILE=<filename>,<size>[,<tag>] >	OK	AT+UDWNFILE="PROFILE", 12000, "PROFILE" >

5.2.1.1 Defined values

Parameter	Type	Description
<filename>	String	Firmware package filename
<size>	Number	Firmware package binary size in bytes
<tag>	String	Defines file tag: <ul style="list-style-type: none"> • Mandatory parameter for firmware package transfer. The tag must be given as "FOAT" for FW download, and "PROFILE" for carrier profile • Case-sensitive string

6 Firmware installation +UFWINSTALL

This command is not applicable if LwM2M was used to download the firmware update package.

Once the +UFWINSTALL AT command is issued, the FW installation process shall begin. If the firmware update includes a boot code update, then an interruption during the update process of this code section can cause unrecoverable image corruption of the module. Types of interruptions include:

- Removing or loss of power supply to the module
- Unstable supply to the module
- Host application applies an external reset to module
- Turning off the module with PWR_ON or RESET_N pin

The +UFWINSTALL AT command triggers the firmware installation procedure once the firmware package (namely also 'update file') has been downloaded successfully to the device via AT command +UDWNFILE, +UFWUPD, OTA with +UFTPC or +UHTTPC (where supported). See [Figure 4](#) for an overview diagram. This command provides an error result code if it is issued under other circumstances (including a successful firmware download via LwM2M).

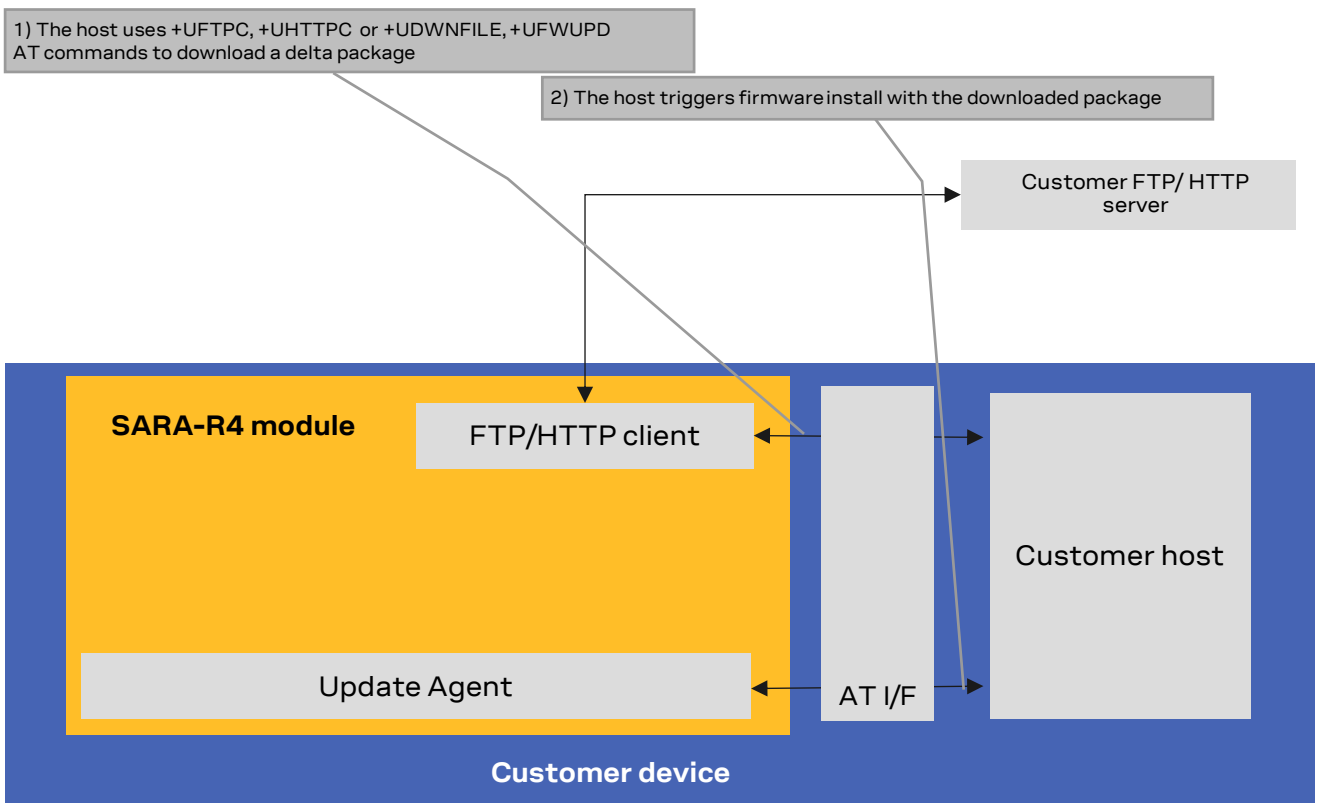


Figure 4: Firmware installation after FTPC, for FOAT file transfer

If the +UFWINSTALL command returns the “OK” final result code, the device will automatically reset and boot back up in boot loader mode, at which point it will process the firmware update.


Once the firmware installation completes, the device will reset again and enter a normal mode of operation with new firmware updated.

The result of the firmware update can be confirmed by the ATI (applicable only to SARA-R410M and SARA-R412M), ATI9 or +CGMR AT commands which indicate the firmware version.

If a firmware package is not found, the “+CME ERROR: operation not allowed” error result code is displayed.

During the update / installation process, the module cannot be used to make calls, even emergency calls. It is not available for communication via USB or UART interfaces. With the EVK on a Windows based PC, there will be no USB ports enumerated.

There is a warning about disrupting the module during FW installation (see warning in this section). If a power loss should happen during the installation phase, at the next module wake-up a fault is detected, and the module remains in Firmware Install Mode until the end of the procedure (installation terminated).

 Even if the procedure is fault tolerant, it is strongly recommended to not remove the power supply or reset the module on purpose during the installation process! The module will reboot automatically at the end of update procedure.

6.1 SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 FW installation

During the install operations, the +UFWINSTALL URCs display the progress indication and the operation result on the serial interface set via the +UFWINSTALL AT command at the baud rate set by the same command as well (see section 6.1.1). The progression of the installation is incremental, but the increment can be different from 1.

The last URC with a value greater than 100 indicates the update operation result (e.g. 128 means operation completed with success). For more details about firmware install final result codes, see the SARA-R4 series AT commands manual [1]. After this last result code, the device will reset and enter a normal mode of operation with new firmware.

6.1.1 Syntax specifications

Type	Syntax	Response	Example
Firmware upgrade			
Set	AT+UFWINSTALL[=<Serial_Port_Number>[,<BaudRate>]]	OK	AT+UFWINSTALL=1,115200 OK
Configure uFOTA FW update URCs			
Set	AT+UFWINSTALL=[<Serial_Port_Number>], [<BaudRate>],,<uFOTA_URC>	OK	AT+UFWINSTALL=1,115200,,1 OK
Test	AT+UFWINSTALL=?	+UFWINSTALL: (list of supported <Serial_Port_Number>s), (list of supported <BaudRate>s), (list of supported <uFOTA_URC>s) OK	+UFWINSTALL: (0,1,2), (9600,19200,38400,57600,115200,230400,460800),, (1) OK
URC		+UFWINSTALL: <progress_install>	

6.1.2 Defined values

Parameter	Type	Description
<Serial_Port_Number>	Number	Serial interface where the progress percentage and the information text responses will be sent: <ul style="list-style-type: none"> • 0: no info will be shown. In this case the <BaudRate> parameter is ignored • 1: UART interface • 2: AUX UART interface If omitted, the command will take as default value for <Serial_Port_Number> the port where the command is issued.
<BaudRate>	Number	Available baud rates in bit/s: <ul style="list-style-type: none"> • 9,600 • 19,200 • 38,400 • 57,600 • 115,200 • 230,400 • 460,800 If omitted, the command will take the current value set for the parameter as the baud rate to be used during the FW installation.
<uFOTA_URC>	String	Allowed value: <ul style="list-style-type: none"> • 1: enables the +UFWINSTALL URCs during the next FW upgrade by uFOTA; the URCs will be issued on the specified <Serial_Port_Number> using the specified <BaudRate>. If the <Serial_Port_Number> parameter is omitted, the URCs will be issued on the port where the command has been issued. If the <BaudRate> parameter is omitted, the current value set for the <BaudRate> parameter will be used. The parameter setting is stored in the flash and is persistent across power cycles.
<progress_install>	Number	Provide the installation progress from 1 to 100 and the update result

6.1.3 Installation performance


The installation time depends on the delta file size and the sections changed in the software memory map between two software versions.

6.1.4 Firmware installation with +UFWINSTALL example

Table 4 provides an example of firmware installation using the +UFWINSTALL AT command.


Command	Response	Description
AT+UDWNFILE=,8388608,"FOAT"	OK	Download the delta file in flash.
AT+UFWINSTALL=1,115200	OK	Start the installation procedure. The cellular module response is sent at 115,200 bit/s. The module reboot follows, after which every module response is sent at 115,200 bit/s.
	+UFWINSTALL: 1 +UFWINSTALL: 3 ... +UFWINSTALL: 92 +UFWINSTALL: 100 +UFWINSTALL: 128	Firmware installation started.
		Firmware installation completed. Once the last URC (+UFWINSTALL: 128) is received, the module reboots to new firmware release, then it is ready to receive further commands.

Table 4: +UFWINSTALL URCs example (delta file must be present in flash)

 On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422, after the module reboot to the new firmware, issue another reboot with the AT+CFUN=16 command before setting any configuration.

6.1.5 Extended error result codes

Below are listed the allowed final result codes that can be issued at the finalization of the install procedure by the +UFWINSTALL command:

 Most of the following result codes are sent through the UART interface and baud rate set by the +UFWINSTALL AT command. Where it is not possible to read the +UFWINSTALL configuration port, the primary UART interface and the baud rate of 115,200 bit/s are used.

Error code	Description	URC Uart port and baud rate
128	FW installation successfully performed	Set by +UFWINSTALL
129	Firmware installation generic failure	Set by +UFWINSTALL
130	Flash access failure	Primary UART, baud rate: 115,200 bit/s
131	RAM allocation error	Primary UART, baud rate: 115,200 bit/s
132	Retrieve partition table error	Primary UART, baud rate: 115,200 bit/s
134	Bad Block Flash init failure	Set by +UFWINSTALL
140	Generic decompression engine error	Set by +UFWINSTALL
141	RAM error	Set by +UFWINSTALL
144	Requested file does not exist during installation (it could be a working file/partition in flash or FW file/partition to be updated. Could be flash error.	Set by +UFWINSTALL
148	Delta file is corrupted	Set by +UFWINSTALL
158	Delta file not recognized. It happens trying to update from a non-delta file format	Set by +UFWINSTALL
160	Flash writing failure	Set by +UFWINSTALL
168	Source firmware in flash mismatch with the one expected by the delta file.	Set by +UFWINSTALL
173	Calculated digital signature does not match pkg header value – probably wrong signature or some byte corrupted	Set by +UFWINSTALL
174	Delta file version is not supported	Set by +UFWINSTALL
178	RAM memory corruption (Null Pointer assignment)	Set by +UFWINSTALL
180	Size of the delta file in flash mismatch with the real delta file size	Set by +UFWINSTALL
195	Data corruption found in a component/partition/file updated in flash. Probably cause by power loss cause or flash problem	Set by +UFWINSTALL
224	Generic error in finalizing the end of the install procedure. Last check before exiting install.	Set by +UFWINSTALL
227	FOTA public key is not found or invalid	Set by +UFWINSTALL
247	Pre-validation of the delta file failed.	Set by +UFWINSTALL

Table 5: Most common error result codes during +UFWINSTALL procedure

In case a different error result code is provided, please contact u-blox technical support.

6.2 SARA-R410M / SARA-R412M firmware installation


There is no URC to indicate the FW installation is complete. See [Table 3](#) for FW installation time guidelines.

6.2.1 Syntax specifications


Type	Syntax	Response	Example
Set	AT+UFWINSTALL	OK	AT+UFWINSTALL OK
Test	AT+UFWINSTALL=?	OK	OK
Action	ATI	<device info>	ATI Manufacturer: u-blox Model: SARA-R410M-02B Revision: L0.0.00.00.05.06 SVN: 02 IMEI: 357591080029488

Table 6: +UFWINSTALL AT command syntax

6.3 Performing EFS backup after flashing FW update with delta package

 EFS / Backup & Restore feature is not supported by SARA-R4 “52” / “63” / “73” / “83” product versions or by SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R410M-52B-00, SARA-R410M-52B-01, SARA-R410M-52B-02, SARA-R412M-02B-00, SARA-R412M-02B-01, and SARA-R412M-02B-02.

If a firmware with the Backup & Restore feature is being updated to via FOTA / uFOTA with a delta package, then after the successful update the host needs to perform a backup by means of the +UBKUPDATA AT command before testing or relying on this the Restore feature.

 On SARA-R422, SARA-R422S, SARA-R422M8S, SARA-R422M10S and LEXI-R422, after a successful update through FOTA / uFOTA, a backup is automatically performed by the module itself.

For more details on the +UBKUPDATA AT command, see the SARA-R4 series AT commands manual [\[1\]](#) and SARA-R4 series application development guide [\[6\]](#).

7 AT commands forbidden during FW download

Only one download method can be active at a time. [Table 7](#) presents the AT commands and firmware download methods that have a dependency upon one another.

- Do not issue any of the commands listed in [Table 7](#) during uFOTA download.
- On SARA-R410M / SARA-R412M an error result code is returned if a command listed in [Table 7](#) is issued during a firmware download.
- On SARA-R422M / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422 an error result code is not returned if a command listed in [Table 7](#) is issued during a firmware download.

Active download method	Forbidden AT commands	Note
LwM2M client FOTA download	AT+UFTPC=100, AT+UFWUPD=3, AT+UDWNFILE=,,"FOAT", AT+USODL=<socket>, AT+UFTPC=6, AT+UFTPC=7 AT+UHTTPC=<profile_id>,100	<ul style="list-style-type: none"> • When a FOTA download is in progress by LwM2M client, the blocked AT commands will return "+CME ERROR: FOTA memory is in use". • +UDWNFILE with FOAT tag will be blocked. All Direct Link mode commands will be blocked.
AT+UFTPC=100	AT+UFWUPD=3, AT+UDWNFILE, AT+URDFILE, AT+USODL=<socket>, FOTA download via LwM2M client AT+UHTTPC=<profile_id>,100	<ul style="list-style-type: none"> • When AT+UFTPC=100 in progress, a FOTA download via LwM2M client will return an error result code. • All +UDWNFILE file download commands will be blocked. • All +URDFILE commands will be blocked. • All +USODL Direct Link mode commands will be blocked. All other +UFTPC commands are not allowed. The firmware download via FTP is not supported by SARA-R422
AT+UFWUPD=3	AT+UFTPC=100, AT+UDWNFILE, AT+URDFILE, AT+USODL=<socket>, FOTA download via LwM2M client AT+UHTTPC=<profile_id>,100	<ul style="list-style-type: none"> • When +UFWUPD in progress, FOTA download via LwM2M client will return an error result code. • All +UDWNFILE file download commands will be blocked. • All +URDFILE commands will be blocked. All Direct Link mode commands will be blocked.
AT+UDWNFILE="FOAT"	AT+UFTPC=100, AT+UFWUPD=3, AT+URDFILE, AT+USODL=<socket>, FOTA download via LwM2M client AT+UHTTPC=<profile_id>,100	<ul style="list-style-type: none"> • When +UDWNFILE with "FOAT" tag in progress, FOTA download via LwM2M client will return an error result code. • All +UDWNFILE commands will be blocked. • All +URDFILE commands will be blocked. • All Direct Link mode commands will be blocked. When +UDWNFILE of regular file download in progress, FOTA download via LwM2M client operation will not be interfered.
AT+UHTTPC=<profile_id>,100	AT+UFTPC=100, AT+UFWUPD=3, AT+UDWNFILE, AT+URDFILE, AT+USODL=<socket>, FOTA download via LwM2M client	The firmware download via HTTP is not supported by SARA-R410M / SARA-R412M / SARA-R422.

Table 7: Firmware download methods

- During a FOTA/FOAT download, the PSM is disabled before a download is started and is enabled again once the download has succeeded, failed or been cancelled.

8 Power Save Mode (PSM)

eDRX (Enhanced Discontinuous Reception)

Before uFOTA/FOAT FW update or when a download is detected, eDRX should be disabled by the host until the download and update is complete. This is to ensure smooth and timely communication between the server and the device.

PSM

During a FOTA/FOAT download, the PSM is held off from entering the low power state, if the T3324 activity timer has expired, but a FOTA download session has begun. PSM can enter the low power state after the download has: succeeded, failed or been cancelled.

9 EasyFlash

EasyFlash is a Windows-based application tool that allows SARA-R4 and LEXI-R4 series modules to be flashed via the USB interface.

- For each firmware release, there is a recommended version or minimal version of EasyFlash to be used with it. Consult u-blox support to identify which EasyFlash version shall be used. It is good practice to have the latest version available to have all the improvements and fixes.

OS requirements

EasyFlash requires a computer with either Windows 7 or 10.

Flashing steps

- Select the path to the FW .dof flash file in the main window of the tool (see [Figure 5](#)).

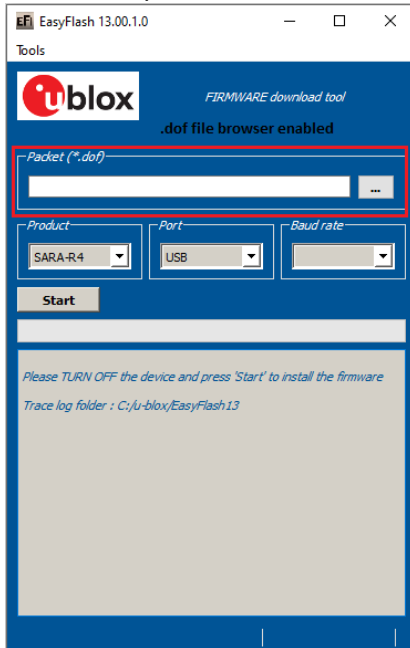


Figure 5: EasyFlash, select the ".dof" file path

Alternatively, uncheck **Tools > Enable file browser**, to use a .dof file stored in the application folder, see [Figure 6](#).

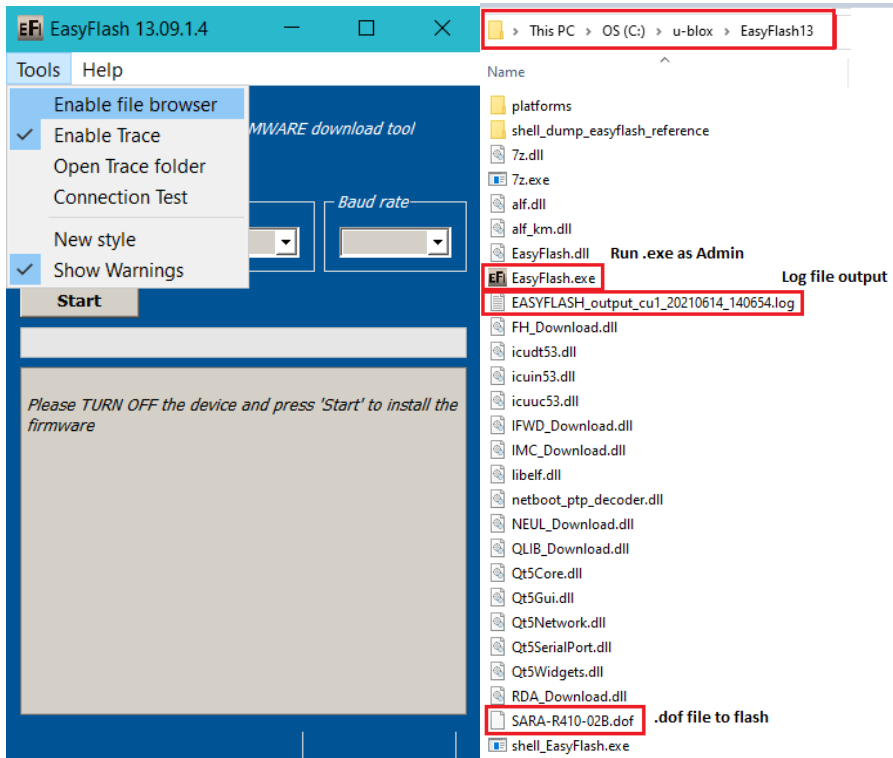


Figure 6: EasyFlash directory and file details

2. Close any tools related to the module running on the computer. To ensure they are closed, check and terminate them in Windows Task Manager.
3. Run EasyFlash as Administrator.
4. Select in pull-down menu, see [Figure 7](#)
 - a. **Product:** SARA-R4 or LEXI-R4
 - b. **Port:** USB
 - c. **Baud rate:** leave blank
5. Click **Tools > Enable trace**, see [Figure 7](#). This will create a log per flash attempt for trouble shooting.
6. Click **Start** , see [Figure 7](#).

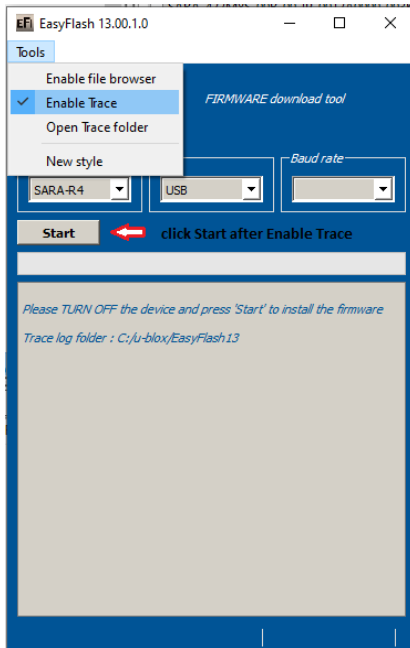


Figure 7: Setting up EasyFlash and starting the FW installation

7. Power up the module.
8. Flash will start, wait for flash to complete, see [Figure 8](#) and [Figure 9](#)
9. Close EasyFlash.

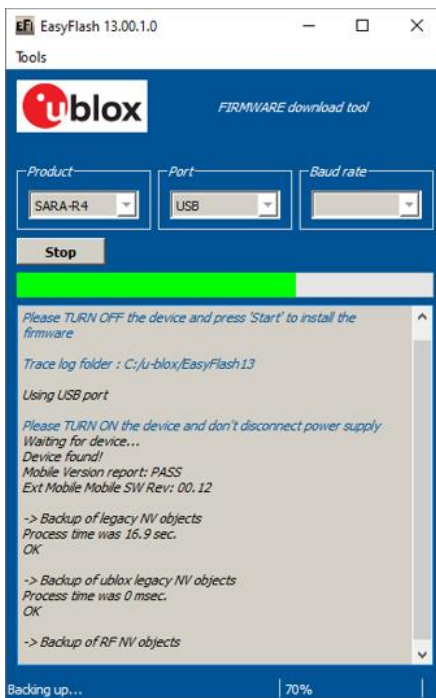


Figure 8: Flash process in progress

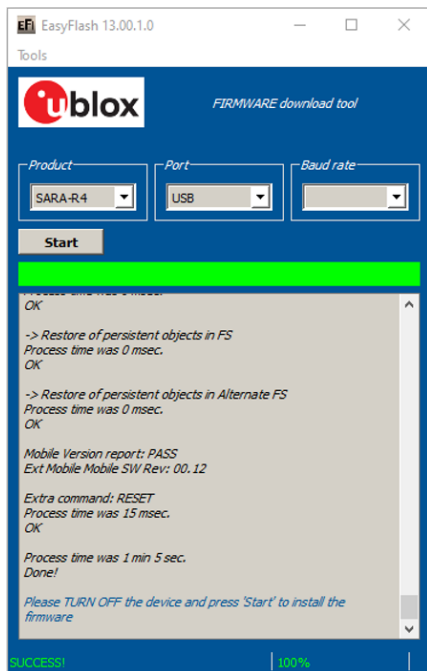


Figure 9: Flash process complete and successful

EasyFlash tips

- Do not use a USB hub.
- It could be necessary to remove any other drivers for other Qualcomm chipset or products on the computer.
- If the flash process fails to complete, try again.
- During the flash process in EasyFlash version 10 and higher, the EasyFlash firmware update process will first generate a backup file for the device in the root directory where the EasyFlash executable file is located, and store it on the PC until it restores it.
 - This file contains specific device data such as calibration data and IMEI value among other configuration values too.
 - If the EasyFlash firmware update process does not successfully complete due to some error (which will be reported by EasyFlash) and the error occurs between these two events:
 - After it creates the backup file
 - Before it restores this backup file back to the device during the last stage of the EasyFlash update process
 then the backfile will reside on the PC and can be seen in the Windows file system.
 - If the device should undergo a subsequent EasyFlash update again on the same PC that contains this backup file, a complete and successful update run will restore this backup file to the exact same device it was backed-up from and will not restore it to any other module.
 - Once the file is restored to the module, it is deleted from the PC.
 - Example backup file name:
 - EASYFLASH_archive_a9e1ce86_354679090348445.qbackup
- Try rebooting the PC if a flash fails a few times, and then try again after reboot.

9.1 EasyFlash and Backup & Restore feature

EFS / Backup & Restore feature is not supported by SARA-R4 “52” / “63” / “73” / “83” product versions or by SARA-R410M-02B-00, SARA-R410M-02B-01, SARA-R410M-02B-02, SARA-R412M-02B-00, SARA-R412M-02B-01, and SARA-R412M-02B-02.

This section describes how to use EasyFlash and update the module to a firmware with Backup & Restore feature.

After a successful firmware update using EasyFlash as indicated by the green graphic user interface progress bar and “SUCCESS!” status message, as shown in [Figure 10](#), the module is set to trigger a backup upon the first boot. Allow the boot-up and backup time for the backup process, as guided in SARA-R4 series application development guide [\[6\]](#).

If the device is left powered on after the EasyFlash process is complete it will automatically boot and perform the backup.

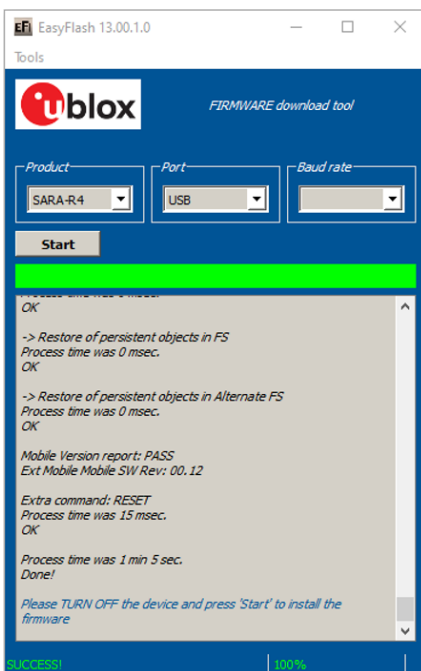


Figure 10 Flashing module is completed. The module will boot-up after success and perform first Backup.

After the first backup is performed automatically post updating the firmware by EasyFlash, confirm the backup copy.

Command	Response	Description
AT+UBKUPDATA?	+UBKUPDATA: 0,0,1,0,0,0,"" OK	Backup copy confirmed as indicated by the “1” for one backup performed.

9.1.1 Setting preferred message storage after FW update

If a firmware build with the Backup & Restore feature is being deployed onto a module by EasyFlash, after a successful FW update when the device boots up, the host is required to set preferred SMS message storage by the +CPMS AT command just once after the firmware update. This step is required if the host application uses SMS. If not, this step can be ignored. Even if the host intends to use the +CPMS AT command factory-programmed setting, the storage setting still needs to be set.


10 FW update: device files and settings

SARA-R410M/ SARA-R412M

Table 8 summarizes each of the update methods and their impact on user files and settings.

Item	EasyFlash	FW delta package via uFOTA and FOTA (applied with +UFWINSTALL)	FW delta package via FOAT (applied with +UFWUPD)
Files in user file system	Erased, then set to what is configured with FW image (if any).	No changes. Files are preserved.	No changes. Files are preserved.
MNO profiles	Erased, then MNO profiles are loaded to only what is included in the FW image. After flashing select MNO profile with +UMNOPROF.	MNO profiles included in update package are modified. MNO profiles not included have no change.	MNO profiles included in update package are modified. MNO profiles not included have no change.
User NVM settings (i.e. +UBANDMASK)	Erased, then set to default values as configured in FW build image.	NVM items included in update package are modified. NVM items not included have no change.	NVM items included in update package are modified. NVM items not included have no change.
User certificates and private keys	User certificates and private keys are erased.	User certificates and private keys are maintained.	

Table 8: Summary of each firmware update method and impact to device files and settings

 For SARA-R410M-63B-00 and SARA-R410M-63B-01, after a firmware delta package is applied, upon first boot-up, the SIM Issuer Identifier Number (IIN) feature (see the +UMNOPROF AT command in SARA-R4 series AT commands manual [1]) will actively select the MNO profile based on the SIM. Therefore, whether the SIM is changed after the firmware delta package update, the MNO profile set before the update will be reapplied after the update; then the NVM items are restored to the corresponding factory-programmed configuration. This translates to the NVM items in a profile that have been set by host need to set again. For example: if the APN value was set by the host via the +CGDCONT AT command, then after the firmware delta update the MNO profile should be confirmed to be same as before the firmware delta package install, and then the APN value will need to be set again if the original APN is desired.

SARA-R422 / SARA-R422S / SARA-R422M8S / SARA-R422M10S / LEXI-R422

Table 9 summarizes each of the update methods and their impact on user files and settings.

Item	EasyFlash	FW delta package via uFOTA and FOTA (differential update package applied with +UFWINSTALL)	FW delta package via FOAT (non differential update package applied with +UFWINSTALL)
Files in user file system	Erased, then set to what is configured with FW image (if any).	No changes. Files are preserved.	No changes. Files are preserved.
LwM2M files stored in user file system	Erased, then set to what is configured with FW image (if any).	No changes. Files are preserved.	No changes. Files are preserved.
RoT firmware update file	Erased, then set to what is configured with FW image (if any).	Files are preserved or eventually replaced with the new one (if any).	Files are preserved or eventually replaced with the new one (if any).
MNO profiles	Erased, then MNO profiles are loaded to only what is included in the FW image. After flashing select MNO profile with +UMNOPROF.	MNO profiles included in update package are modified. MNO profiles not included is restored by the new FW.	MNO profiles included in update package are modified. MNO profiles not included is restored by the new FW.
User NVM settings (i.e. +UBANDMASK)	Erased, then set to default values as configured in FW build image.	NVM item(s) included in update package are modified. NVM item(s) not included have no change.	NVM item(s) included in update package are modified. NVM item(s) not included have no change.
User certificates and private keys	User certificates and private keys are maintained.		
SMS	Erased.		

Table 9 Summary of each firmware update method and impact to device files and settings

Appendix

A Glossary

Abbreviation	Definition
API	Application Programming Interface
AT	AT Command Interpreter Software Subsystem, or attention
DB	Database
DTLS	Datagram Transport Layer Security
eDRX	Enhanced Discontinuous Reception
EVK	Evaluation Kit
FOAT	Firmware update AT command
FOTA	Firmware Over-The-Air
FTP	File Transfer Protocol
FW	Firmware
GPIO	General Purpose Input/Output
HTTP	HyperText Transfer Protocol
HW	Hardware
IMEI	International Mobile Equipment Identity
IPL	Interface Porting Layer
LTE	Long Term Evolution
LwM2M	Light weight Machine to Machine
MNO	Mobile Network Operator
OTA	Over The Air
PSM	Power save mode
RF	Radio Frequency
SMS	Short Message Service
SRLT	Server Registration Lifetime
UART	Universal Asynchronous Receiver-Transmitter
UFE	u-blox FOTA Engine
uFOTA	u-blox FOTA
URC	Unsolicited Result Code
URI	Uniform Resource Identifier
URL	Uniform Resource Locator
USB	Universal Serial Bus

Table 10: Explanation of the abbreviations and terms used

B MNO certification notes

B.1 Verizon

B.1.1 Non-Verizon FW update capability

At the time of this application note’s publication, Verizon requires customers (including u-blox, and u-blox’s end customers) to demonstrate that the device under test is capable of having its FW updated over-the-air. This capability may be demonstrated through screen shots before and after a successful FW upgrade. Currently, this upgrade may be tested in the customer’s own lab without direct involvement from Verizon.

If LwM2M is to be used to perform the firmware updates, here are the steps that should be followed for a device:

1. Obtain the required FW update package (provided by u-blox. Contact u-blox FAE to obtain appropriate update packages)
 - o For example, if updating from L0.0.00.00.05.12, a package is needed to allow for the following transitions:
 L0.0.00.00.05.12 -> L9.9.00.00.05.12
2. Prepare campaign on uFOTA server for first FW update, specifying the IMEI of the device under test, and the date/time the update should occur (contact u-blox FAE to arrange this)
3. Setup the device under test issuing the following command sequence for SARA-R410M-02B-03 or SARA-R410M-02B-04

Command	Response	Description
ATI9	L0.0.00.00.05.12,A.02.19 OK	Check firmware before campaign.
AT+UMNOPROF=3	OK	Set MNO profile to 3 for Verizon.
AT+CFUN=15	OK	Reset the device to enable the setting of MNO profile 3.
AT+UFOTASTAT=1	OK	Enable the uFOTA download and update URC.
AT+ULWM2MSTAT=1	OK	Enable the LwM2M status URC.
AT+CSGT=1,"Greeting message"	OK	Optionally enable greeting message to use as an indicator when FW is installed and device has rebooted.
AT+CEREG=3	OK	Optionally enable a +CEREG mode that will enable URC output per registration status change. In this example mode 3 is used.
	+CEREG: 1,"2809","9EBB03",7	URC indicates registration with Verizon network.
AT+CEREG?	+CEREG: 3,1,"2809","9EBB03",7, 0, 0 OK	Check registration if CEREG URC not seen or not used.
AT+CGDCONT?	+CGDCONT: 1,"IPV4V6","vzwintern et","100.112.30.30 38.0.16.18.177.72.114.69.0.0.0. 81.254.124.3.1",0,0,0,0,0,0 +CGDCONT: 2,"IPV4V6","vzwadmin" ,"0.0.0.0.0.0.0.0.0.0.0.0.0.0.0. .0",0,0,0,0,0,0 +CGDCONT: 3,"IPV4V6","vzwintern et","0.0.0.0.0.0.0.0.0.0.0.0.0.0. 0.0.0",0,0,0,0,0,0 +CGDCONT: 4,"IPV4V6","vzwapp",	Check PDN context established and IP address assigned

Command	Response	Description
	0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0 ",0,0,0,0,0,0 +CGDCONT: 6,"IPV4V6","VZWCLASS6" ", "0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0" 0.0",0,0,0,0,0,0 OK	
AT+ULWM2MREG=721	OK	Trigger check to uFOTA server. This is a quicker method than to wait for the default lifetime to expire for module to check-in.
	+ULWM2MSTAT: 1,721,3	URC indicates check-in performed with Verizon FOTA server.
	+UFOTASTAT: 1,0,0 +UFOTASTAT: 2,2,100 +ULWM2MSTAT: 3,721,/5/0/3 +ULWM2MSTAT: 3,721,/5/0/3 +ULWM2MSTAT: 4,6	Follow uFOTA and LwM2M URCs for the communication and download process.
		Device will install firmware after download is completed.
	Greeting message	If used, a greeting message can be seen when device boots-up after firmware install.
ATI9	L9.9.00.00.05.12,A.02.19 OK	Check firmware had been updated to new version.

4. Capture screenshot of FW version (use ATI or ATI9 command) before a FW update.
5. Execute campaign on u-blox's uFOTA server to upgrade device.
6. Capture screenshot of FW version after FW upgrade.

B.1.2 Firmware update with Verizon FOTA server


Regardless of the end device firmware update supported method, according to Verizon latest requirements the end device based on SARA-R410M-02B-03 or SARA-R410M-02B-04, it needs to support the Verizon FOTA at least as a backup mode (if not the primary method) of updating module firmware .

Verizon will likely require the end device to demonstrate / test FOTA with their Motive test server. This procedure is a "Self-test", which is guided by instructions provided by Verizon.

To perform the "Self-test", an MNO profile needs to be loaded onto the module via +UDWNFILE, so that the module can communicate with the Motive test server. Please contact u-blox support for the required MNO profile.


Here is an example of the AT command a Verizon FOTA update with the Motive test server:

Command	Response	Description
AT+UMNOPROF?	+UMNOPROF: 205 OK	Check MNO profile has been loaded and set to 205.
AT+UFOTASTAT=1	OK	Enable the uFOTA download and update URC.
AT+ULWM2MSTAT=1	OK	Enable the LwM2M status URC.
AT+CSGT=1,"Greeting message"	OK	Optionally enable greeting message to use as an indicator when FW is installed and device has rebooted.
AT+CEREG=3	OK	Optionally enable a CEREG mode that will enable URC output per registration status change. In this example mode 3 is used.
	+CEREG: 1,"2809","9EBB03",7	URC indicates registration with Verizon network.
AT+CEREG?	+CEREG: 3,1,"2809","9EBB03",7, 0, 0	Check registration if CEREG URC not seen or not used.

Command	Response	Description
	OK	
AT+CGDCONT?	+CGDCONT: 1,"IPV4V6","vzwintern et","100.112.30.30 38.0.16.18.177.72.114.69.0.0.0. 81.254.124.3.1",0,0,0,0,0,0 +CGDCONT: 2,"IPV4V6","vzwadmin" ,"0.0.0.0.0.0.0.0.0.0.0.0.0.0. .0",0,0,0,0,0,0 +CGDCONT: 3,"IPV4V6","vzwintern et","0.0.0.0.0.0.0.0.0.0.0.0.0. 0.0.0",0,0,0,0,0,0 +CGDCONT: 4,"IPV4V6","vzwapp"," 0.0.0.0.0.0.0.0.0.0.0.0.0.0.0. ",0,0,0,0,0,0 +CGDCONT: 6,"IPV4V6","VZWCLASS6 ","0.0.0.0.0.0.0.0.0.0.0.0.0.0. 0.0",0,0,0,0,0,0 OK	Check PDN context established and IP address assigned
	+ULWM2MSTAT: 0, 0, 10 +ULWM2MSTAT: 0, 0, 11 +ULWM2MSTAT: 0, 0, 12 +ULWM2MSTAT: 0, 0, 14	URCs that will indicate bootstrap process. For each URC shown they translate to <ul style="list-style-type: none"> • Bootstrap holdoff • Bootstrap initiated • Bootstrap finishing • Bootstrap finished  If +ULWM2MSTAT is not enabled quickly enough, these URCs may be missed
AT+ULWM2MREG=102	OK	As an option if needed, force an immediate check-in to Verizon FOTA server. On first boot the device will want to check-in with the server or device checks in when lifetime expires.
	+ULWM2MSTAT: 1, 102, 3	URC indicates check-in performed with Verizon FOTA server.
	+UFOTASTAT: 1, 0, 0 +UFOTASTAT: 2, 2, 100 +ULWM2MSTAT: 3, 721, /5/0/3 +ULWM2MSTAT: 3, 721, /5/0/3 +ULWM2MSTAT: 4, 6	Follow uFOTA and LwM2M URCs for the communication and download process.
		The device will install firmware after download is completed.
	Greeting message	If used, a greeting message can be seen when the device boots up after firmware install.
ATI9	L9.9.00.00.05.12,A.02.19 OK	Check firmware had been updated to new version.

Related documentation

- [1] u-blox LEXI-R4 / SARA-R4 AT commands manual, [UBX-17003787](#)
- [2] u-blox SARA-R4 series data sheet, [UBX-16024152](#)
- [3] u-blox SARA-R4 series system integration manual, [UBX-16029218](#)
- [4] u-blox LEXI-R42 series data sheet, [UBX-22020834](#)
- [5] u-blox LEXI-R42 series system integration manual, [UBX-23007449](#)
- [6] u-blox SARA-R41 series application development application note, [UBX-18019856](#)
- [7] u-blox SARA-R42 / LEXI-R42 series application development application note, [UBX-20050829](#)
- [8] u-blox SARA-R4 / SARA-R5 / LEXI-R422 series LwM2M object and commands application note, [UBX-18068860](#)
- [9] OMA technical specification Lightweight M2M, V1_0-20170208-A

 For regular updates to u-blox documentation and to receive product change notifications, register on our homepage (www.u-blox.com).

Revision history

Revision	Date	Name	Comments
R01	31-Aug-2018	pwar / clee	Initial draft
R02	26-Jun-2019	clee / pwar	Initial release
R03	20-Jan-2020	clee	Extended document applicability to SARA-R410M-63B, SARA-R410M-73B
R04	11-Jun-2020	clee	Added uFOTA server access section and some note about NTT DoCoMo LwM2M server connection Extended document applicability to SARA-R410M-83B
R05	03-Sep-2020	clee	Minor updates
R06	09-Dec-2020	clee	Minor updates
R07	01-Mar-2021	clee	Added guidance if firmware supports EFS Backup & Restore. Extended document applicability to SARA-R410M-02B-03 and SARA-R412M-02B-03
R08	18-May-2021	aoli / mvoc / clee	Extend the document applicability to SARA-R422, SARA-R422S, SARA-R422M8S. Provide instructions on Verizon FOTA demo for certification. Improved description about backup and EasyFlash.
R09	08-Jul-2021	aflo / mvoc / aoli	Added section 4 "Firmware download via HTTP". Minor updates and improvements.
R10	29-Apr-2022	clee	Minor updates
R11	24-Nov-2022	mreb	Extended the document applicability to SARA-R422M10S.
R12	25-Jul-2023	mreb	Added new AT commands +UFOTACONFIG and +UFOTAACK for uFOTA settings. Extended AT+UFOTA to support pause/resume uFOTA download,
R13	23-Nov-2023	mreb	Extended the document applicability to LEXI-R422.

Contact

u-blox AG

Address: Zürcherstrasse 68
8800 Thalwil
Switzerland

For complete contact information, visit us at www.u-blox.com.