




# u-blox F9 HPS 1.30

u-blox F9 high precision sensor fusion GNSS receiver

Protocol version 33.30

Interface description

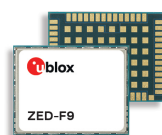

## Abstract

This document describes the interface (version 33.30) of the u-blox F9 firmware HPS 1.30 platform.

[www.u-blox.com](http://www.u-blox.com)

UBX-22010984 - R02  
C1-Public



## Document information

<b>Title</b>	<b>u-blox F9 HPS 1.30</b>	
<b>Subtitle</b>	u-blox F9 high precision sensor fusion GNSS receiver	
<b>Document type</b>	Interface description	
<b>Document number</b>	UBX-22010984	
<b>Revision and date</b>	R02	28-Apr-2023
<b>Disclosure restriction</b>	C1-Public	

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, or modification of this document or any part thereof is only permitted with the express written permission of u-blox. Disclosure to third parties is permitted for clearly public documents only.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit [www.u-blox.com](http://www.u-blox.com).

Copyright © 2023, u-blox AG.

# Contents

<b>1 General information.....</b>	<b>14</b>
1.1 Document overview.....	14
1.2 Firmware and protocol versions.....	14
1.3 Receiver configuration.....	16
1.4 Message naming.....	16
1.5 GNSS, satellite, and signal identifiers.....	17
1.5.1 Overview.....	17
1.5.2 GNSS identifiers.....	18
1.5.3 Satellite identifiers.....	18
1.5.4 Signal identifiers.....	19
1.6 Message types.....	20
<b>2 NMEA protocol.....</b>	<b>21</b>
2.1 NMEA frame structure.....	21
2.2 NMEA protocol configuration.....	21
2.3 NMEA-proprietary messages.....	22
2.4 NMEA multi-GNSS operation.....	23
2.5 NMEA data fields.....	23
2.5.1 NMEA Talker ID.....	23
2.5.2 NMEA extra fields.....	24
2.5.3 NMEA latitude and longitude format.....	24
2.5.4 NMEA GNSS, satellite, and signal numbering.....	24
2.5.5 NMEA position fix flags.....	24
2.5.6 NMEA output of invalid or unknown data.....	25
2.6 NMEA messages overview.....	26
2.7 Standard messages.....	27
2.7.1 DTM.....	27
2.7.1.1 Datum reference.....	27
2.7.2 GAQ.....	27
2.7.2.1 Poll a standard message (Talker ID GA).....	27
2.7.3 GBQ.....	28
2.7.3.1 Poll a standard message (Talker ID GB).....	28
2.7.4 GBS.....	28
2.7.4.1 GNSS satellite fault detection.....	28
2.7.5 GGA.....	29
2.7.5.1 Global positioning system fix data.....	29
2.7.6 GLL.....	30
2.7.6.1 Latitude and longitude, with time of position fix and status.....	30
2.7.7 GLQ.....	30
2.7.7.1 Poll a standard message (Talker ID GL).....	31
2.7.8 GNQ.....	31
2.7.8.1 Poll a standard message (Talker ID GN).....	31
2.7.9 GNS.....	31
2.7.9.1 GNSS fix data.....	31
2.7.10 GPQ.....	32
2.7.10.1 Poll a standard message (Talker ID GP).....	32

2.7.11 GQQ.....	33
2.7.11.1 Poll a standard message (Talker ID GQ).....	33
2.7.12 GRS.....	33
2.7.12.1 GNSS range residuals.....	33
2.7.13 GSA.....	34
2.7.13.1 GNSS DOP and active satellites.....	34
2.7.14 GST.....	34
2.7.14.1 GNSS pseudorange error statistics.....	35
2.7.15 GSV.....	35
2.7.15.1 GNSS satellites in view.....	35
2.7.16 RLM.....	36
2.7.16.1 Return link message (RLM).....	36
2.7.17 RMC.....	37
2.7.17.1 Recommended minimum data.....	37
2.7.18 THS.....	37
2.7.18.1 True heading and status.....	38
2.7.19 TXT.....	38
2.7.19.1 Text transmission.....	38
2.7.20 VTG.....	39
2.7.20.1 Course over ground and ground speed.....	39
2.7.21 ZDA.....	39
2.7.21.1 Time and date.....	39
2.8 Secondary output messages.....	40
2.8.1 GGA.....	40
2.8.1.1 Global positioning system fix data.....	40
2.8.2 GLL.....	41
2.8.2.1 Latitude and longitude, with time of position fix and status.....	41
2.8.3 GNS.....	42
2.8.3.1 GNSS fix data.....	42
2.8.4 GSA.....	43
2.8.4.1 GNSS DOP and active satellites.....	43
2.8.5 RMC.....	44
2.8.5.1 Recommended minimum data.....	44
2.8.6 VTG.....	45
2.8.6.1 Course over ground and ground speed.....	45
2.8.7 ZDA.....	46
2.8.7.1 Time and date.....	46
2.9 PUBX messages.....	46
2.9.1 CONFIG (PUBX,41).....	46
2.9.1.1 Set protocols and baud rate.....	47
2.9.2 POSITION (PUBX,00).....	47
2.9.2.1 Poll a PUBX,00 message.....	47
2.9.2.2 Lat/Long position data.....	48
2.9.3 RATE (PUBX,40).....	49
2.9.3.1 Set NMEA message output rate.....	49
2.9.4 SVSTATUS (PUBX,03).....	49
2.9.4.1 Poll a PUBX,03 message.....	49
2.9.5 TIME (PUBX,04).....	50
2.9.5.1 Poll a PUBX,04 message.....	50
<b>3 UBX protocol.....</b>	<b>51</b>

3.1 UBX protocol key features.....	51
3.2 UBX frame structure.....	51
3.3 UBX payload definition rules.....	52
3.3.1 UBX structure packing.....	52
3.3.2 UBX reserved elements.....	52
3.3.3 UBX undefined values.....	52
3.3.4 UBX conditional values.....	52
3.3.5 UBX data types.....	52
3.3.6 UBX fields scale and unit.....	53
3.3.7 UBX repeated fields.....	53
3.3.8 UBX payload decoding.....	54
3.4 UBX checksum.....	54
3.5 UBX message flow.....	54
3.5.1 UBX acknowledgement.....	54
3.5.2 UBX polling mechanism.....	54
3.6 GNSS, satellite, and signal numbering.....	55
3.7 UBX message example.....	55
3.8 UBX messages overview.....	56
3.9 UBX-ACK (0x05).....	59
3.9.1 UBX-ACK-ACK (0x05 0x01).....	59
3.9.1.1 Message acknowledged.....	60
3.9.2 UBX-ACK-NAK (0x05 0x00).....	60
3.9.2.1 Message not acknowledged.....	60
3.10 UBX-CFG (0x06).....	60
3.10.1 UBX-CFG-CFG (0x06 0x09).....	60
3.10.1.1 Clear, save and load configurations.....	60
3.10.2 UBX-CFG-RST (0x06 0x04).....	61
3.10.2.1 Reset receiver / Clear backup data structures.....	61
3.10.3 UBX-CFG-SPT (0x06 0x64).....	62
3.10.3.1 Configure and start a sensor production test.....	62
3.10.4 UBX-CFG-VALDEL (0x06 0x8c).....	63
3.10.4.1 Delete configuration item values.....	63
3.10.4.2 Delete configuration item values (with transaction).....	63
3.10.5 UBX-CFG-VALGET (0x06 0x8b).....	64
3.10.5.1 Get configuration items.....	65
3.10.5.2 Configuration items.....	65
3.10.6 UBX-CFG-VALSET (0x06 0x8a).....	66
3.10.6.1 Set configuration item values.....	66
3.10.6.2 Set configuration item values (with transaction).....	67
3.11 UBX-ESF (0x10).....	68
3.11.1 UBX-ESF-ALG (0x10 0x14).....	68
3.11.1.1 IMU alignment information.....	68
3.11.2 UBX-ESF-INS (0x10 0x15).....	69
3.11.2.1 Vehicle dynamics information.....	69
3.11.3 UBX-ESF-MEAS (0x10 0x02).....	70
3.11.3.1 External sensor fusion measurements.....	70
3.11.4 UBX-ESF-RAW (0x10 0x03).....	70
3.11.4.1 Raw sensor measurements.....	70
3.11.5 UBX-ESF-STATUS (0x10 0x10).....	71
3.11.5.1 External sensor fusion status.....	71

3.12	UBX-INF (0x04)	72
3.12.1	UBX-INF-DEBUG (0x04 0x04)	72
3.12.1.1	ASCII output with debug contents	73
3.12.2	UBX-INF-ERROR (0x04 0x00)	73
3.12.2.1	ASCII output with error contents	73
3.12.3	UBX-INF-NOTICE (0x04 0x02)	73
3.12.3.1	ASCII output with informational contents	73
3.12.4	UBX-INF-TEST (0x04 0x03)	73
3.12.4.1	ASCII output with test contents	74
3.12.5	UBX-INF-WARNING (0x04 0x01)	74
3.12.5.1	ASCII output with warning contents	74
3.13	UBX-MGA (0x13)	74
3.13.1	UBX-MGA-ACK (0x13 0x60)	74
3.13.1.1	Multiple GNSS acknowledge message	74
3.13.2	UBX-MGA-BDS (0x13 0x03)	75
3.13.2.1	BeiDou ephemeris assistance for satellites svld 1..37	75
3.13.2.2	BeiDou almanac assistance	76
3.13.2.3	BeiDou health assistance	77
3.13.2.4	BeiDou UTC assistance	77
3.13.2.5	BeiDou ionosphere assistance	78
3.13.3	UBX-MGA-DBD (0x13 0x80)	78
3.13.3.1	Poll the navigation database	78
3.13.3.2	Navigation database dump entry	79
3.13.4	UBX-MGA-GAL (0x13 0x02)	79
3.13.4.1	Galileo ephemeris assistance	79
3.13.4.2	Galileo almanac assistance	80
3.13.4.3	Galileo GPS time offset assistance	81
3.13.4.4	Galileo UTC assistance	82
3.13.5	UBX-MGA-GLO (0x13 0x06)	82
3.13.5.1	GLONASS ephemeris assistance	82
3.13.5.2	GLONASS almanac assistance	83
3.13.5.3	GLONASS auxiliary time offset assistance	84
3.13.6	UBX-MGA-GPS (0x13 0x00)	84
3.13.6.1	GPS ephemeris assistance	85
3.13.6.2	GPS almanac assistance	86
3.13.6.3	GPS health assistance	86
3.13.6.4	GPS UTC assistance	87
3.13.6.5	GPS ionosphere assistance	87
3.13.7	UBX-MGA-INI (0x13 0x40)	88
3.13.7.1	Initial position assistance	88
3.13.7.2	Initial position assistance	89
3.13.7.3	Initial time assistance	89
3.13.7.4	Initial time assistance	90
3.13.7.5	Initial clock drift assistance	91
3.13.7.6	Initial frequency assistance	91
3.13.7.7	Attitude initialization data	92
3.13.8	UBX-MGA-QZSS (0x13 0x05)	92
3.13.8.1	QZSS ephemeris assistance	92
3.13.8.2	QZSS almanac assistance	93
3.13.8.3	QZSS health assistance	94

3.13.9	UBX-MGA-SF (0x13 0x10)	94
3.13.9.1	Sensor fusion initialization data	95
3.13.9.2	Sensor fusion initialization data	95
3.14	UBX-MON (0x0a)	95
3.14.1	UBX-MON-COMMS (0x0a 0x36)	95
3.14.1.1	Communication port information	96
3.14.2	UBX-MON-GNSS (0x0a 0x28)	96
3.14.2.1	Information message major GNSS selection	97
3.14.3	UBX-MON-HW (0x0a 0x09)	97
3.14.3.1	Hardware status	97
3.14.4	UBX-MON-HW2 (0x0a 0x0b)	98
3.14.4.1	Extended hardware status	98
3.14.5	UBX-MON-HW3 (0x0a 0x37)	99
3.14.5.1	I/O pin status	99
3.14.6	UBX-MON-IO (0x0a 0x02)	100
3.14.6.1	I/O system status	100
3.14.7	UBX-MON-MSGPP (0x0a 0x06)	100
3.14.7.1	Message parse and process status	101
3.14.8	UBX-MON-PATCH (0x0a 0x27)	101
3.14.8.1	Installed patches	101
3.14.9	UBX-MON-RF (0x0a 0x38)	102
3.14.9.1	RF information	102
3.14.10	UBX-MON-RXBUF (0x0a 0x07)	103
3.14.10.1	Receiver buffer status	103
3.14.11	UBX-MON-RXR (0x0a 0x21)	103
3.14.11.1	Receiver status information	103
3.14.12	UBX-MON-SPAN (0x0a 0x31)	103
3.14.12.1	Signal characteristics	103
3.14.13	UBX-MON-SPT (0x0a 0x2f)	104
3.14.13.1	Sensor production test	104
3.14.14	UBX-MON-SYS (0x0a 0x39)	106
3.14.14.1	Current system performance information	106
3.14.15	UBX-MON-TXBUF (0x0a 0x08)	107
3.14.15.1	Transmitter buffer status	107
3.14.16	UBX-MON-VER (0x0a 0x04)	108
3.14.16.1	Receiver and software version	108
3.15	UBX-NAV (0x01)	108
3.15.1	UBX-NAV-ATT (0x01 0x05)	108
3.15.1.1	Attitude solution	109
3.15.2	UBX-NAV-CLOCK (0x01 0x22)	109
3.15.2.1	Clock solution	109
3.15.3	UBX-NAV-COV (0x01 0x36)	109
3.15.3.1	Covariance matrices	110
3.15.4	UBX-NAV-DOP (0x01 0x04)	110
3.15.4.1	Dilution of precision	110
3.15.5	UBX-NAV-EELL (0x01 0x3d)	111
3.15.5.1	Position error ellipse parameters	111
3.15.6	UBX-NAV-EOE (0x01 0x61)	111
3.15.6.1	End of epoch	111
3.15.7	UBX-NAV-GEOFENCE (0x01 0x39)	112

3.15.7.1 Geofencing status.....	112
3.15.8 UBX-NAV-HPPOSECEF (0x01 0x13).....	112
3.15.8.1 High precision position solution in ECEF.....	112
3.15.9 UBX-NAV-HPPOSLLH (0x01 0x14).....	113
3.15.9.1 High precision geodetic position solution.....	113
3.15.10 UBX-NAV-ORB (0x01 0x34).....	114
3.15.10.1 GNSS orbit database info.....	114
3.15.11 UBX-NAV-PL (0x01 0x62).....	115
3.15.11.1 Protection level information.....	115
3.15.12 UBX-NAV-POSECEF (0x01 0x01).....	117
3.15.12.1 Position solution in ECEF.....	117
3.15.13 UBX-NAV-POSLLH (0x01 0x02).....	118
3.15.13.1 Geodetic position solution.....	118
3.15.14 UBX-NAV-PVAT (0x01 0x17).....	118
3.15.14.1 Navigation position velocity attitude time solution.....	118
3.15.15 UBX-NAV-PVT (0x01 0x07).....	120
3.15.15.1 Navigation position velocity time solution.....	120
3.15.16 UBX-NAV-RELPOSNED (0x01 0x3c).....	123
3.15.16.1 Relative positioning information in NED frame.....	123
3.15.17 UBX-NAV-SAT (0x01 0x35).....	124
3.15.17.1 Satellite information.....	124
3.15.18 UBX-NAV-SBAS (0x01 0x32).....	126
3.15.18.1 SBAS status data.....	126
3.15.19 UBX-NAV-SIG (0x01 0x43).....	127
3.15.19.1 Signal information.....	127
3.15.20 UBX-NAV-SLAS (0x01 0x42).....	129
3.15.20.1 QZSS L1S SLAS status data.....	129
3.15.21 UBX-NAV-STATUS (0x01 0x03).....	129
3.15.21.1 Receiver navigation status.....	130
3.15.22 UBX-NAV-TIMEBDS (0x01 0x24).....	131
3.15.22.1 BeiDou time solution.....	131
3.15.23 UBX-NAV-TIMEGAL (0x01 0x25).....	132
3.15.23.1 Galileo time solution.....	132
3.15.24 UBX-NAV-TIMEGLO (0x01 0x23).....	132
3.15.24.1 GLONASS time solution.....	132
3.15.25 UBX-NAV-TIMEGPS (0x01 0x20).....	133
3.15.25.1 GPS time solution.....	133
3.15.26 UBX-NAV-TIMELS (0x01 0x26).....	133
3.15.26.1 Leap second event information.....	134
3.15.27 UBX-NAV-TIMEQZSS (0x01 0x27).....	135
3.15.27.1 QZSS time solution.....	135
3.15.28 UBX-NAV-TIMEUTC (0x01 0x21).....	135
3.15.28.1 UTC time solution.....	135
3.15.29 UBX-NAV-VELECEF (0x01 0x11).....	136
3.15.29.1 Velocity solution in ECEF.....	137
3.15.30 UBX-NAV-VELNED (0x01 0x12).....	137
3.15.30.1 Velocity solution in NED frame.....	137
3.16 UBX-NAV2 (0x29).....	137
3.16.1 UBX-NAV2-CLOCK (0x29 0x22).....	138
3.16.1.1 Clock solution.....	138



3.16.2	UBX-NAV2-COV (0x29 0x36)	138
3.16.2.1	Covariance matrices	138
3.16.3	UBX-NAV2-DOP (0x29 0x04)	139
3.16.3.1	Dilution of precision	139
3.16.4	UBX-NAV2-EELL (0x29 0x3d)	139
3.16.4.1	Position error ellipse parameters	139
3.16.5	UBX-NAV2-EOE (0x29 0x61)	140
3.16.5.1	End of epoch	140
3.16.6	UBX-NAV2-POSECEF (0x29 0x01)	140
3.16.6.1	Position solution in ECEF	140
3.16.7	UBX-NAV2-POSLLH (0x29 0x02)	141
3.16.7.1	Geodetic position solution	141
3.16.8	UBX-NAV2-PVAT (0x29 0x17)	141
3.16.8.1	Navigation position velocity attitude time solution	141
3.16.9	UBX-NAV2-PVT (0x29 0x07)	143
3.16.9.1	Navigation position velocity time solution	143
3.16.10	UBX-NAV2-SAT (0x29 0x35)	146
3.16.10.1	Satellite information	146
3.16.11	UBX-NAV2-SBAS (0x29 0x32)	147
3.16.11.1	SBAS status data	147
3.16.12	UBX-NAV2-SIG (0x29 0x43)	148
3.16.12.1	Signal information	148
3.16.13	UBX-NAV2-SLAS (0x29 0x42)	150
3.16.13.1	QZSS L1S SLAS status data	150
3.16.14	UBX-NAV2-STATUS (0x29 0x03)	151
3.16.14.1	Receiver navigation status	151
3.16.15	UBX-NAV2-TIMEBDS (0x29 0x24)	152
3.16.15.1	BeiDou time solution	152
3.16.16	UBX-NAV2-TIMEGAL (0x29 0x25)	153
3.16.16.1	Galileo time solution	153
3.16.17	UBX-NAV2-TIMEGLO (0x29 0x23)	153
3.16.17.1	GLONASS time solution	154
3.16.18	UBX-NAV2-TIMEGPS (0x29 0x20)	154
3.16.18.1	GPS time solution	154
3.16.19	UBX-NAV2-TIMELS (0x29 0x26)	155
3.16.19.1	Leap second event information	155
3.16.20	UBX-NAV2-TIMEQZSS (0x29 0x27)	156
3.16.20.1	QZSS time solution	156
3.16.21	UBX-NAV2-TIMEUTC (0x29 0x21)	157
3.16.21.1	UTC time solution	157
3.16.22	UBX-NAV2-VELECEF (0x29 0x11)	158
3.16.22.1	Velocity solution in ECEF	158
3.16.23	UBX-NAV2-VELNED (0x29 0x12)	158
3.16.23.1	Velocity solution in NED frame	158
3.17	UBX-RXM (0x02)	159
3.17.1	UBX-RXM-COR (0x02 0x34)	159
3.17.1.1	Differential correction input status	159
3.17.2	UBX-RXM-MEASX (0x02 0x14)	160
3.17.2.1	Satellite measurements for RRLP	160
3.17.3	UBX-RXM-PMP (0x02 0x72)	161

3.17.3.1 PMP (LBAND) message.....	162
3.17.4 UBX-RXM-PMREQ (0x02 0x41).....	162
3.17.4.1 Power management request.....	162
3.17.4.2 Power management request.....	163
3.17.5 UBX-RXM-QZSSL6 (0x02 0x73).....	163
3.17.5.1 QZSS L6 message.....	163
3.17.6 UBX-RXM-RAWX (0x02 0x15).....	164
3.17.6.1 Multi-GNSS raw measurements.....	164
3.17.7 UBX-RXM-RLM (0x02 0x59).....	165
3.17.7.1 Galileo SAR short-RLM report.....	166
3.17.7.2 Galileo SAR long-RLM report.....	166
3.17.8 UBX-RXM-RTCM (0x02 0x32).....	166
3.17.8.1 RTCM input status.....	167
3.17.9 UBX-RXM-SPARTN (0x02 0x33).....	167
3.17.9.1 SPARTN input status.....	167
3.17.10 UBX-RXM-SPARTNKEY (0x02 0x36).....	168
3.17.10.1 Poll installed keys.....	168
3.17.10.2 Transfer dynamic SPARTN keys.....	168
3.18 UBX-SEC (0x27).....	169
3.18.1 UBX-SEC-SIG (0x27 0x09).....	169
3.18.1.1 Signal security information.....	169
3.18.2 UBX-SEC-SIGLOG (0x27 0x10).....	169
3.18.2.1 Signal security log.....	170
3.18.3 UBX-SEC-UNIQID (0x27 0x03).....	170
3.18.3.1 Unique chip ID.....	170
3.19 UBX-TIM (0x0d).....	171
3.19.1 UBX-TIM-TM2 (0x0d 0x03).....	171
3.19.1.1 Time mark data.....	171
3.19.2 UBX-TIM-TP (0x0d 0x01).....	172
3.19.2.1 Time pulse time data.....	172
3.19.3 UBX-TIM-VRFY (0x0d 0x06).....	173
3.19.3.1 Sourced time verification.....	173
3.20 UBX-UPD (0x09).....	173
3.20.1 UBX-UPD-SOS (0x09 0x14).....	173
3.20.1.1 Poll backup restore status.....	174
3.20.1.2 Create backup in flash.....	174
3.20.1.3 Clear backup in flash.....	174
3.20.1.4 Backup creation acknowledge.....	174
3.20.1.5 System restored from backup.....	175
<b>4 RTCM protocol.....</b>	<b>176</b>
4.1 RTCM introduction.....	176
4.2 RTCM 3.x configuration.....	176
4.3 RTCM messages overview.....	176
4.4 RTCM 3.3 messages.....	177
4.4.1 Message type 1001.....	177
4.4.1.1 L1-only GPS RTK observables.....	177
4.4.2 Message type 1002.....	178
4.4.2.1 Extended L1-only GPS RTK observables.....	178
4.4.3 Message type 1003.....	178
4.4.3.1 L1/L2 GPS RTK observables.....	178

4.4.4 Message type 1004.....	179
4.4.4.1 Extended L1/L2 GPS RTK observables.....	179
4.4.5 Message type 1005.....	179
4.4.5.1 Stationary RTK reference station ARP.....	179
4.4.6 Message type 1006.....	180
4.4.6.1 Stationary RTK reference station ARP with antenna height.....	180
4.4.7 Message type 1007.....	180
4.4.7.1 Antenna descriptor.....	181
4.4.8 Message type 1009.....	181
4.4.8.1 L1-only GLONASS RTK observables.....	181
4.4.9 Message type 1010.....	182
4.4.9.1 Extended L1-Only GLONASS RTK observables.....	182
4.4.10 Message type 1011.....	182
4.4.10.1 L1&L2 GLONASS RTK observables.....	182
4.4.11 Message type 1012.....	183
4.4.11.1 Extended L1&L2 GLONASS RTK observables.....	183
4.4.12 Message type 1033.....	183
4.4.12.1 Receiver and antenna descriptors.....	183
4.4.13 Message type 1074.....	184
4.4.13.1 GPS MSM4.....	184
4.4.14 Message type 1075.....	184
4.4.14.1 GPS MSM5.....	184
4.4.15 Message type 1077.....	185
4.4.15.1 GPS MSM7.....	185
4.4.16 Message type 1084.....	186
4.4.16.1 GLONASS MSM4.....	186
4.4.17 Message type 1085.....	186
4.4.17.1 GLONASS MSM5.....	186
4.4.18 Message type 1087.....	187
4.4.18.1 GLONASS MSM7.....	187
4.4.19 Message type 1094.....	187
4.4.19.1 Galileo MSM4.....	187
4.4.20 Message type 1095.....	188
4.4.20.1 Galileo MSM5.....	188
4.4.21 Message type 1097.....	188
4.4.21.1 Galileo MSM7.....	189
4.4.22 Message type 1124.....	189
4.4.22.1 BeiDou MSM4.....	189
4.4.23 Message type 1125.....	190
4.4.23.1 BeiDou MSM5.....	190
4.4.24 Message type 1127.....	190
4.4.24.1 BeiDou MSM7.....	190
4.4.25 Message type 1230.....	191
4.4.25.1 GLONASS L1 and L2 code-phase biases.....	191
<b>5 SPARTN protocol.....</b>	<b>192</b>
5.1 SPARTN introduction.....	192
5.2 SPARTN configuration.....	192
5.3 SPARTN messages overview.....	192
5.4 SPARTN messages.....	193
5.4.1 Message type 0, sub-type 0.....	193

5.4.1.1 GPS orbit, clock, bias (OCB).....	193
5.4.2 Message type 0, sub-type 1.....	193
5.4.2.1 GLONASS orbit, clock, bias (OCB).....	194
5.4.3 Message type 0, sub-type 2.....	194
5.4.3.1 Galileo orbit, clock, bias (OCB).....	194
5.4.4 Message type 0, sub-type 3.....	195
5.4.4.1 BeiDou orbit, clock, bias (OCB).....	195
5.4.5 Message type 0, sub-type 4.....	196
5.4.5.1 QZSS orbit, clock, bias (OCB).....	196
5.4.6 Message type 1, sub-type 0.....	197
5.4.6.1 GPS high-precision atmosphere correction (HPAC).....	197
5.4.7 Message type 1, sub-type 1.....	197
5.4.7.1 GLONASS high-precision atmosphere correction (HPAC).....	197
5.4.8 Message type 1, sub-type 2.....	198
5.4.8.1 Galileo high-precision atmosphere correction (HPAC).....	198
5.4.9 Message type 1, sub-type 3.....	199
5.4.9.1 BeiDou high-precision atmosphere correction (HPAC).....	199
5.4.10 Message type 1, sub-type 4.....	200
5.4.10.1 QZSS high-precision atmosphere correction (HPAC).....	200
5.4.11 Message type 2, sub-type 0.....	201
5.4.11.1 Geographic area definition (GAD).....	201
5.4.12 Message type 3, sub-type 0.....	201
5.4.12.1 Basic-precision atmosphere correction (BPAC).....	201
<b>6 Configuration interface.....</b>	<b>203</b>
6.1 Configuration database.....	203
6.2 Configuration items.....	203
6.3 Configuration layers.....	204
6.4 Configuration interface access.....	205
6.4.1 UBX protocol interface.....	205
6.5 Configuration data.....	205
6.6 Configuration transactions.....	206
6.7 Configuration reset behavior.....	207
6.8 Configuration overview.....	207
6.9 Configuration reference.....	208
6.9.1 CFG-BDS: BeiDou system configuration.....	208
6.9.2 CFG-GEOFENCE: Geofencing configuration.....	208
6.9.3 CFG-HW: Hardware configuration.....	209
6.9.4 CFG-I2C: Configuration of the I2C interface.....	211
6.9.5 CFG-I2CINPROT: Input protocol configuration of the I2C interface.....	211
6.9.6 CFG-I2COUTPROT: Output protocol configuration of the I2C interface.....	211
6.9.7 CFG-INFMSG: Information message configuration.....	211
6.9.8 CFG-MOT: Motion detector configuration.....	212
6.9.9 CFG-MSGOUT: Message output configuration.....	213
6.9.10 CFG-NAV2: Secondary output configuration.....	233
6.9.11 CFG-NAVHPG: High precision navigation configuration.....	233
6.9.12 CFG-NAVSPG: Standard precision navigation configuration.....	234
6.9.13 CFG-NMEA: NMEA protocol configuration.....	238
6.9.14 CFG-QZSS: QZSS system configuration.....	240
6.9.15 CFG-RATE: Navigation and measurement rate configuration.....	240
6.9.16 CFG-RINV: Remote inventory.....	241

6.9.17 CFG-RTCM: RTCM protocol configuration.....	241
6.9.18 CFG-SBAS: SBAS configuration.....	242
6.9.19 CFG-SEC: Security configuration.....	243
6.9.20 CFG-SFCORE: Sensor fusion (SF) core configuration.....	244
6.9.21 CFG-SFIMU: Sensor fusion (SF) inertial measurement unit (IMU) configuration.....	244
6.9.22 CFG-SFODO: Sensor fusion (SF) odometer configuration.....	245
6.9.23 CFG-SIGNAL: Satellite systems (GNSS) signal configuration.....	246
6.9.24 CFG-SPARTN: SPARTN configuration.....	247
6.9.25 CFG-SPI: Configuration of the SPI interface.....	247
6.9.26 CFG-SPIINPROT: Input protocol configuration of the SPI interface.....	248
6.9.27 CFG-SPIOUTPROT: Output protocol configuration of the SPI interface.....	248
6.9.28 CFG-TP: Time pulse configuration.....	248
6.9.29 CFG-TXREADY: TX ready configuration.....	250
6.9.30 CFG-UART1: Configuration of the UART1 interface.....	250
6.9.31 CFG-UART1INPROT: Input protocol configuration of the UART1 interface.....	251
6.9.32 CFG-UART1OUTPROT: Output protocol configuration of the UART1 interface.....	251
6.9.33 CFG-UART2: Configuration of the UART2 interface.....	252
6.9.34 CFG-UART2INPROT: Input protocol configuration of the UART2 interface.....	252
6.9.35 CFG-UART2OUTPROT: Output protocol configuration of the UART2 interface.....	253
6.9.36 CFG-USB: Configuration of the USB interface.....	253
6.9.37 CFG-USBINPROT: Input protocol configuration of the USB interface.....	253
6.9.38 CFG-USBOUTPROT: Output protocol configuration of the USB interface.....	254
6.10 Legacy UBX message fields reference.....	254
<b>Configuration defaults.....</b>	<b>260</b>
<b>Related documents.....</b>	<b>283</b>
<b>Revision history.....</b>	<b>284</b>

# 1 General information

## 1.1 Document overview

This document describes the interface of the u-blox F9 high precision sensor fusion GNSS receiver. The interface consists of the following parts:

- [NMEA protocol](#)
- [UBX protocol](#)
- [RTCM protocol](#)
- [SPARTN protocol](#)
- [Configuration interface](#)



Some of the features described here may not be available in the receiver, and some may require specific configurations to be enabled. See the applicable data sheet for availability of the features and the integration manual for instructions for enabling them.



Previous versions of u-blox receiver documentation combined general receiver description and interface specification. In the current documentation the receiver description is included in the integration manual.


See also [Related documents](#).

## 1.2 Firmware and protocol versions

u-blox generation 9 receivers execute firmware from internal ROM or from internal code-RAM. If the firmware image is stored in a flash it is loaded into the code-RAM before execution. It is also possible to store the firmware image in the host system. The firmware is then loaded into the code-RAM from the host processor. (Loading the firmware from the host processor is not supported in all products.) If there is no external firmware image, then the firmware is executed from the ROM.

The location and the version of the boot loader and the currently running firmware can be found in the boot screen and in the [UBX-MON-VER](#) message. If the firmware has been loaded from a connected flash or from the host processor, it is indicated by text "EXT". When the receiver is started, the boot screen is output automatically in [UBX-INF-NOTICE](#) or [NMEA-Standard-TXT](#) messages if configured using [CFG-INFMSG](#). The [UBX-MON-VER](#) message can be polled using the [UBX polling mechanism](#).

The following u-center screenshots show an example of a u-blox receiver running firmware loaded from flash:

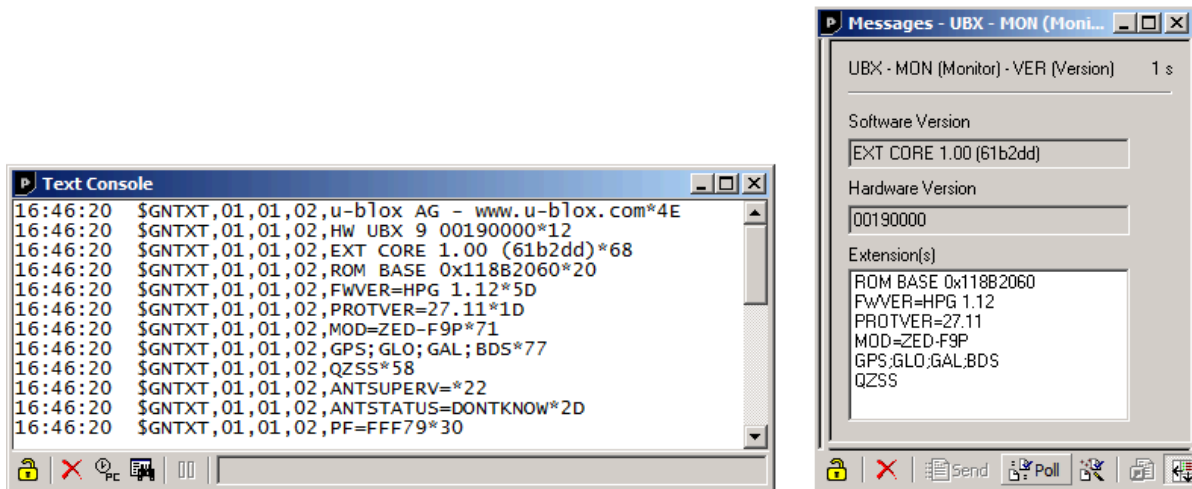





The following information is available (✓) from the boot screen (B) and the UBX-MON-VER message (M):

B	M	Example	Information
✓		u-blox AG - www.u-blox.com	Start of the boot screen.
✓		HW UBX 9 00190000	Hardware version of the u-blox receiver.
	✓	00190000	
✓	✓	EXT CORE 1.00 (61b2dd)	Base (CORE) firmware version and revision number, loaded from external memory (EXT).
		EXT LAP 1.00 (12a3bc)	Product firmware version and revision number, loaded from external memory (EXT). Available only in some firmware versions. See below for a list of product acronyms.
✓	✓	ROM BASE 0x118B2060	Revision number of the underlying boot loader firmware in ROM.
✓	✓	FWVER=HPG 1.12	Product firmware version number, where: <ul style="list-style-type: none"> <li>• SPG = Standard precision GNSS product</li> <li>• HPG = High precision GNSS product</li> <li>• ADR = Automotive dead reckoning product</li> <li>• TIM = Time sync product</li> <li>• LAP = Lane accurate positioning product</li> <li>• HPS = High precision sensor fusion product</li> <li>• DBS = Dual band standard precision</li> <li>• MDR = Multi-mode dead reckoning product</li> <li>• PMP = L-Band Inmarsat point-to-multipoint receiver</li> <li>• QZS = QZSS L6 centimeter level augmentation service (CLAS) message receiver</li> <li>• DBD = Dual band dead reckoning product</li> <li>• LDR = ROM bootloader, no GNSS functionality</li> </ul>
✓	✓	PROTVER=34.00	Supported protocol version.
✓	✓	MOD=ZED-F9P	Module name (if available).
✓	✓	GPS;GLO;GAL;BDS	List of supported major GNSS (see <a href="#">GNSS identifiers</a> ).
✓	✓	SBAS;QZSS	List of supported augmentation systems (see <a href="#">GNSS identifiers</a> ).



B M Example	Information
✓ ANTISUPERV=AC SD PDoS SR	Configuration of the antenna supervisor (if available), where: <ul style="list-style-type: none"> <li>• AC = Active antenna control enabled</li> <li>• SD = Short circuit detection enabled</li> <li>• OD = Open circuit detection enabled</li> <li>• PDoS = Short circuit power down logic enabled</li> <li>• SR = Automatic recovery from short state enabled</li> </ul>
✓ PF=FFF79	Product configuration.
✓ BD=E01C	GNSS band configuration.

-  The "FWVER" product firmware version indicates which firmware is currently running. This is referred to as "firmware version" in this and other documents.
-  The revision numbers should only be used to identify a known firmware version. They are not necessarily numeric nor are they guaranteed to increase with newer firmware versions.
-  Similarly, firmware version numbers can have additional non-numeric information appended, such as in "5.00B03".
-  Not every entry is output by all u-blox receivers. The availability of some of the information depends on the product, the firmware location and the firmware version.

The product firmware version and the base firmware version relate to the protocol version:



Product firmware version	Base firmware version	Protocol version
HPS 1.00	EXT CORE 1.00 (500086)	33.00
HPS 1.20	EXT CORE 1.00 (a669b8)	33.20
HPS 1.21	EXT CORE 1.00 (e2b374)	33.21
HPS 1.30	EXT CORE 1.00 (a59682)	33.30

## 1.3 Receiver configuration

u-blox positioning receivers are fully configurable with UBX protocol messages. The configuration used by the receiver during normal operation is called the "current configuration". The current configuration can be changed during normal operation by sending [UBX-CFG-VALSET](#) messages over any I/O port. The receiver will change its current configuration immediately after receiving a configuration message. The receiver will always use the current configuration only.

The current configuration is loaded from permanent configuration hard-coded in the receiver firmware (the defaults) and from non-volatile memory (user configuration) on startup of the receiver. Changes made to the current configuration at run-time will be lost when there is a power cycle, a hardware reset or a (complete) controlled software reset (see [Configuration reset behavior](#)).

See [Configuration interface](#) for a detailed description of the receiver configuration system, the explanation of the configuration concept and its principles and interfaces.

-  The configuration interface has changed from earlier u-blox positioning receivers. There is some backwards compatibility provided in UBX-CFG configuration messages. Users are strongly advised to only use the [Configuration interface](#). See also [Legacy UBX message fields reference](#).
-  See the integration manual for a basic receiver configuration most commonly used.

## 1.4 Message naming

Message names are written in full with the parts of the name separated by hyphens ("-"). The full message name consists of the protocol name (e.g., *UBX*), the class name (e.g. *NAV*) and the message



name (e.g. *PVT*). For example the receiver software version information message is referred to as *UBX-MON-VER*. Similarly, the *NMEA-Standard-GGA* is the NMEA standard message (sentence) with the global positioning fix data.

References to fields of the message add the field name separated by a dot ("."), e.g. *UBX-MON-VER.swVersion*.

Some messages use a fourth level of naming, called the message version. One example is the *UBX-MGA-GPS* message for GPS assistance data, which exists in versions for ephemerides (*UBX-MGA-GPS-EPH*) and almanacs (*UBX-MGA-GPS-ALM*).

Names of configuration items are of the form *CFG-GROUP-ITEM*. For example, *CFG-NAVSPG-DYNMODEL* refers to the navigation dynamic platform model the receiver uses. Constants add a fourth level to the item name, such as *CFG-NAVSPG-DYNMODEL-AUTOMOT* for the automotive platform model. In the context of describing an item's value, only the last part of the constant name can be used (e.g. "set *CFG-NAVSPG-DYNMODEL* to *PORT* for portable applications").

## 1.5 GNSS, satellite, and signal identifiers

### 1.5.1 Overview

Many [UBX protocol](#) messages contain information about specific satellites. Any single satellite can be identified by a `gnssId` field indicating the GNSS the satellite is part of and an `svId` (SV for space vehicle) field indicating the number of the satellite in that system. Usually, the `svId` is the native number associated with the satellite in the specific GNSS. For example the GLONASS SV4 is identified as `gnssId 6, svId 4`, while the GPS SV4 is `gnssId 0, svId 4`.

Some legacy UBX protocol messages combine both the satellite number and the GNSS identification into a one-byte (type U1) field. See the single `svId` mapping in [Satellite identifiers](#) to identify the corresponding GNSS and satellite.

GLONASS satellites can be tracked before they have been identified. In UBX messages, the unknown satellites will be reported with `svId 255`. In NMEA messages, the unknown satellites will be null (empty) fields. Product-related documentation and u-center will use R? to label unidentified GLONASS satellites.

Signal identifiers are used when different signals from the same GNSS satellite need to be distinguished (e.g. in the [UBX-NAV-SIG](#) message). A separate `sigId` field identifies the signal. These signal identifiers are only valid when combined with a GNSS identifier (`gnssId` field).

The [NMEA protocol](#) (version 4.10 and later) identifies GNSS satellites with a one-digit system ID and a two-digit satellite number. u-blox receivers support this method in their NMEA output when "strict" SV numbering is selected. In most cases this is the default setting, but it can be checked or changed using the [Configuration interface](#) (see also [NMEA GNSS, satellite, and signal numbering](#)).

In order to support some GNSS (e.g. BeiDou, Galileo, QZSS), which are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202.

The NMEA standard defines signal identifiers to distinguish different signals sent by a single GNSS satellite (e.g. L2 CL and CM). u-blox positioning receivers use those identifiers for signal identification, as far as the corresponding standard is supported in a particular product.



Note that the following sections are a generic overview for different u-blox positioning receivers. A particular product may not support all of the described GNSS identifiers, satellite numbers, signal identifiers or combinations thereof.

### 1.5.2 GNSS identifiers

Table 1 lists each GNSS along with the GNSS identifier ([UBX protocol](#)), the NMEA system identifiers ([NMEA protocol](#)), and abbreviations used in this document:

GNSS	Abbreviations		UBX gnssId	NMEA system ID		
				2.3 - 4.0	4.10	4.11
GPS	GPS	G	0	1	1	1
SBAS	SBAS	S	1	1	1	1
Galileo	GAL	E	2	n/a	3	3
BeiDou	BDS	B	3	n/a	(4) <sup>1</sup>	4
QZSS	QZSS	Q	5	n/a	(1) <sup>1</sup>	5
GLONASS	GLO	R	6	2	2	2
NavIC	NavIC	N	7	n/a	n/a	6

Table 1: GNSS identifiers

See also [NMEA Talker ID](#).

### 1.5.3 Satellite identifiers

The satellite numbering scheme for the [UBX protocol](#) is provided in [Table 2](#). The satellite numbering scheme for the [NMEA protocol](#) is provided in [Table 3](#).

GNSS	SV Range	gnssId:svId	single svid
GPS	G1-G32	0:1-32	1-32
SBAS	S120-S158	1:120-158	120-158
Galileo	E1-E36	2:1-36	211-246
BeiDou	B1-B5	3:1-5	159-163
	B6-B37	3:6-37	33-64
	B38-B63	3:38-63	n/a
QZSS	Q1-Q10	5:1-10	193-202
GLONASS	R1-R32	6:1-32	65-96
	R?	6:255	255
NavIC	N1-N7	7:1-7	247-253
	N8-N14	7:8-14	n/a

Table 2: UBX protocol satellite numbering scheme

GNSS	SV Range	NMEA 2.3 - 4.0		NMEA 4.10		NMEA 4.11	
		strict	extended	strict	extended	strict	extended
GPS	G1-G32	1-32	1-32	1-32	1-32	1-32	1-32
SBAS	S120-S158	33-64	33-64, 152-158	33-64	33-64, 152-158	33-64	33-64, 152-158
Galileo	E1-E36	n/a	301-336	1-36	1-36	1-36	1-36
BeiDou	B1-B5	n/a	401-405	1-5	1-5	1-5	1-5
	B6-B37	n/a	406-437	6-37	6-37	6-37	6-37

<sup>1</sup> While not defined by NMEA 4.10, u-blox receivers in this mode will use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.

GNSS	SV Range	NMEA 2.3 - 4.0		NMEA 4.10		NMEA 4.11	
		strict	extended	strict	extended	strict	extended
	B38-B63	n/a	438-463	38-63	38-63	38-63	38-63
QZSS	Q1-Q10	n/a	193-202	n/a	193-202	1-10	1-10
GLONASS	R1-R32	65-96	65-96	65-96	65-96	65-96	65-96
	R?	null	null	null	null	null	null
NavIC	N1-N7	n/a	n/a	n/a	n/a	1-7	1-7
	N8-N14	n/a	n/a	n/a	n/a	8-14	8-14

**Table 3: NMEA protocol satellite numbering scheme**

### 1.5.4 Signal identifiers

A summary of all the signal identification schemes used in the [NMEA protocol](#) and the [UBX protocol](#) is provided in the following table. (Only a subset of the signals is supported by each product.) In the NMEA protocol, system and signal identifiers are in hexadecimal format. An unknown signal identifier is presented as 0 in the NMEA protocol.

Signal	UBX Protocol		NMEA Protocol 4.10		NMEA Protocol 4.11	
	gnssId	sigId	System ID	Signal ID	System ID	Signal ID
GPS L1C/A <sup>2</sup>	0	0	1	1	1	1
GPS L2 CL	0	3	1	6	1	6
GPS L2 CM	0	4	1	5	1	5
GPS L5 I	0	6	1	7	1	7
GPS L5 Q	0	7	1	8	1	8
SBAS L1C/A <sup>2</sup>	1	0	1	1	1	1
Galileo E1 C <sup>2</sup>	2	0	3	7	3	7
Galileo E1 B <sup>2</sup>	2	1	3	7	3	7
Galileo E5 aI	2	3	3	1	3	1
Galileo E5 aQ	2	4	3	1	3	1
Galileo E5 bI	2	5	3	2	3	2
Galileo E5 bQ	2	6	3	2	3	2
BeiDou B1I D1 <sup>2</sup>	3	0	(4) <sup>3</sup>	(1) <sup>4</sup>	4	1
BeiDou B1I D2 <sup>2</sup>	3	1	(4) <sup>3</sup>	(1) <sup>4</sup>	4	1
BeiDou B2I D1	3	2	(4) <sup>3</sup>	(3) <sup>4</sup>	4	B
BeiDou B2I D2	3	3	(4) <sup>3</sup>	(3) <sup>4</sup>	4	B
BeiDou B1 Cp (pilot)	3	5	(4) <sup>3</sup>	N/A	4	3
BeiDou B1 Cd (data)	3	6	(4) <sup>3</sup>	N/A	4	3
BeiDou B2 ap (pilot)	3	7	(4) <sup>3</sup>	N/A	4	5
BeiDou B2 ad (data)	3	8	(4) <sup>3</sup>	N/A	4	5
QZSS L1C/A <sup>2</sup>	5	0	(1) <sup>3</sup>	(1) <sup>4</sup>	5	1
QZSS L1S	5	1	(1) <sup>3</sup>	(4) <sup>4</sup>	5	4

<sup>2</sup> UBX messages that do not have an explicit `sigId` field contain information about the subset of signals marked.

<sup>3</sup> While not defined by NMEA 4.10, u-blox receivers in this mode will use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.

<sup>4</sup> BeiDou and QZSS signal ID are not defined in the NMEA protocol version 4.10. Values shown in the table are only valid for u-blox products and, for QZSS signal ID, if extended satellite numbering is enabled.

Signal	UBX Protocol		NMEA Protocol 4.10		NMEA Protocol 4.11	
	gnssld	sigld	System ID	Signal ID	System ID	Signal ID
QZSS L2 CM	5	4	(1) <sup>3</sup>	(5) <sup>4</sup>	5	5
QZSS L2 CL	5	5	(1) <sup>3</sup>	(6) <sup>4</sup>	5	6
QZSS L5 I	5	8	(1) <sup>3</sup>	N/A	5	7
QZSS L5 Q	5	9	(1) <sup>3</sup>	N/A	5	8
GLONASS L1 OF <sup>2</sup>	6	0	2	1	2	1
GLONASS L2 OF	6	2	2	3	2	3
NavIC L5 A <sup>2</sup>	7	0	N/A	N/A	6	1

**Table 4: Signal identifiers**

## 1.6 Message types

The following message types are defined:

Message type	Description
Input	Messages that are input to the receiver and never output. E.g. <a href="#">UBX-MGA-GPS-EPH</a> .
Output	Messages that are output by the receiver in no particular interval and never input. E.g. <a href="#">UBX-ACK-ACK</a> .
Input/output	Messages that can be output by or input to the receiver. E.g. <a href="#">UBX-MGA-DBD-DATA0</a> .
Periodic	Messages that are output in regular intervals but cannot be polled. E.g. <a href="#">UBX-NAV-EOE</a> .
Periodic/pollable	Messages that are output in regular intervals and can be polled. E.g. <a href="#">UBX-NAV-PVT</a> .
Command	Messages that are a command to the receiver. Similar to type <i>Input</i> these are input-only. E.g. <a href="#">UBX-CFG-RST</a> .
Get	Output-only configuration or command messages. E.g. <a href="#">UBX-CFG-DAT</a> .
Set	Input-only configuration or command messages. E.g. <a href="#">UBX-CFG-VALDEL</a> .
Get/set	Input/output configuration or command messages. E.g. <a href="#">UBX-CFG-NAVX5</a> .
Polled	Non-periodic messages that can only be polled. E.g. <a href="#">UBX-MON-VER</a> .
Poll request	Poll request. E.g. <a href="#">UBX-MGA-DBD-POLL</a> .


## 2 NMEA protocol

The following sections give an overview of the NMEA messages used by u-blox positioning receivers.

By default, the NMEA messages sent by u-blox positioning receivers are based on the NMEA 0183 version 4.11 standard. For further information on the NMEA standard, refer to the *NMEA 0183 Standard for Interfacing Marine Electronic Devices*, Version 4.11, November 2018, which is available on <http://www.nmea.org/>.

### 2.1 NMEA frame structure

The following figure shows the structure of a NMEA protocol message (called "sentences" in the standard).

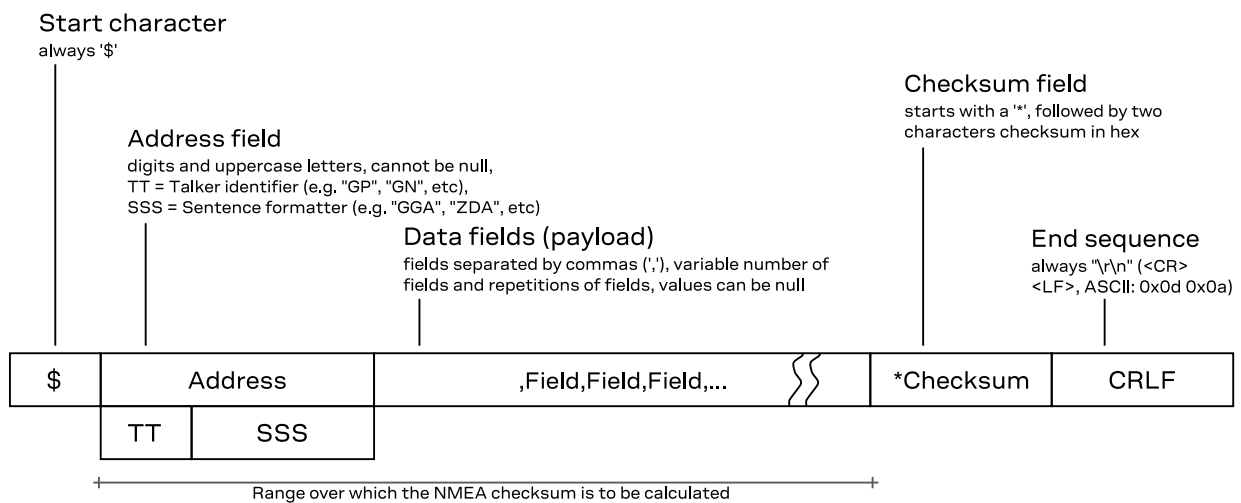

#### Example

\$	GP	ZDA	,141644.00,22,03,2002,00,00	*67	\r\n
----	----	-----	-----------------------------	-----	------

### 2.2 NMEA protocol configuration

The [NMEA protocol](#) on u-blox receivers can be configured for customer applications by using the [Configuration interface](#) (CFG-NMEA-\* items).

Several NMEA standard versions are supported. Version 4.11 (not in all products), 4.10, 4.00, 2.3, or 2.1 can be configured. See [Configuration defaults](#) for the default version. See [CFG-NMEA-PROTVER](#) to configure the version. See [NMEA multi-GNSS operation](#) and [NMEA data fields](#) for details on how this affects the output.

The following filtering flags can be used to configure the output of some NMEA message fields:

Filter	Configuration Item	Description
Position filtering	<a href="#">CFG-NMEA-OUT_INVFIX</a>	Enable to permit positions from failed or invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Valid position filtering	<a href="#">CFG-NMEA-OUT_MSKFIX</a>	Enable to permit positions from invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Time filtering	<a href="#">CFG-NMEA-OUT_INVTIME</a>	Enable to permit the receiver's best knowledge of time to be output, even though it might be wrong.

Filter	Configuration Item	Description
Date filtering	<a href="#">CFG-NMEA-OUT_INVDATE</a>	Enable to permit the receiver's best knowledge of date to be output, even though it might be wrong.
GPS-only filtering	<a href="#">CFG-NMEA-OUT_ONLYGPS</a>	Enable to restrict output to only report GPS satellites.
Track filtering	<a href="#">CFG-NMEA-OUT_FROZENCOG</a>	Enable to permit course over ground (COG) to be reported even when it would otherwise be frozen.

The following filtering flags can be used to configure the output of some NMEA message flags:

Mode	Configuration Item	Description
Compatibility mode	<a href="#">CFG-NMEA-COMPAT</a>	Some older NMEA applications expect the NMEA output to be formatted in a specific way, for example, they will only work if the latitude and longitude have exactly four digits behind the decimal point. u-blox receivers offer a compatibility mode to support these legacy applications.
Consideration mode	<a href="#">CFG-NMEA-CONSIDER</a>	u-blox receivers use a sophisticated signal quality detection scheme, in order to produce the best possible position output. This algorithm considers all SV measurements, and may eventually decide to only use a subset thereof, if it improves the overall position accuracy. If consideration mode is enabled, all satellites, which were considered for navigation, are communicated as being used for the position determination. If consideration mode is disabled, only those satellites which after the consideration step remained in the position output are marked as being used.
Limit length mode	<a href="#">CFG-NMEA-LIMIT82</a>	Enabling this mode will limit the NMEA sentence length to a maximum of 82 characters.
High precision mode	<a href="#">CFG-NMEA-HIGHPREC</a>	Enabling this mode increases precision of the position output. Latitude and longitude then have seven digits after the decimal point, and altitude has three digits after the decimal point. Note: The high precision mode cannot be set in conjunction with either compatibility mode or Limit82 mode.

The following extended configuration options are available:

Option	Configuration Item(s)	Description
GNSS to filter	<a href="#">CFG-NMEA-FILT_GPS</a> etc.	Filters satellites based on the GNSS they belong to.
Satellite numbering	<a href="#">CFG-NMEA-SVNUMBERING</a>	This field configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also <a href="#">Satellite identifiers</a> .
Main Talker ID	<a href="#">CFG-NMEA-MAINTALKERID</a>	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see configuration items <a href="#">CFG-SIGNAL*</a> ). This field enables the main Talker ID to be overridden. See also <a href="#">NMEA Talker ID</a> .
GSV Talker ID	<a href="#">CFG-NMEA-GSVTALKERID</a>	By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden.
BDS Talker ID	<a href="#">CFG-NMEA-BDSTALKERID</a>	By default the Talker ID for BeiDou is "GB". This field enables the BeiDou Talker ID to be overridden.

## 2.3 NMEA-proprietary messages

The NMEA standard allows for proprietary, manufacturer-specific messages to be added. These shall be marked with a manufacturer mnemonic. The mnemonic assigned to u-blox is UBX and is used for all non-standard messages. These proprietary NMEA messages therefore have the address field set to PUBX. The first data field in a PUBX message identifies the message number with two digits.

## 2.4 NMEA multi-GNSS operation

Many applications that process NMEA messages assume that only a single GNSS is active. However, when multiple GNSS are configured, the NMEA specification requires the output to change in the following ways:

**Main Talker ID** The main [NMEA Talker ID](#) is "GN" (e.g. instead of "GP" for a GPS-only receiver).

**GSV Talker and Signal IDs** The [GSV](#) message reports the signal strength of the visible satellites. In multi-GNSS operation, other messages use the main Talker ID "GN" but the Talker ID in the GSV message is specific to the GNSS it is reporting information for.

The GSV messages are grouped by the Talker and Signal IDs. Separate sets of GSV messages are sent for each GNSS and signal. The Signal ID of a satellite may be unknown. Such satellites are presented in their own set with Signal ID 0. Grouping the GSV messages by the Signal ID is supported in firmware versions 27.12 and later.

**Multiple GSA and GRS messages** Multiple [GSA](#) and [GRS](#) messages are output for each fix, one for each GNSS. This may confuse applications that assume they are output only once per position fix (as is the case for a single GNSS receiver).

**GGA Talker IDs** The NMEA specification indicates that the GGA message is GPS-specific. However, u-blox receivers support the output of a GGA message for each of the Talker IDs.

**BeiDou and Galileo** Only NMEA version 4.10 and later have support for these systems.

**QZSS** Only NMEA version 4.11 and later have support for this system.

**Extended satellite numbering** In order to support some GNSS (e.g. BeiDou, Galileo, QZSS) that are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible, but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202. See [NMEA protocol configuration](#) and [Satellite identifiers](#).

## 2.5 NMEA data fields

Various data fields in NMEA messages depend on [NMEA protocol configuration](#) or require a definition for their interpretation.

### 2.5.1 NMEA Talker ID

One of the ways the NMEA standard differs depending on the GNSS is by using a two-letter message identifier, the "Talker ID". The specific Talker ID used by a u-blox receiver will depend on the product and its configuration. The table below shows the Talker ID that will be used for various GNSS configurations by default.

GNSS	Talker ID	Comments
GPS, SBAS	GP	NMEA 2.3+
GLONASS	GL	NMEA 2.3+
Galileo	GA	NMEA 4.10+
BeiDou	GB	NMEA 4.10+ (official NMEA only since 4.11)
NavIC	GI	NMEA 4.11+
QZSS	GQ	NMEA 4.11+ (GP for NMEA 2.3 - 4.10)

GNSS	Talker ID	Comments
Any combination of GNSS	GN	

## 2.5.2 NMEA extra fields

The following extra fields are available in NMEA 4.10 and later.

Message	Extra fields
NMEA-Standard-GBS	systemId and signalId
NMEA-Standard-GNS	navStatus
NMEA-Standard-GRS	systemId and signalId
NMEA-Standard-GSA	systemId
NMEA-Standard-GSV	signalId
NMEA-Standard-RMC	navStatus

## 2.5.3 NMEA latitude and longitude format

According to the NMEA standard, latitude and longitude are output in the format *degrees, minutes and (decimal) fractions of minutes*. To convert to *degrees and fractions of degrees*, or *degrees, minutes, seconds and fractions of seconds*, the *minutes* and *fractional minutes* parts need to be converted. For example:

Format	Latitude	Longitude
Receiver output	\$GNRMC,014230.00,A,4722.80340,N,00831.68218,E,0.000,,120477,,,A,V*14	
(d)ddmm.mmmmm	4722.80340 North	00831.68218 East
Degrees and minutes	47 degrees, 22.80340 minutes	8 degrees, 31.68218 minutes
Degrees	47.38005667 degrees	8.52803633 degrees
Degrees, minutes and seconds	47 degrees, 22 minutes, 48.2040 seconds	8 degrees, 31 minutes, 40.9308 seconds

## 2.5.4 NMEA GNSS, satellite, and signal numbering

See [GNSS, satellite, and signal identifiers](#) for details on how GNSS, satellites and signals are numbered in the NMEA protocol.

NMEA defines satellite numbering systems for some, but not all GNSS. The exact behavior depends on the configured NMEA protocol version and ("extended" or "strict") mode. See [NMEA protocol configuration](#) for details.

## 2.5.5 NMEA position fix flags

This section shows how u-blox positioning receivers implement the NMEA protocol and the conditions determining how flags are set.

The following flags are used in NMEA 4.10 and later.

NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS
Field	status <sup>5</sup>	quality <sup>6</sup>	posMode <sup>7</sup>	posMode <sup>7</sup>
No position fix (at power-up, after losing satellite lock)	V	0	N	N

<sup>5</sup> Possible *status* values: V = data invalid, A = data valid

<sup>6</sup> Possible values for *quality*: 0 = No fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

<sup>7</sup> Possible values for *posMode*: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix, F = RTK float, R = RTK fixed. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.



NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS
Field	status <sup>5</sup>	quality <sup>6</sup>	posMode <sup>7</sup>	posMode <sup>7</sup>
GNSS fix, but user limits exceeded	V	0	N	N
Dead reckoning fix, but user limits exceeded	V	6	E	E
Dead reckoning fix	A	6	E	E
RTK float	A	5	D	F
RTK fixed	A	4	D	R
2D GNSS fix	A	1 / 2	A / D	A / D
3D GNSS fix	A	1 / 2	A / D	A / D
Combined GNSS/dead reckoning fix	A	1 / 2	A / D	A / D

In high precision GNSS (HPG) products it is recommended to select NMEA version 4.10 or above. Earlier versions do not support the float RTK (F) and real time kinematic (R) mode indicator flags in all messages.

The following flags are used in NMEA 2.3 - 4.0.

NMEA Message	GLL, RMC	GGA	GSA	GLL, VTG, RMC, GNS
Field	status <sup>8</sup>	quality <sup>9</sup>	navMode <sup>10</sup>	posMode <sup>11</sup>
No position fix (at power-up, after losing satellite lock)	V	0	1	N
GNSS fix, but user limits exceeded	V	0	1	N
Dead reckoning fix, but user limits exceeded	V	6	2	E
Dead reckoning fix	A	6	2	E
2D GNSS fix	A	1 / 2	2	A / D
3D GNSS fix	A	1 / 2	3	A / D
Combined GNSS/dead reckoning fix	A	1 / 2	3	A / D

The flags in NMEA 2.1 and earlier are the same as NMEA 2.3 but with the following differences:

- The *posMode* field is not output for GLL, RMC and VTG messages (each message has one field less).
- The GGA *quality* field is set to 1 (instead of 6) for both types of dead reckoning fix.

## 2.5.6 NMEA output of invalid or unknown data<sup>8</sup>

By default the receiver will not output invalid data. In such cases, it will output empty fields. See [NMEA protocol configuration](#) for options to adjust this behavior.

A valid position fix is reported as follows:

```
$GPGLL,4717.11634,N,00833.91297,E,124923.00,A,A*6E
```

An invalid position fix (but valid time) is reported as follows:

```
$GPGLL,,,,,124924.00,V,N*42
```

<sup>8</sup> Possible values for *status*: V = data invalid, A = data valid

<sup>9</sup> Possible values for *quality*: 0 = no fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

<sup>10</sup> Possible values for *navMode*: 1 = No fix, 2 = 2D fix, 3 = 3D fix

<sup>11</sup> Possible values for *posMode*: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.

If the time is unknown (e.g. during a cold start):

```
$GPGLL,,,,,,V,N*64
```



Unlike the NMEA standard behavior to invalid data, dead reckoning products always report a position. It is marked as invalid (V) when the user limits are exceeded or valid (A) if the user limits are met.

## 2.6 NMEA messages overview

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
<b>NMEA-Standard – Standard NMEA messages</b>		
NMEA-Standard-DTM	0xf0 0x0a	• Datum reference (Output)
NMEA-Standard-GAQ	0xf0 0x45	• Poll a standard message (Talker ID GA) (Poll request)
NMEA-Standard-GBQ	0xf0 0x44	• Poll a standard message (Talker ID GB) (Poll request)
NMEA-Standard-GBS	0xf0 0x09	• GNSS satellite fault detection (Output)
NMEA-Standard-GGA	0xf0 0x00	• Global positioning system fix data (Output)
NMEA-Standard-GLL	0xf0 0x01	• Latitude and longitude, with time of position fix and status (Output)
NMEA-Standard-GLQ	0xf0 0x43	• Poll a standard message (Talker ID GL) (Poll request)
NMEA-Standard-GNQ	0xf0 0x42	• Poll a standard message (Talker ID GN) (Poll request)
NMEA-Standard-GNS	0xf0 0x0d	• GNSS fix data (Output)
NMEA-Standard-GPQ	0xf0 0x40	• Poll a standard message (Talker ID GP) (Poll request)
NMEA-Standard-GQQ	0xf0 0x47	• Poll a standard message (Talker ID GQ) (Poll request)
NMEA-Standard-GRS	0xf0 0x06	• GNSS range residuals (Output)
NMEA-Standard-GSA	0xf0 0x02	• GNSS DOP and active satellites (Output)
NMEA-Standard-GST	0xf0 0x07	• GNSS pseudorange error statistics (Output)
NMEA-Standard-GSV	0xf0 0x03	• GNSS satellites in view (Output)
NMEA-Standard-RLM	0xf0 0x0b	• Return link message (RLM) (Output)
NMEA-Standard-RMC	0xf0 0x04	• Recommended minimum data (Output)
NMEA-Standard-THS	0xf0 0x0e	• True heading and status (Output)
NMEA-Standard-TXT	0xf0 0x41	• Text transmission (Output)
NMEA-Standard-VTG	0xf0 0x05	• Course over ground and ground speed (Output)
NMEA-Standard-ZDA	0xf0 0x08	• Time and date (Output)
<b>NMEA-NAV2 – Secondary output NMEA messages</b>		
NMEA-NAV2-GGA	0xf7 0x00	• Global positioning system fix data (Output)
NMEA-NAV2-GLL	0xf7 0x01	• Latitude and longitude, with time of position fix and status. (Output)
NMEA-NAV2-GNS	0xf7 0x0d	• GNSS fix data (Output)
NMEA-NAV2-GSA	0xf7 0x02	• GNSS DOP and active satellites (Output)
NMEA-NAV2-RMC	0xf7 0x04	• Recommended minimum data (Output)
NMEA-NAV2-VTG	0xf7 0x05	• Course over ground and ground speed (Output)
NMEA-NAV2-ZDA	0xf7 0x08	• Time and date (Output)
<b>NMEA-PUBX – u-blox proprietary NMEA messages</b>		
NMEA-PUBX-CONFIG	0xf1 0x41	• Set protocols and baud rate (Set)
NMEA-PUBX-POSITION	0xf1 0x00	• Poll a PUBX,00 message (Poll request) • Lat/Long position data (Output)
NMEA-PUBX-RATE	0xf1 0x40	• Set NMEA message output rate (Set)
NMEA-PUBX-SVSTATUS	0xf1 0x03	• Poll a PUBX,03 message (Poll request)
NMEA-PUBX-TIME	0xf1 0x04	• Poll a PUBX,04 message (Poll request)

## 2.7 Standard messages

Standard NMEA messages as defined by the NMEA 0183 standard. See [NMEA protocol](#) for details.

### 2.7.1 DTM

#### 2.7.1.1 Datum reference

<b>Message</b>	<b>NMEA-Standard-DTM</b>				
	<b>Datum reference</b>				
<i>Type</i>	Output				
<i>Comment</i>	This message gives the difference between the current datum and the reference datum. The current datum is set to WGS84 by default. The reference datum cannot be changed and is always set to WGS84.				
<i>Information</i>	Class/ID: 0xF0 0x0a		Number of fields: 11		
<i>Structure</i>	\$xxDTM, datum, subDatum, lat, NS, lon, EW, alt, refDatum*cs\r\n				
<i>Examples</i>	\$GPDTM, W84, , 0.0, N, 0.0, E, 0.0, W84*6F\r\n \$GPDTM, 999, , 0.08, N, 0.07, E, -47.7, W84*1C\r\n				
<i>Payload:</i>					
<i>Field</i>	<i>Name</i>	<i>Format</i>	<i>Unit</i>	<i>Example</i>	<i>Description</i>
0	xxDTM	string	-	\$GPDTM	DTM Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	datum	string	-	W84	Local datum code: W84 = WGS84, P90 = PZ90, 999 = user-defined
2	subDatum	string	-	-	A null field (or a string describing the currently selected datum for protocol versions less than 14.00)
3	lat	numeric	min	0.08	Offset in Latitude
4	NS	character	-	S	North/South indicator
5	lon	numeric	min	0.07	Offset in Longitude
6	EW	character	-	E	East/West indicator
7	alt	numeric	m	-2.8	Offset in altitude
8	refDatum	string	-	W84	Reference datum code: W84 (WGS 84, fixed field)
9	cs	hexadecimal	-	*67	Checksum
10	CRLF	character	-	-	Carriage return and line feed

### 2.7.2 GAQ

#### 2.7.2.1 Poll a standard message (Talker ID GA)

<b>Message</b>	<b>NMEA-Standard-GAQ</b>				
	<b>Poll a standard message (Talker ID GA)</b>				
<i>Type</i>	Poll request				
<i>Comment</i>	Polls a standard NMEA message if the current Talker ID is GA.				
<i>Information</i>	Class/ID: 0xF0 0x45		Number of fields: 4		
<i>Structure</i>	\$xxGAQ, msgId*cs\r\n				
<i>Example</i>	\$EIGAQ, RMC*2B\r\n				
<i>Payload:</i>					
<i>Field</i>	<i>Name</i>	<i>Format</i>	<i>Unit</i>	<i>Example</i>	<i>Description</i>

0	xxGAQ	string	-	\$EIGAQ	GAQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*2B	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.3 GBQ

### 2.7.3.1 Poll a standard message (Talker ID GB)

<b>Message</b>	<b>NMEA-Standard-GBQ</b> <b>Poll a standard message (Talker ID GB)</b>				
Type	Poll request				
Comment	Polls a standard NMEA message if the current Talker ID is GB				
Information	Class/ID: 0xF0 0x44		Number of fields: 4		
Structure	\$xxGBQ,msgId*cs\r\n				
Example	\$EIGBQ,RMC*28\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGBQ	string	-	\$EIGBQ	GBQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*28	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.4 GBS


### 2.7.4.1 GNSS satellite fault detection

<b>Message</b>	<b>NMEA-Standard-GBS</b> <b>GNSS satellite fault detection</b>				
Type	Output				
Comment	<p>This message outputs the results of the Receiver Autonomous Integrity Monitoring Algorithm (RAIM).</p> <ul style="list-style-type: none"> <li>The fields <b>errLat</b>, <b>errLon</b> and <b>errAlt</b> output the standard deviation of the position calculation, using all satellites that pass the RAIM test successfully.</li> <li>The fields <b>errLat</b>, <b>errLon</b> and <b>errAlt</b> are only output if the RAIM process passed successfully (i.e. no or successful edits happened). These fields are never output if 4 or fewer satellites are used for the navigation calculation (because, in such cases, integrity cannot be determined by the receiver autonomously).</li> <li>The fields <b>prob</b>, <b>bias</b> and <b>stdev</b> are only output if at least one satellite failed in the RAIM test.</li> </ul> <p>If more than one satellites fail the RAIM test, only the information for the worst satellite is output in this message.</p>				
Information	Class/ID: 0xF0 0x09		Number of fields: 13		
Structure	\$xxGBS,time,errLat,errLon,errAlt,svid,prob,bias, stddev,systemId,signalId*cs\r\n				
Examples	\$GPGBS,235503.00,1.6,1.4,3.2,,,,,*40\r\n \$GPGBS,235458.00,1.4,1.3,3.1,03,,,-21.4,3.8,1,0*5B\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGBS	string	-	\$GPGBS	GBS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )

1	time	hhmmss.ss	-	235503.00	UTC time to which this RAIM sentence belongs. See section UTC representation in the integration manual for details.
2	errLat	numeric	m	1.6	Expected error in latitude
3	errLon	numeric	m	1.4	Expected error in longitude
4	errAlt	numeric	m	3.2	Expected error in altitude
5	svid	numeric	-	03	Satellite ID of most likely failed satellite
6	prob	numeric	-	-	Probability of missed detection: null (not supported, fixed field)
7	bias	numeric	m	-21.4	Estimated bias of most likely failed satellite (a priori residual)
8	stddev	numeric	m	3.8	Standard deviation of estimated bias
9	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
10	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
11	cs	hexadecimal	-	*5B	Checksum
12	CRLF	character	-	-	Carriage return and line feed

## 2.7.5 GGA


### 2.7.5.1 Global positioning system fix data

<b>Message</b>	<b>NMEA-Standard-GGA</b> <b>Global positioning system fix data</b>				
<b>Type</b>	Output				
<b>Comment</b>	Time and position, together with GPS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).   The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS-specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the <a href="#">NMEA-GNS</a> message is used instead.				
<b>Information</b>	Class/ID: 0xF0 0x00		Number of fields: 17		
<b>Structure</b>	\$xxGGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge,diffStation*cs\r\n				
<b>Example</b>	\$GPGGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGGA	string	-	\$GPGGA	GGA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	092725.00	UTC time. See section UTC representation in the integration manual for details.
2	lat	ddmm.mmmmm	-	4717.11399	Latitude (degrees and minutes), see <a href="#">format description</a>
3	NS	character	-	N	North/South indicator
4	lon	dddmm.mmmmm	-	00833.91590	Longitude (degrees and minutes), see <a href="#">format description</a>
5	EW	character	-	E	East/West indicator
6	quality	digit	-	1	Quality indicator for position fix, see <a href="#">position fix flags description</a>

7	numSV	numeric	-	08	Number of satellites used (range: 0-12)
8	HDOP	numeric	-	1.01	Horizontal Dilution of Precision
9	alt	numeric	m	499.6	Altitude above mean sea level
10	altUnit	character	-	M	Altitude units: M (meters, fixed field)
11	sep	numeric	m	48.0	Geoid separation: difference between ellipsoid and mean sea level
12	sepUnit	character	-	M	Geoid separation units: M (meters, fixed field)
13	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
14	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
15	cs	hexadecimal	-	*5B	Checksum
16	CRLF	character	-	-	Carriage return and line feed

## 2.7.6 GLL

### 2.7.6.1 Latitude and longitude, with time of position fix and status

<b>Message</b>	<b>NMEA-Standard-GLL</b> <b>Latitude and longitude, with time of position fix and status</b>				
<b>Type</b>	Output				
<b>Comment</b>	 The output of this message is dependent on the currently selected datum (default: WGS84)				
<b>Information</b>	Class/ID: 0xf0 0x01		Number of fields: 10		
<b>Structure</b>	\$xxGLL, lat, NS, lon, EW, time, status, posMode*cs\r\n				
<b>Example</b>	\$GPGLL, 4717.11364, N, 00833.91565, E, 092321.00, A, A*60\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGLL	string	-	\$GPGLL	GLL Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	lat	ddmm. mmmm	-	4717.11364	Latitude (degrees and minutes), see <a href="#">format description</a>
2	NS	character	-	N	North/South indicator
3	lon	dddmm. mmmm	-	00833.91565	Longitude (degrees and minutes), see <a href="#">format description</a>
4	EW	character	-	E	East/West indicator
5	time	hhmmss.ss	-	092321.00	UTC time. See section UTC representation in the integration manual for details.
6	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
7	posMode	character	-	A	Positioning mode, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
8	cs	hexadecimal	-	*60	Checksum
9	CRLF	character	-	-	Carriage return and line feed

## 2.7.7 GLQ

### 2.7.7.1 Poll a standard message (Talker ID GL)

<b>Message</b>	<b>NMEA-Standard-GLQ</b> <b>Poll a standard message (Talker ID GL)</b>				
Type	Poll request				
Comment	Polls a standard NMEA message if the current Talker ID is GL				
Information	Class/ID: 0xf0 0x43		Number of fields: 4		
Structure	\$xxGLQ,msgId*cs\r\n				
Example	\$EIGLQ,RMC*3A\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGLQ	string	-	\$EIGLQ	GLQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.8 GNQ

### 2.7.8.1 Poll a standard message (Talker ID GN)

<b>Message</b>	<b>NMEA-Standard-GNQ</b> <b>Poll a standard message (Talker ID GN)</b>				
Type	Poll request				
Comment	Polls a standard NMEA message if the current Talker ID is GN				
Information	Class/ID: 0xf0 0x42		Number of fields: 4		
Structure	\$xxGNQ,msgId*cs\r\n				
Example	\$EIGNQ,RMC*3A\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGNQ	string	-	\$EIGNQ	GNQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.9 GNS

### 2.7.9.1 GNSS fix data

<b>Message</b>	<b>NMEA-Standard-GNS</b> <b>GNSS fix data</b>				
Type	Output				
Comment	Time and position, together with GNSS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.). <a href="#">🔗</a> The output of this message is dependent on the currently selected datum (default: WGS84)				
Information	Class/ID: 0xf0 0x0d		Number of fields: 16		
Structure	\$xxGNS,time,lat,NS,lon,EW,posMode,numSV,HDOP,alt,sep,diffAge,diffStation,navStatus*cs\r\n				

**Examples** \$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V\*00\r\n  
 \$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V\*0E\r\n  
 \$GPGNS,122310.2,,,,,07,,,,5.2,23,V\*02\r\n

**Payload:**

Field	Name	Format	Unit	Example	Description
0	xxGNS	string	-	\$GPGNS	GNS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	091547.00	UTC time. See section UTC representation in the integration manual for details.
2	lat	ddmm.mmmmm	-	5114.50897	Latitude (degrees and minutes), see <a href="#">format description</a>
3	NS	character	-	N	North/South indicator
4	lon	dddmm.mmmmm	-	00012.28663	Longitude (degrees and minutes), see <a href="#">format description</a>
5	EW	character	-	E	East/West indicator
6	posMode	character	-	AAAA	Positioning mode, see <a href="#">position fix flags description</a> . Four first characters are in the following order for GPS, GLONASS, Galileo and BeiDou. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.
7	numSV	numeric	-	10	Number of satellites used (range: 0-99)
8	HDOP	numeric	-	0.83	Horizontal Dilution of Precision
9	alt	numeric	m	111.1	Altitude above mean sea level
10	sep	numeric	m	45.6	Geoid separation: difference between ellipsoid and mean sea level
11	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
12	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
13	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	hexadecimal	-	*71	Checksum
15	CRLF	character	-	-	Carriage return and line feed

## 2.7.10 GPQ

### 2.7.10.1 Poll a standard message (Talker ID GP)

<b>Message</b>	<b>NMEA-Standard-GPQ</b> <b>Poll a standard message (Talker ID GP)</b>				
<b>Type</b>	Poll request				
<b>Comment</b>	Polls a standard NMEA message if the current Talker ID is GP				
<b>Information</b>	Class/ID: 0xf0 0x40		Number of fields: 4		
<b>Structure</b>	\$xxGPQ,msgId*cs\r\n				
<b>Example</b>	\$EIGPQ,RMC*3A\r\n				
<b>Payload:</b>					
Field	Name	Format	Unit	Example	Description



0	xxGPQ	string	-	\$EIGPQ	GPQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.11 GQQ

### 2.7.11.1 Poll a standard message (Talker ID GQ)

<b>Message</b>	<b>NMEA-Standard-GQQ</b> <b>Poll a standard message (Talker ID GQ)</b>				
Type	Poll request				
Comment	Polls a standard NMEA message if the current Talker ID is GQ				
Information	Class/ID: 0xf0 0x47		Number of fields: 4		
Structure	\$xxGQQ,msgId*cs\r\n				
Example	\$EIGQQ,RMC*3A\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGQQ	string	-	\$EIGQQ	GQQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.12 GRS

### 2.7.12.1 GNSS range residuals

<b>Message</b>	<b>NMEA-Standard-GRS</b> <b>GNSS range residuals</b>				
Type	Output				
Comment	If less than 12 SVs are available, the remaining fields are output empty. If more than 12 SVs are used, only the residuals of the first 12 SVs are output, in order to remain consistent with the NMEA standard. <b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b> ⓘ This message relates to associated <a href="#">GGA</a> and <a href="#">GSA</a> messages.				
Information	Class/ID: 0xf0 0x06		Number of fields: 19		
Structure	\$xxGRS,time,mode{,residual},systemId,signalId*cs\r\n				
Examples	\$GNGRS,104148.00,1,2.6,2.2,-1.6,-1.1,-1.7,-1.5,5.8,1.7,,,,,1,1*52\r\n \$GNGRS,104148.00,1,,0.0,2.5,0.0,,2.8,,,,,1,5*52\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGRS	string	-	\$GPGRS	GRS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	082632.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.
2	mode	digit	-	1	Computation method used: <ul style="list-style-type: none"> <li>1 = Residuals were recomputed after the <a href="#">GGA</a> position was computed (fixed)</li> </ul>

Start of repeated group (12 times)

3 + n	residual	numeric	m	0.54	Range residuals for SVs used in navigation. The SV order matches the order from the <a href="#">GSA</a> sentence
-------	----------	---------	---	------	------------------------------------------------------------------------------------------------------------------

End of repeated group (12 times)

15	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
16	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
17	cs	hexadecimal	-	*70	Checksum
18	CRLF	character	-	-	Carriage return and line feed

## 2.7.13 GSA

### 2.7.13.1 GNSS DOP and active satellites

<b>Message</b>	<b>NMEA-Standard-GSA GNSS DOP and active satellites</b>				
<b>Type</b>	Output				
<b>Comment</b>	The GNSS receiver operating mode, satellites used for navigation, and DOP values. <ul style="list-style-type: none"> <li>If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.</li> <li>The SV numbers (fields 'svid') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)</li> </ul> <b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b>				
<b>Information</b>	Class/ID: 0xF0 0x02		Number of fields: 21		
<b>Structure</b>	\$xxGSA,opMode,navMode{,svid},PDOP,HDOP,VDOP,systemId*cs\r\n				
<b>Example</b>	\$GPGSA,A,3,23,29,07,08,09,18,26,28,,,,,1.94,1.18,1.54,1*0D\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGSA	string	-	\$GPGSA	GSA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	opMode	character	-	A	Operation mode: <ul style="list-style-type: none"> <li>M = Manually set to operate in 2D or 3D mode</li> <li>A = Automatically switching between 2D or 3D mode</li> </ul>
2	navMode	digit	-	3	Navigation mode, see <a href="#">position fix flags description</a>
<b>Start of repeated group (12 times)</b>					
3 + n	svid	numeric	-	29	Satellite number
<b>End of repeated group (12 times)</b>					
15	PDOP	numeric	-	1.94	Position dilution of precision
16	HDOP	numeric	-	1.18	Horizontal dilution of precision
17	VDOP	numeric	-	1.54	Vertical dilution of precision
18	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
19	cs	hexadecimal	-	*0D	Checksum
20	CRLF	character	-	-	Carriage return and line feed

## 2.7.14 GST

### 2.7.14.1 GNSS pseudorange error statistics

<b>Message</b>	<b>NMEA-Standard-GST</b> <b>GNSS pseudorange error statistics</b>				
<b>Type</b>	Output				
<b>Comment</b>	This message reports statistical information on the quality of the position solution.				
<b>Information</b>	Class/ID: 0xF0 0x07		Number of fields: 11		
<b>Structure</b>	\$xxGST,time,rangeRms,stdMajor,stdMinor,orient,stdLat,stdLong,stdAlt*cs\r\n				
<b>Example</b>	\$GPGST,082356.00,1.8,,,,,1.7,1.3,2.2*7E\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGST	string	-	\$GPGST	GST Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	082356.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.
2	rangeRms	numeric	m	1.8	RMS value of the standard deviation of the ranges
3	stdMajor	numeric	m	-	Standard deviation of semi-major axis
4	stdMinor	numeric	m	-	Standard deviation of semi-minor axis
5	orient	numeric	deg	-	Orientation of semi-major axis
6	stdLat	numeric	m	1.7	Standard deviation of latitude error
7	stdLong	numeric	m	1.3	Standard deviation of longitude error
8	stdAlt	numeric	m	2.2	Standard deviation of altitude error
9	cs	hexadecimal	-	*7E	Checksum
10	CRLF	character	-	-	Carriage return and line feed

## 2.7.15 GSV

### 2.7.15.1 GNSS satellites in view

<b>Message</b>	<b>NMEA-Standard-GSV</b> <b>GNSS satellites in view</b>				
<b>Type</b>	Output				
<b>Comment</b>	<p>The number of satellites in view, together with each SV ID, elevation azimuth, and signal strength (C/No) value. Only four satellite details are transmitted in one message.</p> <p>The messages are grouped by the signal ID and separate messages are output for each signal ID.</p> <p>If a satellite is visible but not tracked, the signal ID is unknown and is presented as 0. (supported for protocol versions 27.12 and later)</p> <p>In a multi-GNSS system, sets of GSV messages will be output multiple times, one set for each GNSS.</p>				
<b>Information</b>	Class/ID: 0xF0 0x03		Number of fields: 7 + [1..4]·4		
<b>Structure</b>	\$xxGSV,numMsg,msgNum,numSV{,svid,elv,az,cno},signalId*cs\r\n				
<b>Examples</b>	<pre>\$GPGSV,3,1,09,09,,,17,10,,,40,12,,,49,13,,,35,1*6F\r\n \$GPGSV,3,2,09,15,,,44,17,,,45,19,,,44,24,,,50,1*64\r\n \$GPGSV,3,3,09,25,,,40,1*6E\r\n \$GPGSV,1,1,03,12,,,42,24,,,47,32,,,37,5*66\r\n \$GPGSV,1,1,01,03,05,218,,0*59\r\n \$GAGSV,1,1,00,2*76\r\n</pre>				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGSV	string	-	\$GPGSV	GSV Message ID (xx = GSV Talker ID, see <a href="#">NMEA Talker IDs table</a> ). Talker ID GN shall not be used.

1	numMsg	digit	-	3	Number of messages, total number of GSV messages being output (range: 1-9)
2	msgNum	digit	-	1	Number of this message (range: 1-numMsg)
3	numSV	numeric	-	10	Number of known satellites in view regarding both the talker ID and the signalId
<i>Start of repeated group (1...4 times)</i>					
4 + n·4	svid	numeric	-	23	Satellite ID
5 + n·4	elv	numeric	deg	38	Elevation (<= 90)
6 + n·4	az	numeric	deg	230	Azimuth (range: 0-359)
7 + n·4	cno	numeric	dBHz	44	Signal strength (C/N0, range: 0-99), null when not tracking
<i>End of repeated group (1...4 times)</i>					
4 + N·4	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
5 + N·4	cs	hexadecimal	-	*7F	Checksum
6 + N·4	CRLF	character	-	-	Carriage return and line feed

## 2.7.16 RLM

### 2.7.16.1 Return link message (RLM)

<b>Message</b>	<b>NMEA-Standard-RLM Return link message (RLM)</b>				
<i>Type</i>	Output				
<i>Comment</i>	<p>The RLM sentence is used to transfer a Return link message from a Cospas-Sarsat recognized Return link service provider (RLSP).</p> <p>The RLM sentence supports communications to an emitting beacon once a distress alert has been detected, located and confirmed. The communications may include acknowledgement of the alert to the emitting beacon as well as optional text messages, and may also include remote beacon configuration and testing.</p>				
<i>Information</i>	Class/ID: 0xf0 0x0b		Number of fields: 7		
<i>Structure</i>	\$xxRLM, beacon, time, code, body*cs\r\n				
<i>Examples</i>	<pre>\$GARLM, 00000078A9FBAD5, 083559.00, 3, C45B*57\r\n \$GARLM, F7129D41BC6A78C, 034433.02, 3, B63CA732AFD419D2*57\r\n</pre>				
<i>Payload:</i>					
<i>Field</i>	<i>Name</i>	<i>Format</i>	<i>Unit</i>	<i>Example</i>	<i>Description</i>
0	xxRLM	string	-	\$GARLM	RLM message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	beacon	hexadecimal	-	00000078A9FBAD5	Beacon ID, identifies beacon intended to receive this message (fixed length 15 hexadecimal character field)
2	time	hhmmss.ss	-	083559.00	Time of reception field to indicate RLM timestamp in UTC. See section UTC representation in the integration manual for details.
3	code	character	-	3	<p>Message code field to identify type of RLM Message Service:</p> <ul style="list-style-type: none"> <li>• 0 = Reserved for future RLM services</li> <li>• 1 = Acknowledgement service RLM</li> <li>• 2 = Command service RLM</li> <li>• 3 = Message service RLM</li> <li>• 4-E = Reserved for future RLM services</li> <li>• F = Test service RLM (currently used only by the Galileo program)</li> </ul>

4	body	hexadecimal -	C45B	Message body encapsulates the data parameters provided by the RLSP into hexadecimal format.
5	cs	hexadecimal -	*57	Checksum
6	CRLF	character -	-	Carriage return and line feed

## 2.7.17 RMC

### 2.7.17.1 Recommended minimum data

<b>Message</b>		<b>NMEA-Standard-RMC</b>			
		<b>Recommended minimum data</b>			
<b>Type</b>	Output				
<b>Comment</b>	The recommended minimum sentence defined by NMEA for GNSS system data. <a href="#">🔗</a> The output of this message is dependent on the currently selected datum (default: WGS84)				
<b>Information</b>	Class/ID: 0xF0 0x04		Number of fields: 16		
<b>Structure</b>	\$xxRMC,time,status,lat,NS,lon,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs\r\n				
<b>Example</b>	\$GPRMC,083559.00,A,4717.11437,N,00833.91522,E,0.004,77.52,091202,,,A,V*57\r\n				
<b>Payload:</b>					
Field	Name	Format	Unit	Example	Description
0	xxRMC	string	-	\$GPRMC	RMC Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	083559.00	UTC time. See section UTC representation in the integration manual for details.
2	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
3	lat	ddmm. mmmm	-	4717.11437	Latitude (degrees and minutes), see <a href="#">format description</a>
4	NS	character	-	N	North/South indicator
5	lon	dddmm. mmmm	-	00833.91522	Longitude (degrees and minutes), see <a href="#">format description</a>
6	EW	character	-	E	East/West indicator
7	spd	numeric	knots	0.004	Speed over ground
8	cog	numeric	deg	77.52	Course over ground
9	date	ddmmyy	-	091202	Date in day, month, year format. See section UTC representation in the integration manual for details.
10	mv	numeric	deg	-	Magnetic variation value
11	mvEW	character	-	-	Magnetic variation E/W indicator
12	posMode	character	-	A	Mode Indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
13	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	hexadecimal -		*57	Checksum
15	CRLF	character -		-	Carriage return and line feed

## 2.7.18 THS

### 2.7.18.1 True heading and status

<b>Message</b>		<b>NMEA-Standard-THS</b>			
		<b>True heading and status</b>			
<i>Type</i>	Output				
<i>Comment</i>	Actual vehicle heading in degrees produced by any device or system producing true heading. This sentence includes a <i>Mode indicator</i> field providing critical safety-related information about the heading data, and replaces the HDT sentence.				
<i>Information</i>	<i>Class/ID:</i> 0xf0 0x0e	<i>Number of fields:</i> 5			
<i>Structure</i>	\$xxTHS,headt,mi*cs\r\n				
<i>Example</i>	\$GPTHs,77.52,E*32\r\n				
<i>Payload:</i>					
<i>Field</i>	<i>Name</i>	<i>Format</i>	<i>Unit</i>	<i>Example</i>	<i>Description</i>
0	xxTHS	string	-	\$GPTHs	THS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	headt	numeric	degrees	77.52	Heading of vehicle (true)
2	mi	character	-	E	Mode indicator: <ul style="list-style-type: none"> <li>• A = Autonomous</li> <li>• E = Estimated (dead reckoning)</li> <li>• M = Manual input</li> <li>• S = Simulator</li> <li>• V = Data not valid</li> </ul>
3	cs	hexadecimal	-	*32	Checksum
4	CRLF	character	-	-	Carriage return and line feed

### 2.7.19 TXT

#### 2.7.19.1 Text transmission

<b>Message</b>		<b>NMEA-Standard-TXT</b>			
		<b>Text transmission</b>			
<i>Type</i>	Output				
<i>Comment</i>	This message outputs various information on the receiver, such as power-up screen, software version etc. This message can be configured using the <a href="#">CFG-INFMSG</a> configuration group.				
<i>Information</i>	<i>Class/ID:</i> 0xf0 0x41	<i>Number of fields:</i> 7			
<i>Structure</i>	\$xxTXT,numMsg,msgNum,msgType,text*cs\r\n				
<i>Examples</i>	\$GPTXT,01,01,02,u-blox ag - www.u-blox.com*50\r\n \$GPTXT,01,01,02,ANTARIS ATR0620 HW 00000040*67\r\n				
<i>Payload:</i>					
<i>Field</i>	<i>Name</i>	<i>Format</i>	<i>Unit</i>	<i>Example</i>	<i>Description</i>
0	xxTXT	string	-	\$GPTXT	TXT Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	numMsg	numeric	-	01	Total number of messages in this transmission (range: 1-99)
2	msgNum	numeric	-	01	Message number in this transmission (range: 1-numMsg)

3	msgType	numeric	-	02	Text identifier (u-blox receivers specify the type of the message with this number): <ul style="list-style-type: none"> <li>• 00 = Error</li> <li>• 01 = Warning</li> <li>• 02 = Notice</li> <li>• 07 = User</li> </ul>
4	text	string	-	www.u-blox.com	Any ASCII text
5	cs	hexadecimal	-	*67	Checksum
6	CRLF	character	-	-	Carriage return and line feed

## 2.7.20 VTG

### 2.7.20.1 Course over ground and ground speed

<b>Message</b>	<b>NMEA-Standard-VTG</b>				
	<b>Course over ground and ground speed</b>				
<b>Type</b>	Output				
<b>Comment</b>	Velocity is given as course over ground (COG) and speed over ground (SOG).				
<b>Information</b>	Class/ID: 0xf0 0x05		Number of fields: 12		
<b>Structure</b>	\$xxVTG, cogt, cogtUnit, cogm, cogmUnit, sogn, sognUnit, sogk, sogkUnit, posMode*cs\r\n				
<b>Example</b>	\$GPVTG, 77.52, T, M, 0.004, N, 0.008, K, A*06\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxVTG	string	-	\$GPVTG	VTG Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	cogt	numeric	degrees	77.52	Course over ground (true)
2	cogtUnit	character	-	T	Course over ground units: T (degrees true, fixed field)
3	cogm	numeric	degrees	-	Course over ground (magnetic)
4	cogmUnit	character	-	M	Course over ground units: M (degrees magnetic, fixed field)
5	sogn	numeric	knots	0.004	Speed over ground
6	sognUnit	character	-	N	Speed over ground units: N (knots, fixed field)
7	sogk	numeric	km/h	0.008	Speed over ground
8	sogkUnit	character	-	K	Speed over ground units: K (kilometers per hour, fixed field)
9	posMode	character	-	A	Mode indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
10	cs	hexadecimal	-	*06	Checksum
11	CRLF	character	-	-	Carriage return and line feed

## 2.7.21 ZDA

### 2.7.21.1 Time and date

<b>Message</b>	<b>NMEA-Standard-ZDA</b>				
	<b>Time and date</b>				
<b>Type</b>	Output				
<b>Comment</b>	UTC, day, month, year and local time zone.				

<b>Information</b>	<b>Class/ID:</b> 0xf0 0x08	<b>Number of fields:</b> 9			
<b>Structure</b>	\$xxZDA,time,day,month,year,ltzh,ltzn*cs\r\n				
<b>Example</b>	\$GPZDA,082710.00,16,09,2002,00,00*64\r\n				
<b>Payload:</b>					
Field	Name	Format	Unit	Example	Description
0	xxZDA	string	-	\$GPZDA	ZDA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	082710.00	UTC Time. See section UTC representation in the integration manual for details.
2	day	dd	day	16	UTC day (range: 1-31)
3	month	mm	month	09	UTC month (range: 1-12)
4	year	yyyy	year	2002	UTC year
5	ltzh	xx	-	00	Local time zone hours (fixed field, always 00)
6	ltzn	zz	-	00	Local time zone minutes (fixed field, always 00)
7	cs	hexadecimal	-	*64	Checksum
8	CRLF	character	-	-	Carriage return and line feed

## 2.8 Secondary output messages

Secondary output NMEA messages. These are NMEA messages prepended with an NMEA TAG block as defined by the NMEA 0183 standard. See [NMEA protocol](#) for details.

### 2.8.1 GGA

#### 2.8.1.1 Global positioning system fix data


<b>Message</b>	<b>NMEA-NAV2-GGA</b> <b>Global positioning system fix data</b>				
<b>Type</b>	Output				
<b>Comment</b>	Time and position, together with GPS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.). To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in accordance to NMEA 0183 Standard. ↻ The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS-specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the <a href="#">NMEA-GNS</a> message is used instead.				
<b>Information</b>	<b>Class/ID:</b> 0xf7 0x00	<b>Number of fields:</b> 21			
<b>Structure</b>	\s:1*78\\${xx}GGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge ↵,diffStation*cs\r\n				
<b>Example</b>	\s:1*78\\${xx}GGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,*,*5B\r\n ↵				
<b>Payload:</b>					
Field	Name	Format	Unit	Example	Description
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character



4	xxGGA	string	-	\$GPGGA	GGA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	time	hhmmss.ss	-	092725.00	UTC time. See section UTC representation in the integration manual for details.
6	lat	ddmm. mmmm	-	4717.11399	Latitude (degrees and minutes), see <a href="#">format description</a>
7	NS	character	-	N	North/South indicator
8	lon	dddmm. mmmm	-	00833.91590	Longitude (degrees and minutes), see <a href="#">format description</a>
9	EW	character	-	E	East/West indicator
10	quality	digit	-	1	Quality indicator for position fix, see <a href="#">position fix flags description</a>
11	numSV	numeric	-	08	Number of satellites used (range: 0-12)
12	HDOP	numeric	-	1.01	Horizontal Dilution of Precision
13	alt	numeric	m	499.6	Altitude above mean sea level
14	altUnit	character	-	M	Altitude units: M (meters, fixed field)
15	sep	numeric	m	48.0	Geoid separation: difference between ellipsoid and mean sea level
16	sepUnit	character	-	M	Geoid separation units: M (meters, fixed field)
17	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
18	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
19	cs	hexadecimal	-	*5B	Checksum
20	CRLF	character	-	-	Carriage return and line feed

## 2.8.2 GLL

### 2.8.2.1 Latitude and longitude, with time of position fix and status.

<b>Message</b>	<b>NMEA-NAV2-GLL</b> <b>Latitude and longitude, with time of position fix and status.</b>				
<b>Type</b>	Output				
<b>Comment</b>	Geographic Position - Latitude/Longitude. To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.  The output of this message is dependent on the currently selected datum (default: WGS84)				
<b>Information</b>	Class/ID: 0xf7 0x01		Number of fields: 14		
<b>Structure</b>	\s:1*78\\${xxGLL, lat, NS, lon, EW, time, status, posMode}*cs\r\n				
<b>Example</b>	\s:1*78\\${GPGLL, 4717.11364, N, 00833.91565, E, 092321.00, A, A*60\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character

4	xxGLL	string	-	\$GPGLL	GLL Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	lat	ddmm. mmmm	-	4717.11364	Latitude (degrees and minutes), see <a href="#">format description</a>
6	NS	character	-	N	North/South indicator
7	lon	dddmm. mmmm	-	00833.91565	Longitude (degrees and minutes), see <a href="#">format description</a>
8	EW	character	-	E	East/West indicator
9	time	hhmmss.ss	-	092321.00	UTC time. See section UTC representation in the integration manual for details.
10	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
11	posMode	character	-	A	Positioning mode, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
12	cs	hexadecimal	-	*60	Checksum
13	CRLF	character	-	-	Carriage return and line feed

## 2.8.3 GNS

### 2.8.3.1 GNSS fix data

Message	NMEA-NAV2-GNS GNSS fix data				
Type	Output				
Comment	Time and position, together with GNSS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).  To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.  🔄 The output of this message is dependent on the currently selected datum (default: WGS84)				
Information	Class/ID: 0xf7 0x0d		Number of fields: 20		
Structure	\s:1*78\\$\$xxGNS,time,lat,NS,lon,EW,posMode,numSV,HDOP,alt,sep,diffAge,diffStation,nav ↵ Status*cs\r\n				
Examples	\s:1*78\\$\$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V*00\r ↵ \n \s:1*78\\$\$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V*0E ↵ \r\n \s:1*78\\$\$GPGNS,122310.2,,,,,07,,,,5.2,23,V*02\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxGNS	string	-	\$GPGNS	GNS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	time	hhmmss.ss	-	091547.00	UTC time. See section UTC representation in the integration manual for details.
6	lat	ddmm. mmmm	-	5114.50897	Latitude (degrees and minutes), see <a href="#">format description</a>
7	NS	character	-	N	North/South indicator

8	lon	dddmm. mmmm	-	00012.28663	Longitude (degrees and minutes), see <a href="#">format description</a>
9	EW	character	-	E	East/West indicator
10	posMode	character	-	AAAA	Positioning mode, see <a href="#">position fix flags description</a> . Four first characters are in the following order for GPS, GLONASS, Galileo and BeiDou. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.
11	numSV	numeric	-	10	Number of satellites used (range: 0-99)
12	HDOP	numeric	-	0.83	Horizontal Dilution of Precision
13	alt	numeric	m	111.1	Altitude above mean sea level
14	sep	numeric	m	45.6	Geoid separation: difference between ellipsoid and mean sea level
15	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
16	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
17	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
18	cs	hexadecimal	-	*71	Checksum
19	CRLF	character	-	-	Carriage return and line feed

## 2.8.4 GSA

### 2.8.4.1 GNSS DOP and active satellites

<b>Message</b>	<b>NMEA-NAV2-GSA</b> <b>GNSS DOP and active satellites</b>				
<b>Type</b>	Output				
<b>Comment</b>	<p>The GNSS receiver operating mode, satellites used for navigation, and DOP values.</p> <ul style="list-style-type: none"> <li>If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.</li> <li>The SV numbers (fields 'svid') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)</li> </ul> <p><b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b></p> <p>To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.</p>				
<b>Information</b>	Class/ID: 0xf7 0x02		Number of fields: 25		
<b>Structure</b>	\s:1*78\\${xxGSA, opMode, navMode{, svid}, PDOP, HDOP, VDOP, systemId*cs\r\n				
<b>Example</b>	\s:1*78\\${GPGSA, A, 3, 23, 29, 07, 08, 09, 18, 26, 28, , , , , 1.94, 1.18, 1.54, 1*0D\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character

4	xxGSA	string	-	\$GPGSA	GSA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	opMode	character	-	A	Operation mode: <ul style="list-style-type: none"> <li>• M = Manually set to operate in 2D or 3D mode</li> <li>• A = Automatically switching between 2D or 3D mode</li> </ul>
6	navMode	digit	-	3	Navigation mode, see <a href="#">position fix flags description</a>
<i>Start of repeated group (12 times)</i>					
7 + n	svid	numeric	-	29	Satellite number
<i>End of repeated group (12 times)</i>					
19	PDOP	numeric	-	1.94	Position dilution of precision
20	HDOP	numeric	-	1.18	Horizontal dilution of precision
21	VDOP	numeric	-	1.54	Vertical dilution of precision
22	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
23	cs	hexadecimal	-	*0D	Checksum
24	CRLF	character	-	-	Carriage return and line feed

## 2.8.5 RMC

### 2.8.5.1 Recommended minimum data

Message	NMEA-NAV2-RMC Recommended minimum data				
Type	Output				
Comment	The recommended minimum sentence defined by NMEA for GNSS system data. To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard. The output of this message is dependent on the currently selected datum (default: WGS84)				
Information	Class/ID: 0xf7 0x04		Number of fields: 20		
Structure	<code>\s:1*78\\$\xxRMC,time,status,lat,NS,lon,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs\r \n</code>				
Example	<code>\s:1*78\\$\GPRMC,083559.00,A,4717.11437,N,00833.91522,E,0.004,77.52,091202,,A,V*57\r \n</code>				
<i>Payload:</i>					
Field	Name	Format	Unit	Example	Description
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxRMC	string	-	\$GPRMC	RMC Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	time	hhmmss.ss	-	083559.00	UTC time. See section UTC representation in the integration manual for details.
6	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
7	lat	ddmm. mmmm	-	4717.11437	Latitude (degrees and minutes), see <a href="#">format description</a>
8	NS	character	-	N	North/South indicator

9	lon	dddmm. mmmm	-	00833.91522	Longitude (degrees and minutes), see <a href="#">format description</a>
10	EW	character	-	E	East/West indicator
11	spd	numeric	knots	0.004	Speed over ground
12	cog	numeric	deg	77.52	Course over ground
13	date	ddmmyy	-	091202	Date in day, month, year format. See section UTC representation in the integration manual for details.
14	mv	numeric	deg	-	Magnetic variation value
15	mvEW	character	-	-	Magnetic variation E/W indicator
16	posMode	character	-	A	Mode Indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
17	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
18	cs	hexadecimal	-	*57	Checksum
19	CRLF	character	-	-	Carriage return and line feed

## 2.8.6 VTG

### 2.8.6.1 Course over ground and ground speed

<b>Message</b>	<b>NMEA-NAV2-VTG</b> <b>Course over ground and ground speed</b>				
<b>Type</b>	Output				
<b>Comment</b>	Velocity is given as course over ground (COG) and speed over ground (SOG). To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.				
<b>Information</b>	Class/ID: 0xf7 0x05		Number of fields: 16		
<b>Structure</b>	\s:1*78\\$\xxVTG, cogt, cogtUnit, cogm, cogmUnit, sogn, sognUnit, sogk, sogkUnit, posMode*cs\r\ n				
<b>Example</b>	\s:1*78\\$\\$GPVTG, 77.52, T, , M, 0.004, N, 0.008, K, A*06\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxVTG	string	-	\$GPVTG	VTG Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	cogt	numeric	degrees	77.52	Course over ground (true)
6	cogtUnit	character	-	T	Course over ground units: T (degrees true, fixed field)
7	cogm	numeric	degrees	-	Course over ground (magnetic)
8	cogmUnit	character	-	M	Course over ground units: M (degrees magnetic, fixed field)
9	sogn	numeric	knots	0.004	Speed over ground
10	sognUnit	character	-	N	Speed over ground units: N (knots, fixed field)
11	sogk	numeric	km/h	0.008	Speed over ground

12	sogkUnit	character	-	K	Speed over ground units: K (kilometers per hour, fixed field)
13	posMode	character	-	A	Mode indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
14	cs	hexadecimal	-	*06	Checksum
15	CRLF	character	-	-	Carriage return and line feed

## 2.8.7 ZDA

### 2.8.7.1 Time and date

Message	NMEA-NAV2-ZDA				
Type	Time and date				
Type	Output				
Comment	UTC, day, month, year and local time zone. To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.				
Information	Class/ID: 0xf7 0x08		Number of fields: 13		
Structure	\s:1*78\SGPZDA,time,day,month,year,ltzh,ltzn*cs\r\n				
Example	\s:1*78\\$\$xxZDA,082710.00,16,09,2002,00,00*64\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxZDA	string	-	\$GPZDA	ZDA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	time	hhmmss.ss	-	082710.00	UTC Time. See section UTC representation in the integration manual for details.
6	day	dd	day	16	UTC day (range: 1-31)
7	month	mm	month	09	UTC month (range: 1-12)
8	year	yyyy	year	2002	UTC year
9	ltzh	xx	-	00	Local time zone hours (fixed field, always 00)
10	ltzn	zz	-	00	Local time zone minutes (fixed field, always 00)
11	cs	hexadecimal	-	*64	Checksum
12	CRLF	character	-	-	Carriage return and line feed

## 2.9 PUBX messages

Proprietary NMEA messages for u-blox positioning receivers. See also [NMEA-proprietary messages](#).

### 2.9.1 CONFIG (PUBX,41)

### 2.9.1.1 Set protocols and baud rate

<b>Message</b>		<b>NMEA-PUBX-CONFIG</b>			
		<b>Set protocols and baud rate</b>			
Type	Set				
Comment					
Information	Class/ID: 0xf1 0x41	Number of fields: 9			
Structure	\$PUBX, 41, portId, inProto, outProto, baudrate, autobauding*cs\r\n				
Example	\$PUBX, 41, 1, 0007, 0003, 19200, 0*25\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	41	Proprietary message identifier
2	portId	numeric	-	1	ID of communication port. See section Communication ports in the integration manual for details.
3	inProto	hexadecimal	-	0007	Input protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.
4	outProto	hexadecimal	-	0003	Output protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.
5	baudrate	numeric	bits/s	19200	Baud rate
6	autobauding	numeric	-	-	Autobauding: 1=enable, 0=disable (not supported on u-blox 5, set to 0)
7	cs	hexadecimal	-	*25	Checksum
8	CRLF	character	-	-	Carriage return and line feed

## 2.9.2 POSITION (PUBX,00)

### 2.9.2.1 Poll a PUBX,00 message

<b>Message</b>		<b>NMEA-PUBX-POSITION</b>			
		<b>Poll a PUBX,00 message</b>			
Type	Poll request				
Comment	A PUBX,00 message is polled by sending the PUBX,00 message without any data fields.				
Information	Class/ID: 0xf1 0x00	Number of fields: 4			
Structure	\$PUBX, 00*33\r\n				
Example	\$PUBX, 00*33\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	00	Set to 00 to poll a PUBX,00 message
2	cs	hexadecimal	-	*33	Checksum
3	CRLF	character	-	-	Carriage return and line feed

### 2.9.2.2 Lat/Long position data

Message	NMEA-PUBX-POSITION Lat/Long position data				
Type	Output				
Comment	This message contains position solution data. The datum selection may be changed using the message UBXCFCG-DAT. <a href="#">↗</a> The output of this message is dependent on the currently selected datum (default: WGS84).				
Information	Class/ID: 0xf1 0x00	Number of fields: 23			
Structure	\$PUBX,00,time,lat,NS,long,EW,altRef,navStat,hAcc,vAcc,SOG,COG,vVel,diffAge,HDOP,VDOP ↵ ,TDOP,numSvs,reserved,DR,*cs\r\n				
Example	\$PUBX,00,081350.00,4717.113210,N,00833.915187,E,546.589,G3,2.1,2.0,0.007,77.52,0.007 ↵ ,,0.92,1.19,0.77,9,0,0*5F\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	00	Proprietary message identifier: 00
2	time	hhmmss.ss	-	081350.00	UTC time. See section UTC representation in the integration manual for details.
3	lat	ddmm. mmmm	-	4717.113210	Latitude (degrees and minutes), see <a href="#">format description</a>
4	NS	character	-	N	North/South Indicator
5	long	dddmm. mmmm	-	00833.915187	Longitude (degrees and minutes), see <a href="#">format description</a>
6	EW	character	-	E	East/West indicator
7	altRef	numeric	m	546.589	Altitude above user datum ellipsoid
8	navStat	string	-	G3	Navigation Status: <ul style="list-style-type: none"> <li>• NF = No Fix</li> <li>• DR = Dead reckoning only solution</li> <li>• G2 = Stand alone 2D solution</li> <li>• G3 = Stand alone 3D solution</li> <li>• D2 = Differential 2D solution</li> <li>• D3 = Differential 3D solution</li> <li>• RK = Combined GPS + dead reckoning solution</li> <li>• TT = Time only solution</li> </ul>
9	hAcc	numeric	m	2.1	Horizontal accuracy estimate
10	vAcc	numeric	m	2.0	Vertical accuracy estimate
11	SOG	numeric	km/h	0.007	Speed over ground
12	COG	numeric	deg	77.52	Course over ground
13	vVel	numeric	m/s	0.007	Vertical velocity (positive downwards)
14	diffAge	numeric	s	-	Age of differential corrections (blank when DGPS is not used)
15	HDOP	numeric	-	0.92	HDOP, Horizontal Dilution of Precision
16	VDOP	numeric	-	1.19	VDOP, Vertical Dilution of Precision
17	TDOP	numeric	-	0.77	TDOP, Time Dilution of Precision
18	numSvs	numeric	-	9	Number of satellites used in the navigation solution
19	reserved	numeric	-	-	Reserved, always set to 0
20	DR	numeric	-	-	DR used
21	cs	hexadecimal	-	*5B	Checksum



22	CRLF	character	-	-	Carriage return and line feed
----	------	-----------	---	---	-------------------------------

## 2.9.3 RATE (PUBX,40)

### 2.9.3.1 Set NMEA message output rate

<b>Message</b>	<b>NMEA-PUBX-RATE</b> <b>Set NMEA message output rate</b>				
<b>Type</b>	Set				
<b>Comment</b>	Set/Get message rate configuration (s) to/from the receiver. <ul style="list-style-type: none"> <li>Send rate is relative to the event a message is registered on. For example, if the rate of a navigation message is set to 2, the message is sent every second navigation solution.</li> </ul>				
<b>Information</b>	Class/ID: 0xf1 0x40		Number of fields: 11		
<b>Structure</b>	\$PUBX,40,msgId,rddc,rus1,rus2,rusb,rspi,reserved*cs\r\n				
<b>Example</b>	\$PUBX,40,GLL,1,0,0,0,0,0*5D\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	ID	numeric	-	40	Proprietary message identifier
2	msgId	string	-	GLL	NMEA message identifier
3	rddc	numeric	cycles	1	output rate on DDC <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
4	rus1	numeric	cycles	1	output rate on USART 1 <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
5	rus2	numeric	cycles	1	output rate on USART 2 <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
6	rusb	numeric	cycles	1	output rate on USB <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
7	rspi	numeric	cycles	1	output rate on SPI <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
8	reserved	numeric	-	-	Reserved: always fill with 0
9	cs	hexadecimal	-	*5D	Checksum
10	CRLF	character	-	-	Carriage return and line feed

## 2.9.4 SVSTATUS (PUBX,03)

### 2.9.4.1 Poll a PUBX,03 message

<b>Message</b>	<b>NMEA-PUBX-SVSTATUS</b> <b>Poll a PUBX,03 message</b>
<b>Type</b>	Poll request

<i>Comment</i>	A PUBX,03 message is polled by sending the PUBX,03 message without any data fields.				
<i>Information</i>	Class/ID: 0xf1 0x03		Number of fields: 4		
<i>Structure</i>	\$PUBX,03*30\r\n				
<i>Example</i>	\$PUBX,03*30\r\n				
<i>Payload:</i>					
<i>Field</i>	<i>Name</i>	<i>Format</i>	<i>Unit</i>	<i>Example</i>	<i>Description</i>
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	03	Set to 03 to poll a PUBX,03 message
2	cs	hexadecimal	-	*30	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.9.5 TIME (PUBX,04)

### 2.9.5.1 Poll a PUBX,04 message

<b>Message</b>	<b>NMEA-PUBX-TIME</b> <b>Poll a PUBX,04 message</b>				
<i>Type</i>	Poll request				
<i>Comment</i>	A PUBX,04 message is polled by sending the PUBX,04 message without any data fields.				
<i>Information</i>	Class/ID: 0xf1 0x04		Number of fields: 4		
<i>Structure</i>	\$PUBX,04*37\r\n				
<i>Example</i>	\$PUBX,04*37\r\n				
<i>Payload:</i>					
<i>Field</i>	<i>Name</i>	<i>Format</i>	<i>Unit</i>	<i>Example</i>	<i>Description</i>
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	04	Set to 04 to poll a PUBX,04 message
2	cs	hexadecimal	-	*37	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 3 UBX protocol


### 3.1 UBX protocol key features

u-blox receivers support a u-blox-proprietary protocol to communicate with a host computer. This protocol has the following key features:

- Compact – uses 8-bit binary data
- Checksum protected – uses a low-overhead checksum algorithm
- Modular – uses a two-stage message identifier (Class and Message ID)

### 3.2 UBX frame structure

The structure of a basic UBX frame is shown in the following diagram.

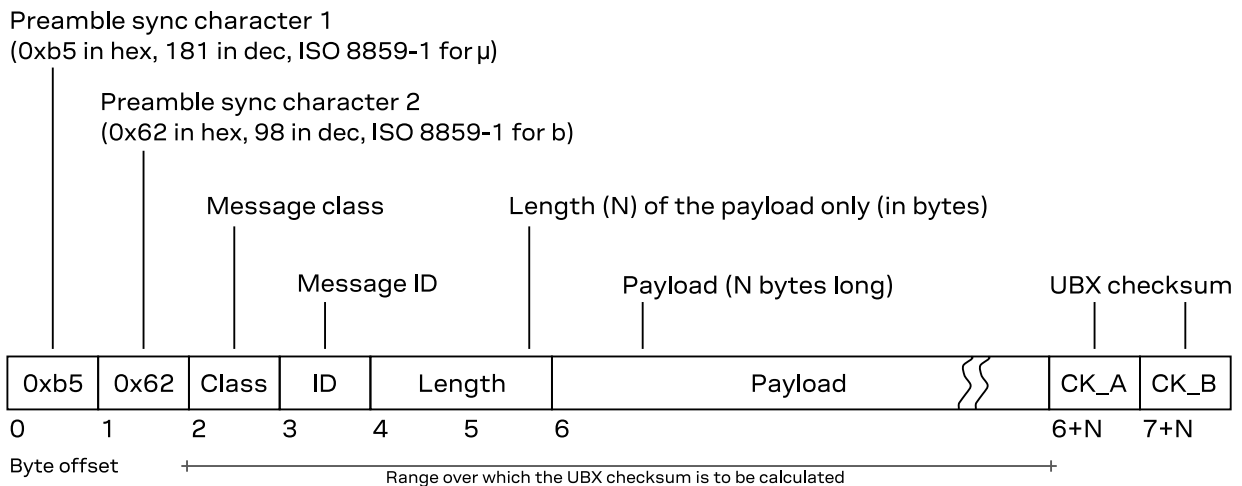

- Every *frame* starts with a 2-byte *preamble* consisting of two synchronization characters: 0xb5 and 0x62.
- A 1-byte *message class* field follows. A class is a group of messages that are related to each other.
- A 1-byte *message ID* field defines the message that is to follow.
- A 2-byte *length* field follows. The length is defined as being that of the payload only. It does not include the preamble, message class, message ID, length, or [UBX checksum](#) fields. The number format of the length field is an unsigned little-endian 16-bit integer (a "U2" in [UBX data types](#)).
- The *payload* field contains a variable number (= *length*) of bytes.
- The two 1-byte *CK\_A* and *CK\_B* fields hold a 16-bit checksum whose calculation is defined in [UBX checksum](#) section. This concludes the frame.

### 3.3 UBX payload definition rules

This section contains the rules and guidelines for UBX message payloads. See also [UBX message example](#).

#### 3.3.1 UBX structure packing

Values are placed in such an order that structure packing is not a problem. This means that two-byte values shall start on offsets that are a multiple of two; four-byte values shall start at a multiple of four; and so on.

#### 3.3.2 UBX reserved elements

Some messages contain reserved fields or bits to allow for future expansion. The contents of these elements should be ignored in output messages and must be set to zero in input messages. Where a message is output and subsequently returned to the receiver as an input message, reserved elements can either be explicitly set to zero or left with whatever value they were output with.

For fields in a bitfield the same rules apply. Note that bits not described are automatically reserved and are not explicitly stated (see [UBX message example](#)).

#### 3.3.3 UBX undefined values

The description of some fields provide specific meanings for specific values. For example, the field `gnssId` appears in many UBX messages and uses 0 to indicate GPS, 1 for SBAS and so on (see [GNSS identifiers](#) for details); however it is usually stored in a byte with far more possible values than the handful currently defined. All such undefined values are reserved for future expansion and therefore should not be used.

#### 3.3.4 UBX conditional values

Some UBX messages use validity flag fields to indicate whether the values of some value fields are valid. For example the `UBX-NAV-PVT` message has the `validDate` and `validTime` fields that indicate whether the date (`year`, `month` and `day` fields), and, respectively, the time (`hour`, `min` and `sec` fields) are valid. This means that these value fields will only contain meaningful data if the corresponding flag field is set (has the value 1).

#### 3.3.5 UBX data types

The following data types (number formats) are defined.

Name	Type	Size (Bytes)	Range	Resolution
U1	unsigned 8-bit integer	1	$0 \dots 2^8 - 1$	1
I1	signed 8-bit integer, two's complement	1	$-2^7 \dots 2^7 - 1$	1
X1	8-bit bitfield	1	n/a	n/a
U2	unsigned little-endian 16-bit integer	2	$0 \dots 2^{16} - 1$	1
I2	signed little-endian 16-bit integer, two's complement	2	$-2^{15} \dots 2^{15} - 1$	1
X2	16-bit little-endian bitfield	2	n/a	n/a
U4	unsigned little-endian 32-bit integer	4	$0 \dots 2^{32} - 1$	1
I4	signed little-endian 32-bit integer, two's complement	4	$-2^{31} \dots 2^{31} - 1$	1
X4	32-bit little-endian bitfield	4	n/a	n/a

Name	Type	Size (Bytes)	Range	Resolution
R4	IEEE 754 single (32-bit) precision	4	$-2^{127} \dots 2^{127}$	$\sim \text{value} \cdot 2^{-24}$
R8	IEEE 754 double (64-bit) precision	8	$-2^{1023} \dots 2^{1023}$	$\sim \text{value} \cdot 2^{-53}$
CH	ASCII / ISO 8859-1 char (8-bit)	1	n/a	n/a
U <sub>.n</sub>	unsigned bitfield value of <i>n</i> bits width	var.	variable	variable
I <sub>.n</sub>	signed (two's complement) bitfield value of <i>n</i> bits width	var.	variable	variable
S <sub>.n</sub>	signed bitfield value of <i>n</i> bits width, in sign (most significant bit) and magnitude (remaining bits) notation	var.	variable	variable

### 3.3.6 UBX fields scale and unit

Fields in UBX messages can have a unit defined. Whenever possible, SI units and symbols are used (e.g. "m" for meters, "s" for seconds). For civil (UTC) time representation units of years (y), months (month), days (d), hours (h), minutes (min) and seconds (s) are used.

Fields in UBX messages can have a scale factor defined. Unity (factor 1) is assumed if no scale is specified. For integer type fields this is often combined with a unit. When a scale is combined with a unit, the scale represents the smallest storage unit. For example, if meters (m) are expressed (stored) in centimeters the scale would be 0.01 (or 1e-2). This is equivalent of specifying a unit of centimeters (cm) and no scale.

The description of some integer values (e.g. U2, I4 or I8) indicates a fixed-point format (e.g. [UU.FF], [IIII.FFF] or [IIIIII.FFFFFFFF]). The fixed-point value can be retrieved from the integer value by first casting it to appropriate type (e.g. as a floating-point number) and then scaling it with the indicated scaling factor.

### 3.3.7 UBX repeated fields

There are two types of repetitions in UBX messages. The first type specifies that a single field is repeated a constant number of times. This repetition is defined in the type of the field. For example, the [UBX message example](#) can specify a field `data` of type `U1[5]`. In this case the `data` field should be interpreted as an array of five U1 values.

The second type of repetition in messages is referred to as *repeated groups*, which groups one or more fields into a block of payload data. There are several types of repetition:

- The number of repetitions of *variable-by-field group* is indicated by another, earlier field in the same message. The number of repetitions can be zero or more, depending on the value of the referenced field.
- A *constant group* has a constant number of repetitions.
- An *optional group* is repeated zero or one times, depending on the available payload data. That is, the fields are present in the message only if the payload of the message is large enough to cover the whole group of fields.
- The number of repetitions of a *variable-by-size group* is given by the available payload size. The group will repeat until there is not enough payload data left to cover the whole group of fields another time.

Note that only some combinations of repeated groups of fields are possible in a single message. See also [UBX payload decoding](#).

### 3.3.8 UBX payload decoding

UBX message payloads are designed so that the data (fields) can be extracted by a single pass through the payload from start to end. Fixed-size messages are the trivial case where the offset of all fields is unambiguously defined. Variable-size messages have variable number of repetitions of one or multiple groups of fields. For groups where the number of repetitions is given by the value of another field, that field can always be found at a fixed offset in the message payload before the respective group of fields. Groups whose number of repetitions depend on the payload size can only be the last group of fields in a message and only one such group may exist in a message. See also [UBX repeated fields](#).

## 3.4 UBX checksum

The checksum is calculated over the message, starting and including the class field up until, but excluding, the checksum fields (see the figure [UBX frame structure](#)).

The checksum algorithm used is the 8-bit Fletcher algorithm, which is used in the TCP standard [RFC 1145](#)). This algorithm works as follows:

- `Buffer[N]` is an array of bytes that contains the data over which the checksum is to be calculated.
- The two `CK_A` and `CK_B` values are 8-bit unsigned integers, only! If implementing with larger-sized integer values, make sure to mask both `CK_A` and `CK_B` with the value `0xff` after both operations in the loop.
- After the loop, the two `UI` values contain the checksum, transmitted after the message payload, which concludes the frame.

```
1 CK_A = 0, CK_B = 0
2 For (I = 0; I < N; I++)
3 {
4     CK_A = CK_A + Buffer[I]
5     CK_B = CK_B + CK_A
6 }
```

## 3.5 UBX message flow

There are certain features associated with the messages being sent back and forth:

### 3.5.1 UBX acknowledgement

When messages from the class CFG are sent to the receiver, the receiver will send an "acknowledge" ([UBX-ACK-ACK](#)) or a "not acknowledge" ([UBX-ACK-NAK](#)) message back to the sender, depending on whether or not the message was processed correctly.

Some messages from other classes also use the same acknowledgement mechanism.

### 3.5.2 UBX polling mechanism

The UBX protocol is designed so that messages can be polled by sending the message required to the receiver but without a payload (or with just a single parameter that identifies the poll request). The receiver then responds with the same message with the payload populated.

## 3.6 GNSS, satellite, and signal numbering

See [GNSS, satellite, and signal identifiers](#) for details on how GNSS, satellites and signals are numbered in the UBX protocol.

## 3.7 UBX message example

This is an example of the definition of UBX messages as shown in the following sections.

<b>Message</b>	<b>UBX-DEMO-EXAMPLE</b>					
<b>1</b>	<b>Example demo message</b>					
<b>Type</b> <b>2</b>	Periodic/pollled					
<b>Comment</b>	This is a comment that describes the use of the demo example message.					
<b>3</b>	There can be references to other sections in the documentation (such as: <a href="#">UBX protocol</a> ). 🔗 Note that there can be important remarks here.					
<b>Message</b> <b>4</b>	<b>Header</b>	<b>Class ID</b>	<b>Length (bytes)</b>	<b>Payload</b>	<b>Checksum</b>	
<b>Structure</b>	0xb5 0x62 0x01 0x07		16 + numRepeat*4	see below	CK_A CK_B	
<b>Payload description:</b> <b>5</b>						
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>	
0	U4	aField	-	-	a field that contains an unsigned integer with no particular scale or unit	
4	I4	anotherField	1e-2	m	a field that contains a length in meters (m) with a scale of 1e-2 (= 0.01), i.e. a length in centimeters	
8	X2	bitfield <b>6</b>	-	-	this field contains flags or values smaller than one byte, whose definition follows below (bits not described are <a href="#">reserved</a> )	
	bit 0 U:1	aFieldValid	-	-	the first bit in bitfield indicates whether the aField is valid or not (see <a href="#">UBX conditional values</a> )	
	bit 1 U:1	someFlag	-	-	the second bit is a flag (1 = true, 0 = false)	
	bits 5...2 U:4	aBitFieldValue	-	-	a 4-bits value (range: 0...15)	
10	U1[5] <b>7</b>	reserved0	-	-	a <a href="#">reserved</a> field, whose value shall be ignored (in output messages) or set to 0 (in input messages)	
15	U1	numRepeat	-	-	number of repetitions in the group of fields below	
<b>Start of repeated group (numRepeat times)</b> <b>8</b>						
16 + n*4	I2	someValue	-	-	a signed value in a repeated group of fields	
18 + n*4	U2	anotherValue	-	-	another value in a repeated group of fields	
<b>End of repeated group (numRepeat times)</b>						

**1** The first line shows the message name (see [Message naming](#)). The second line shows a short description of the message.

**2** The message type (see [Message types](#)).

**3** This section contains comments that describe the message. Often links to other related sections in the documentation or other related messages are found here.

- 4 The message structure gives the parameters for the [UBX frame structure](#), notably the message class and message ID values and the payload length. For many messages the payload length is a fixed number (of bytes). Messages that contain repeated blocks of information (fields) have a variable payload (see [UBX repeated fields](#)).
- 5 The message payload definition is given as a list of fields and their parameters. Each field starts at a specified offset (in bytes) in the payload (see also [UBX structure packing](#)), is of a specific type (see [UBX data types](#)), has a unique name (within the message), and a description. Optionally, fields can have a scale and/or a unit (see [UBX fields scale and unit](#)).
- 6 Bitfields ("X" types) are broken down into smaller parts. Each part can be one or more bits wide. Values that are two or more bits wide can be unsigned or one of two signed value representation (see [UBX data types](#)). Note that the ten unused bits 15...6 are not explicitly stated as [UBX reserved elements](#).
- 7 Fields can be arrays of values of the same type (see [UBX repeated fields](#)).
- 8 Groups of fields can be repeated in the payload. The number of repetitions can be given by another field in the message (this example), a constant number, zero or one times (known as "optional group"), or derived from the remaining payload size (labeled as "repeated N times"). See also [UBX repeated fields](#) and [UBX payload decoding](#).

### 3.8 UBX messages overview

<i>Message</i>	<i>Class/ID</i>	<i>Description (Type)</i>
<b>UBX-ACK – Acknowledgement and negative acknowledgement messages</b>		
<a href="#">UBX-ACK-ACK</a>	0x05 0x01	• Message acknowledged (Output)
<a href="#">UBX-ACK-NAK</a>	0x05 0x00	• Message not acknowledged (Output)
<b>UBX-CFG – Configuration and command messages</b>		
<a href="#">UBX-CFG-CFG</a>	0x06 0x09	• Clear, save and load configurations (Command)
<a href="#">UBX-CFG-RST</a>	0x06 0x04	• Reset receiver / Clear backup data structures (Command)
<a href="#">UBX-CFG-SPT</a>	0x06 0x64	• Configure and start a sensor production test (Get/set)
<a href="#">UBX-CFG-VALDEL</a>	0x06 0x8c	• Delete configuration item values (Set) • Delete configuration item values (with transaction) (Set)
<a href="#">UBX-CFG-VALGET</a>	0x06 0x8b	• Get configuration items (Poll request) • Configuration items (Polled)
<a href="#">UBX-CFG-VALSET</a>	0x06 0x8a	• Set configuration item values (Set) • Set configuration item values (with transaction) (Set)
<b>UBX-ESF – External sensor fusion messages</b>		
<a href="#">UBX-ESF-ALG</a>	0x10 0x14	• IMU alignment information (Periodic/polled)
<a href="#">UBX-ESF-INS</a>	0x10 0x15	• Vehicle dynamics information (Periodic/polled)
<a href="#">UBX-ESF-MEAS</a>	0x10 0x02	• External sensor fusion measurements (Input/output)
<a href="#">UBX-ESF-RAW</a>	0x10 0x03	• Raw sensor measurements (Output)
<a href="#">UBX-ESF-STATUS</a>	0x10 0x10	• External sensor fusion status (Periodic/polled)
<b>UBX-INF – Information messages</b>		
<a href="#">UBX-INF-DEBUG</a>	0x04 0x04	• ASCII output with debug contents (Output)
<a href="#">UBX-INF-ERROR</a>	0x04 0x00	• ASCII output with error contents (Output)
<a href="#">UBX-INF-NOTICE</a>	0x04 0x02	• ASCII output with informational contents (Output)
<a href="#">UBX-INF-TEST</a>	0x04 0x03	• ASCII output with test contents (Output)
<a href="#">UBX-INF-WARNING</a>	0x04 0x01	• ASCII output with warning contents (Output)



<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
<b>UBX-MGA – GNSS assistance (A-GNSS) messages</b>		
UBX-MGA-ACK	0x13 0x60	• Multiple GNSS acknowledge message (Output)
UBX-MGA-BDS	0x13 0x03	• BeiDou ephemeris assistance for satellites svld 1..37 (Input) • BeiDou almanac assistance (Input) • BeiDou health assistance (Input) • BeiDou UTC assistance (Input) • BeiDou ionosphere assistance (Input)
UBX-MGA-DBD	0x13 0x80	• Poll the navigation database (Poll request) • Navigation database dump entry (Input/output)
UBX-MGA-GAL	0x13 0x02	• Galileo ephemeris assistance (Input) • Galileo almanac assistance (Input) • Galileo GPS time offset assistance (Input) • Galileo UTC assistance (Input)
UBX-MGA-GLO	0x13 0x06	• GLONASS ephemeris assistance (Input) • GLONASS almanac assistance (Input) • GLONASS auxiliary time offset assistance (Input)
UBX-MGA-GPS	0x13 0x00	• GPS ephemeris assistance (Input) • GPS almanac assistance (Input) • GPS health assistance (Input) • GPS UTC assistance (Input) • GPS ionosphere assistance (Input)
UBX-MGA-INI	0x13 0x40	• Initial position assistance (Input) • Initial time assistance (Input) • Initial clock drift assistance (Input) • Initial frequency assistance (Input) • Attitude initialization data (Input)
UBX-MGA-QZSS	0x13 0x05	• QZSS ephemeris assistance (Input) • QZSS almanac assistance (Input) • QZSS health assistance (Input)
UBX-MGA-SF	0x13 0x10	• Sensor fusion initialization data (Input/output)
<b>UBX-MON – Monitoring messages</b>		
UBX-MON-COMMS	0x0a 0x36	• Communication port information (Periodic/pollled)
UBX-MON-GNSS	0x0a 0x28	• Information message major GNSS selection (Polled)
UBX-MON-HW	0x0a 0x09	• Hardware status (Periodic/pollled)
UBX-MON-HW2	0x0a 0x0b	• Extended hardware status (Periodic/pollled)
UBX-MON-HW3	0x0a 0x37	• I/O pin status (Periodic/pollled)
UBX-MON-IO	0x0a 0x02	• I/O system status (Periodic/pollled)
UBX-MON-MSGPP	0x0a 0x06	• Message parse and process status (Periodic/pollled)
UBX-MON-PATCH	0x0a 0x27	• Installed patches (Polled)
UBX-MON-RF	0x0a 0x38	• RF information (Periodic/pollled)
UBX-MON-RXBUF	0x0a 0x07	• Receiver buffer status (Periodic/pollled)
UBX-MON-RXR	0x0a 0x21	• Receiver status information (Output)
UBX-MON-SPAN	0x0a 0x31	• Signal characteristics (Periodic/pollled)
UBX-MON-SPT	0x0a 0x2f	• Sensor production test (Polled)
UBX-MON-SYS	0x0a 0x39	• Current system performance information (Periodic/pollled)
UBX-MON-TXBUF	0x0a 0x08	• Transmitter buffer status (Periodic/pollled)
UBX-MON-VER	0x0a 0x04	• Receiver and software version (Polled)
<b>UBX-NAV – Navigation solution messages</b>		

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
UBX-NAV-ATT	0x01 0x05	• Attitude solution (Periodic/pollled)
UBX-NAV-CLOCK	0x01 0x22	• Clock solution (Periodic/pollled)
UBX-NAV-COV	0x01 0x36	• Covariance matrices (Periodic/pollled)
UBX-NAV-DOP	0x01 0x04	• Dilution of precision (Periodic/pollled)
UBX-NAV-EELL	0x01 0x3d	• Position error ellipse parameters (Periodic/pollled)
UBX-NAV-EOE	0x01 0x61	• End of epoch (Periodic)
UBX-NAV-GEOFENCE	0x01 0x39	• Geofencing status (Periodic/pollled)
UBX-NAV-HPPOSECEF	0x01 0x13	• High precision position solution in ECEF (Periodic/pollled)
UBX-NAV-HPPOSLLH	0x01 0x14	• High precision geodetic position solution (Periodic/pollled)
UBX-NAV-ORB	0x01 0x34	• GNSS orbit database info (Periodic/pollled)
UBX-NAV-PL	0x01 0x62	• Protection level information (Periodic)
UBX-NAV-POSECEF	0x01 0x01	• Position solution in ECEF (Periodic/pollled)
UBX-NAV-POSLLH	0x01 0x02	• Geodetic position solution (Periodic/pollled)
UBX-NAV-PVAT	0x01 0x17	• Navigation position velocity attitude time solution (Periodic/pollled)
UBX-NAV-PVT	0x01 0x07	• Navigation position velocity time solution (Periodic/pollled)
UBX-NAV-RELPOSNED	0x01 0x3c	• Relative positioning information in NED frame (Periodic/pollled)
UBX-NAV-SAT	0x01 0x35	• Satellite information (Periodic/pollled)
UBX-NAV-SBAS	0x01 0x32	• SBAS status data (Periodic/pollled)
UBX-NAV-SIG	0x01 0x43	• Signal information (Periodic/pollled)
UBX-NAV-SLAS	0x01 0x42	• QZSS L1S SLAS status data (Periodic/pollled)
UBX-NAV-STATUS	0x01 0x03	• Receiver navigation status (Periodic/pollled)
UBX-NAV-TIMEBDS	0x01 0x24	• BeiDou time solution (Periodic/pollled)
UBX-NAV-TIMEGAL	0x01 0x25	• Galileo time solution (Periodic/pollled)
UBX-NAV-TIMEGLO	0x01 0x23	• GLONASS time solution (Periodic/pollled)
UBX-NAV-TIMEGPS	0x01 0x20	• GPS time solution (Periodic/pollled)
UBX-NAV-TIMELS	0x01 0x26	• Leap second event information (Periodic/pollled)
UBX-NAV-TIMEQZSS	0x01 0x27	• QZSS time solution (Periodic/pollled)
UBX-NAV-TIMEUTC	0x01 0x21	• UTC time solution (Periodic/pollled)
UBX-NAV-VELECEF	0x01 0x11	• Velocity solution in ECEF (Periodic/pollled)
UBX-NAV-VELNED	0x01 0x12	• Velocity solution in NED frame (Periodic/pollled)
<b>UBX-NAV2 – Navigation solution messages (Secondary output)</b>		
UBX-NAV2-CLOCK	0x29 0x22	• Clock solution (Periodic/pollled)
UBX-NAV2-COV	0x29 0x36	• Covariance matrices (Periodic/pollled)
UBX-NAV2-DOP	0x29 0x04	• Dilution of precision (Periodic/pollled)
UBX-NAV2-EELL	0x29 0x3d	• Position error ellipse parameters (Periodic/pollled)
UBX-NAV2-EOE	0x29 0x61	• End of epoch (Periodic)
UBX-NAV2-POSECEF	0x29 0x01	• Position solution in ECEF (Periodic/pollled)
UBX-NAV2-POSLLH	0x29 0x02	• Geodetic position solution (Periodic/pollled)
UBX-NAV2-PVAT	0x29 0x17	• Navigation position velocity attitude time solution (Periodic/pollled)
UBX-NAV2-PVT	0x29 0x07	• Navigation position velocity time solution (Periodic/pollled)
UBX-NAV2-SAT	0x29 0x35	• Satellite information (Periodic/pollled)
UBX-NAV2-SBAS	0x29 0x32	• SBAS status data (Periodic/pollled)
UBX-NAV2-SIG	0x29 0x43	• Signal information (Periodic/pollled)
UBX-NAV2-SLAS	0x29 0x42	• QZSS L1S SLAS status data (Periodic/pollled)

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
UBX-NAV2-STATUS	0x29 0x03	• Receiver navigation status (Periodic/pollled)
UBX-NAV2-TIMEBDS	0x29 0x24	• BeiDou time solution (Periodic/pollled)
UBX-NAV2-TIMEGAL	0x29 0x25	• Galileo time solution (Periodic/pollled)
UBX-NAV2-TIMEGLO	0x29 0x23	• GLONASS time solution (Periodic/pollled)
UBX-NAV2-TIMEGPS	0x29 0x20	• GPS time solution (Periodic/pollled)
UBX-NAV2-TIMELS	0x29 0x26	• Leap second event information (Periodic/pollled)
UBX-NAV2-TIMEQZSS	0x29 0x27	• QZSS time solution (Periodic/pollled)
UBX-NAV2-TIMEUTC	0x29 0x21	• UTC time solution (Periodic/pollled)
UBX-NAV2-VELECEF	0x29 0x11	• Velocity solution in ECEF (Periodic/pollled)
UBX-NAV2-VELNED	0x29 0x12	• Velocity solution in NED frame (Periodic/pollled)
<b>UBX-RXM – Receiver manager messages</b>		
UBX-RXM-COR	0x02 0x34	• Differential correction input status (Output)
UBX-RXM-MEASX	0x02 0x14	• Satellite measurements for RRLP (Periodic/pollled)
UBX-RXM-PMP	0x02 0x72	• PMP (LBAND) message (Input)
UBX-RXM-PMREQ	0x02 0x41	• Power management request (Command)
UBX-RXM-QZSSL6	0x02 0x73	• QZSS L6 message (Input)
UBX-RXM-RAWX	0x02 0x15	• Multi-GNSS raw measurements (Periodic/pollled)
UBX-RXM-RLM	0x02 0x59	• Galileo SAR short-RLM report (Output) • Galileo SAR long-RLM report (Output)
UBX-RXM-RTCM	0x02 0x32	• RTCM input status (Output)
UBX-RXM-SPARTN	0x02 0x33	• SPARTN input status (Output)
UBX-RXM-SPARTNKEY	0x02 0x36	• Poll installed keys (Poll request) • Transfer dynamic SPARTN keys (Input/output)
<b>UBX-SEC – Security messages</b>		
UBX-SEC-SIG	0x27 0x09	• Signal security information (Periodic/pollled)
UBX-SEC-SIGLOG	0x27 0x10	• Signal security log (Periodic/pollled)
UBX-SEC-UNIQID	0x27 0x03	• Unique chip ID (Output)
<b>UBX-TIM – Timing messages</b>		
UBX-TIM-TM2	0x0d 0x03	• Time mark data (Periodic/pollled)
UBX-TIM-TP	0x0d 0x01	• Time pulse time data (Periodic/pollled)
UBX-TIM-VRFY	0x0d 0x06	• Sourced time verification (Periodic/pollled)
<b>UBX-UPD – Firmware update messages</b>		
UBX-UPD-SOS	0x09 0x14	• Poll backup restore status (Poll request) • Create backup in flash (Command) • Clear backup in flash (Command) • Backup creation acknowledge (Output) • System restored from backup (Output)

## 3.9 UBX-ACK (0x05)

The messages in the UBX-ACK class are used to indicate acknowledgement or rejection (i.e. negative acknowledgement) of input messages, such as UBX-CFG messages.

### 3.9.1 UBX-ACK-ACK (0x05 0x01)

### 3.9.1.1 Message acknowledged

<b>Message</b>	<b>UBX-ACK-ACK</b>					
	<b>Message acknowledged</b>					
<b>Type</b>	Output					
<b>Comment</b>	Output upon processing of an input message. A UBX-ACK-ACK is sent as soon as possible but at least within one second.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x05	0x01	2	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	clsID	-	-	Class ID of the Acknowledged Message	
1	U1	msgID	-	-	Message ID of the Acknowledged Message	

### 3.9.2 UBX-ACK-NAK (0x05 0x00)

#### 3.9.2.1 Message not acknowledged

<b>Message</b>	<b>UBX-ACK-NAK</b>					
	<b>Message not acknowledged</b>					
<b>Type</b>	Output					
<b>Comment</b>	Output upon processing of an input message. A UBX-ACK-NAK is sent as soon as possible but at least within one second.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x05	0x00	2	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	clsID	-	-	Class ID of the Not-Acknowledged Message	
1	U1	msgID	-	-	Message ID of the Not-Acknowledged Message	

## 3.10 UBX-CFG (0x06)

The messages in the UBX-CFG class are used to configure the receiver and poll current configuration values as well as for sending commands to the receiver. Unless stated otherwise, any message in this class sent to the receiver is either acknowledged (by a [UBX-ACK-ACK](#) message) if processed successfully or rejected (with a [UBX-ACK-NAK](#) message) if processed unsuccessfully.

### 3.10.1 UBX-CFG-CFG (0x06 0x09)

#### 3.10.1.1 Clear, save and load configurations

<b>Message</b>	<b>UBX-CFG-CFG</b>					
	<b>Clear, save and load configurations</b>					
<b>Type</b>	Command					
<b>Comment</b>	See <a href="#">Receiver configuration</a> for a detailed description on how receiver configuration should be used. The behavior of this message has changed for protocol versions greater than 23.01. Use UBX-CFG-VALSET and UBX-CFG-VALDEL with the appropriate layers instead. These new messages support selective saving and clearing to retain the behavior removed from this message. The three masks which were used to clear, save and load a subsection of configuration have lost their meaning. It is no longer possible to save or clear a subsection of the configuration using this message. The behavior of the masks is now: <ul style="list-style-type: none"> <li>if any bit is set in the clearMask: all configuration in the selected non-volatile memory is deleted</li> <li>if any bit is set in the saveMask: all current configuration is stored (copied) to the selected layers</li> </ul>					

- if any bit is set in the loadMask: The current configuration is discarded and rebuilt from all the lower layers

Note that commands can be combined. The sequence of execution is clear, save, then load.

↪ Old functionality of this message is not available in protocol versions greater than 23.01. Use [UBX-CFG-VALSET](#), [UBX-CFG-VALGET](#), [UBX-CFG-VALDEL](#) instead.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x09	12 + [0,1]	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	X4	clearMask	-	-	Mask for configuration to clear
bits 31...0	U:32	clearAll	-	-	Clear all saved configuration from the selected non-volatile memory if any bit is set
4	X4	saveMask	-	-	Mask for configuration to save
bits 31...0	U:32	saveAll	-	-	Save all current configuration to the selected non-volatile memory if any bit is set
8	X4	loadMask	-	-	Mask for configuration to load
bits 31...0	U:32	loadAll	-	-	Discard current configuration and rebuilt it from lower non-volatile memory layers if any bit is set

Start of optional group

12	X1	deviceMask	-	-	Mask which selects the memory devices for saving and/or clearing operation Note that if a deviceMask is not provided, the receiver defaults the operation requested to battery-backed RAM (BBR) and Flash (if available)
bit 0	U:1	devBBR	-	-	Battery-backed RAM
bit 1	U:1	devFlash	-	-	Flash
bit 2	U:1	devEEPROM	-	-	EEPROM (only supported for protocol versions less than 14.00)
bit 4	U:1	devSpiFlash	-	-	SPI Flash (only supported for protocol versions less than 14.00)

End of optional group

### 3.10.2 UBX-CFG-RST (0x06 0x04)

#### 3.10.2.1 Reset receiver / Clear backup data structures

Message	UBX-CFG-RST Reset receiver / Clear backup data structures					
Type	Command					
Comment	Do not expect this message to be acknowledged by the receiver. <ul style="list-style-type: none"> <li>• Newer FW version will not acknowledge this message at all.</li> <li>• Older FW version will acknowledge this message but the acknowledge may not be sent completely before the receiver is reset.</li> </ul>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x04	4	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	

0	X2	navBbrMask	-	-	BBR sections to clear. The following special sets apply: <ul style="list-style-type: none"> <li>• 0x0000 Hot start</li> <li>• 0x0001 Warm start</li> <li>• 0xFFFF Cold start</li> </ul>
bit 0	U:1	eph	-	-	Ephemeris
bit 1	U:1	alm	-	-	Almanac
bit 2	U:1	health	-	-	Health
bit 3	U:1	klob	-	-	Klobuchar parameters
bit 4	U:1	pos	-	-	Position
bit 5	U:1	clkd	-	-	Clock drift
bit 6	U:1	osc	-	-	Oscillator parameter
bit 7	U:1	utc	-	-	UTC correction + GPS leap seconds parameters
bit 8	U:1	rtc	-	-	RTC
bit 11	U:1	sfdr	-	-	SFDR Parameters (only available on the ADR/UDR/HPS product variant) and weak signal compensation estimates
bit 12	U:1	vmon	-	-	SFDR Vehicle Monitoring Parameter (only available on the ADR/UDR/HPS product variant)
bit 13	U:1	tct	-	-	TCT Parameters (only available on the ADR/UDR/HPS product variant)
bit 15	U:1	aop	-	-	Autonomous orbit parameters
2	U1	resetMode	-	-	Reset Type <ul style="list-style-type: none"> <li>• 0x00 = Hardware reset (watchdog) immediately</li> <li>• 0x01 = Controlled software reset</li> <li>• 0x02 = Controlled software reset (GNSS only)</li> <li>• 0x04 = Hardware reset (watchdog) after shutdown</li> <li>• 0x08 = Controlled GNSS stop</li> <li>• 0x09 = Controlled GNSS start</li> </ul>
3	U1	reserved0	-	-	Reserved

### 3.10.3 UBX-CFG-SPT (0x06 0x64)

#### 3.10.3.1 Configure and start a sensor production test

<b>Message</b>	<b>UBX-CFG-SPT</b>					
	<b>Configure and start a sensor production test</b>					
<b>Type</b>	Get/set					
<b>Comment</b>	The production test uses the built-in self-test capabilities of an attached sensor. This message is only supported if a sensor is directly connected to the u-blox receiver.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x06	0x64	12	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	reserved0	-	-	Reserved	
2	U2	sensorId	-	-	ID of the sensor to be tested; see <a href="#">UBX-MON-SPT</a> for defined IDs	

4	U1[8]	reserved1	-	-	Reserved
---	-------	-----------	---	---	----------

### 3.10.4 UBXCFCGVALDEL (0x06 0x8c)

#### 3.10.4.1 Delete configuration item values

<b>Message</b>	<b>UBXCFCGVALDEL</b>					
	<b>Delete configuration item values</b>					
<b>Type</b>	Set					
<b>Comment</b>	<p>Overview:</p> <ul style="list-style-type: none"> <li>This message can be used to delete saved configuration to effectively revert the item values to defaults.</li> <li>This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer.</li> <li>This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.</li> <li>This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of <a href="#">UBXCFCGVALDEL</a> that supports transactions.</li> <li>This message does not check if the resulting configuration is valid.</li> <li>See <a href="#">Receiver configuration</a> for details.</li> </ul> <p>This message returns a UBXCACKNAK and no configuration is applied:</p> <ul style="list-style-type: none"> <li>if any key is unknown to the receiver FW</li> <li>if the layer's bitfield does not specify a layer to delete a value from.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>If a key is sent multiple times within the same message, then the value is effectively deleted only once.</li> <li>Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.</li> </ul>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x06	0x8c	4 + [0..n]·4	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	X1	layers	-	-	The layers where the configuration should be deleted from	
	bit 1 U:1	bbr	-	-	Delete configuration from the BBR layer	
	bit 2 U:1	flash	-	-	Delete configuration from the Flash layer	
2	U1[2]	reserved0	-	-	Reserved	
<i>Start of repeated group (N times)</i>						
4 + n·4	U4	keys	-	-	Configuration key IDs of the configuration items to be deleted	
<i>End of repeated group (N times)</i>						

#### 3.10.4.2 Delete configuration item values (with transaction)

<b>Message</b>	<b>UBXCFCGVALDEL</b>					
	<b>Delete configuration item values (with transaction)</b>					
<b>Type</b>	Set					
<b>Comment</b>	<p>Overview:</p> <ul style="list-style-type: none"> <li>This message can be used to delete saved configuration to effectively revert them to defaults.</li> <li>This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer.</li> <li>This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.</li> <li>This message can be used multiple times with the result being managed within a transaction.</li> <li>This message does not check if the resulting configuration is valid.</li> </ul>					

- See [Receiver configuration](#) for details.
- See version 0 of [UBX-CFG-VALDEL](#) for simplified version of this message.

This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:

- if any key within a transaction is unknown to the receiver FW
- if an invalid transaction state transition is requested
- if the layer's bitfield changes within a transaction
- if the layer's bitfield does not specify a layer to delete a value from.

Notes:

- Any request for another UBX-CFG- message type (including UBX-CFG-VALSET and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.
- This message can be sent with no keys to delete for the purposes of managing the transaction state transition.
- If a key is sent multiple times within the same message or within the same transaction, then the value is effectively deleted only once.
- Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x8c	4 + [0..n]-4	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	X1	layers	-	-	The layers where the configuration should be deleted from	
bit 1	U:1	bbr	-	-	Delete configuration from the BBR layer	
bit 2	U:1	flash	-	-	Delete configuration from the Flash layer	
2	X1	transaction	-	-	Transaction action to be applied:	
bits 1...0	U:2	action	-	-	Transaction action to be applied: <ul style="list-style-type: none"> <li>• 0 = Transactionless UBX-CFG-VALDEL: In the next UBX-CFG-VALDEL, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied. If a transaction has already been started, cancels any started transaction and the incoming configuration is applied.</li> <li>• 1 = (Re)Start deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALDEL messages.</li> <li>• 2 = Deletion transaction ongoing: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3.</li> <li>• 3 = Apply and end a deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0 or 1.</li> </ul>	
3	U1	reserved0	-	-	<a href="#">Reserved</a>	
<i>Start of repeated group (N times)</i>						
4 + n-4	U4	keys	-	-	<a href="#">Configuration key IDs</a> of the configuration items to be deleted	
<i>End of repeated group (N times)</i>						

### 3.10.5 UBX-CFG-VALGET (0x06 0x8b)



### 3.10.5.1 Get configuration items

<b>Message</b>	<b>UBX-CFG-VALGET</b>					
	<b>Get configuration items</b>					
<b>Type</b>	Poll request					
<b>Comment</b>	<p>Overview:</p> <ul style="list-style-type: none"> <li>This message is used to get configuration values by providing a list of configuration key IDs, which identify the configuration items to retrieve.</li> <li>This message can specify the configuration layer where the values of the specified configuration items are retrieved from.</li> <li>This message is limited to containing a maximum of 64 key IDs.</li> <li>See <a href="#">Receiver configuration</a> for details.</li> </ul> <p>This message returns a UBX-ACK-NAK:</p> <ul style="list-style-type: none"> <li>if any key is unknown to the receiver FW</li> <li>if the layer field specifies an invalid layer to get the value from</li> <li>if the keys array specifies more than 64 key IDs.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>If a value is requested multiple times within the same poll request, then the reply will contain it multiple times.</li> <li>The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value will constitute a request for one key-value pair. A key value that has a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a request for all items in the specified group. A key with a value of 0xffff in the group part of the key value (bits 16-27) is a request for all items known to the receiver in all groups.</li> <li>The response message is limited to containing a maximum of 64 key-value pairs. If there are wild-card specifications then there may be more than 64 possible responses. In order to handle this, the 'position' field can specify that the response message should skip this number of key-value pairs before it starts constructing the message. This allows a large set of values to be retrieved 64 at a time. If the response contains less than 64 key-value pairs then all values have been reported, otherwise there may be more to read.</li> <li>It is not possible to retrieve configuration values for the same configuration item from multiple configuration layers. Separate poll requests must be made for each desired layer.</li> </ul>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x06	0x8b	4 + [0..n]·4	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	layer	-	-	The layer from which the configuration items should be retrieved: <ul style="list-style-type: none"> <li>0 - RAM layer</li> <li>1 - BBR layer</li> <li>2 - Flash layer</li> <li>7 - Default layer</li> </ul>	
2	U2	position	-	-	Skip this many key values before constructing output message	
<i>Start of repeated group (N times)</i>						
4 + n·4	U4	keys	-	-	<a href="#">Configuration key IDs</a> of the configuration items to be retrieved	
<i>End of repeated group (N times)</i>						

### 3.10.5.2 Configuration items

<b>Message</b>	<b>UBX-CFG-VALGET</b>					
	<b>Configuration items</b>					
<b>Type</b>	Polled					
<b>Comment</b>	This message is output by the receiver to return requested configuration data (key and value pairs).					

See [Receiver configuration](#) for details.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x8b	4 + [0..n]	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	layer	-	-	The layer from which the configuration item was retrieved: <ul style="list-style-type: none"> <li>• 0 - RAM layer</li> <li>• 1 - BBR</li> <li>• 2 - Flash</li> <li>• 7 - Default</li> </ul>
2	U2	position	-	-	Number of configuration items skipped in the result set before constructing this message (mirrors the equivalent field in the request message)

*Start of repeated group (N times)*

Byte offset	Type	Name	Scale	Unit	Description
4 + n	U1	cfgData	-	-	<a href="#">Configuration data</a> (key and value pairs)

*End of repeated group (N times)*

### 3.10.6 UBX-CFG-VALSET (0x06 0x8a)

#### 3.10.6.1 Set configuration item values

Message	UBX-CFG-VALSET
	<b>Set configuration item values</b>
Type	Set
Comment	<p>Overview:</p> <ul style="list-style-type: none"> <li>• This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values.</li> <li>• This message is limited to containing a maximum of 64 key-value pairs.</li> <li>• This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of <a href="#">UBX-CFG-VALSET</a> that supports transactions.</li> <li>• See <a href="#">Receiver configuration</a> for details.</li> </ul> <p>This message returns a UBX-ACK-NAK and no configuration is applied:</p> <ul style="list-style-type: none"> <li>• if any key is unknown to the receiver FW</li> <li>• if the layer's bitfield does not specify a layer to save a value to</li> <li>• if the requested configuration is not valid. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>• If a key is sent multiple times within the same message, then the value eventually being applied is the last sent.</li> </ul>

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x8a	4 + [0..n]	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	X1	layers	-	-	The layers where the configuration should be applied
bit 0	U <sub>:1</sub>	ram	-	-	Update configuration in the RAM layer
bit 1	U <sub>:1</sub>	bbr	-	-	Update configuration in the BBR layer
bit 2	U <sub>:1</sub>	flash	-	-	Update configuration in the Flash layer

2	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (N times)</i>					
4 + n	U1	cfgData	-	-	Configuration data (key and value pairs)
<i>End of repeated group (N times)</i>					

### 3.10.6.2 Set configuration item values (with transaction)

<b>Message</b>	<b>UBX-CFG-VALSET</b> <b>Set configuration item values (with transaction)</b>
----------------	----------------------------------------------------------------------------------

<b>Type</b>	Set
-------------	-----

<b>Comment</b>	Overview:
----------------	-----------

- This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values.
- This message is limited to containing a maximum of 64 key-value pairs.
- This message can be used multiple times with the result being managed within a transaction. Within a transaction there is no limit on the number key-value pairs; a transaction is effectively limited to the number of known keys.
- See [Receiver configuration](#) for details.
- See version 0 of [UBX-CFG-VALSET](#) for simplified version of this message.

This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:

- if any key within a transaction is unknown to the receiver FW
- if an invalid transaction state transition is requested
- if the layer's bitfield changes within a transaction
- if the layer's bitfield does not specify a layer to save a value to

This message returns a UBX-ACK-NAK, and no configuration is applied:

- if the requested configuration is not valid. While in a transaction context, only the last message that requests to apply the transaction returns a UBX-ACK-NAK. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer. This also applies to a transactionless request.

Notes:

- Any request for another UBX-CFG-message type (including UBX-CFG-VALDEL and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.
- This message can be sent with no key/values to set for the purposes of managing the transaction state transition.
- If a key is sent multiple times within the same message or within the same transaction, then the value eventually being applied is the last sent.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x8a	4 + [0..n]	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	X1	layers	-	-	The layers where the configuration should be applied
bit 0	U:1	ram	-	-	Update configuration in the RAM layer
bit 1	U:1	bbr	-	-	Update configuration in the BBR layer
bit 2	U:1	flash	-	-	Update configuration in the Flash layer
2	U1	transaction	-	-	Transaction action to be applied
bits 1...0	U:2	action	-	-	Transaction action to be applied: <ul style="list-style-type: none"> <li>• 0 = Transactionless UBX-CFG-VALSET: In the next UBX-CFG-VALSET, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied (if valid). If a transaction has already been started, cancels any started transaction and the incoming configuration is applied (if valid).</li> </ul>

- 1 = (Re)Start set transaction: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALSET messages.
- 2 = Set transaction ongoing: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3.
- 3 = Apply and end a set transaction: In the next UBX-CFG-VALSET, it can be either 0 or 1.

3	U1	reserved0	-	-	Reserved
<i>Start of repeated group (N times)</i>					
4 + n	U1	cfgData	-	-	Configuration data (key and value pairs)
<i>End of repeated group (N times)</i>					

## 3.11 UBX-ESF (0x10)

The messages in the UBX-ESF class are used to output external sensor fusion information from the receiver.

### 3.11.1 UBX-ESF-ALG (0x10 0x14)

#### 3.11.1.1 IMU alignment information

Message	UBX-ESF-ALG IMU alignment information					
Type	Periodic/pollled					
Comment	This message outputs the IMU alignment angles which define the rotation from the installation-frame to the IMU-frame. In addition, it indicates the automatic IMU-mount alignment status.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x10	0x14	16	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x01 for this version)	
5	U1	flags	-	-	Flags	
	bit 0	U:1	autoMntAlgOn	-	-	Automatic IMU-mount alignment on/off bit (0: automatic alignment is not running, 1: automatic alignment is running)
	bits 3...1	U:3	status	-	-	Status of the IMU-mount alignment (0: user-defined/fixed angles are used, 1: IMU-mount roll/pitch angles alignment is ongoing, 2: IMU-mount roll/pitch/yaw angles alignment is ongoing, 3: coarse IMU-mount alignment are used, 4: fine IMU-mount alignment are used)
6	U1	error	-	-	Flags	
	bit 0	U:1	tiltAlgError	-	-	IMU-mount tilt (roll and/or pitch) alignment error (0: no error, 1: error)
	bit 1	U:1	yawAlgError	-	-	IMU-mount yaw alignment error (0: no error, 1: error)

bit 2	U:1	angleError	-	-	IMU-mount misalignment Euler angle singularity error (0: no error, 1: error). If this error bit is set, the IMU-mount roll and IMU-mount yaw angles cannot uniquely be defined due to the singularity issue happening with installations mounted with a +/- 90 degrees misalignment around pitch axis. This is also known as the 'gimbal-lock' problem affecting rotations described by Euler angles.
7	U1	reserved0	-	-	<a href="#">Reserved</a>
8	U4	yaw	1e-2	deg	IMU-mount yaw angle [0, 360]
12	I2	pitch	1e-2	deg	IMU-mount pitch angle [-90, 90]
14	I2	roll	1e-2	deg	IMU-mount roll angle [-180, 180]

### 3.11.2 UBX-ESF-INS (0x10 0x15)

#### 3.11.2.1 Vehicle dynamics information

<b>Message</b>	<b>UBX-ESF-INS</b>					
	<b>Vehicle dynamics information</b>					
Type	Periodic/pollled					
Comment	This message outputs information about the vehicle dynamics.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5	0x62	0x10	0x15	36	see below
						CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	bitfield0	-	-	Bitfield	
bits 7...0	U:8	version	-	-	Message version (0x01 for this version)	
bit 8	U:1	xAngRateValid	-	-	Compensated x-axis angular rate data validity flag (0: not valid, 1: valid).	
bit 9	U:1	yAngRateValid	-	-	Compensated y-axis angular rate data validity flag (0: not valid, 1: valid).	
bit 10	U:1	zAngRateValid	-	-	Compensated z-axis angular rate data validity flag (0: not valid, 1: valid).	
bit 11	U:1	xAccelValid	-	-	Compensated x-axis acceleration data validity flag (0: not valid, 1: valid).	
bit 12	U:1	yAccelValid	-	-	Compensated y-axis acceleration data validity flag (0: not valid, 1: valid).	
bit 13	U:1	zAccelValid	-	-	Compensated z-axis acceleration data validity flag (0: not valid, 1: valid).	
4	U1[4]	reserved0	-	-	<a href="#">Reserved</a>	
8	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
12	I4	xAngRate	1e-3	deg/s	Compensated x-axis angular rate.	
16	I4	yAngRate	1e-3	deg/s	Compensated y-axis angular rate.	
20	I4	zAngRate	1e-3	deg/s	Compensated z-axis angular rate.	
24	I4	xAccel	1e-2	m/s <sup>2</sup>	Compensated x-axis acceleration (gravity-free).	
28	I4	yAccel	1e-2	m/s <sup>2</sup>	Compensated y-axis acceleration (gravity-free).	

32	14	zAccel	1e-2	m/s <sup>2</sup>	Compensated z-axis acceleration (gravity-free).
----	----	--------	------	------------------	-------------------------------------------------

### 3.11.3 UBX-ESF-MEAS (0x10 0x02)

#### 3.11.3.1 External sensor fusion measurements

<b>Message</b>	<b>UBX-ESF-MEAS</b>					
	<b>External sensor fusion measurements</b>					
<i>Type</i>	Input/output					
<i>Comment</i>	Contains sensor measurements with timestamp. Optionally, can include timestamp that the message was received at the receiver. Multiple measurements can be included in a single message. (1 measurement per sensor type.) See section Sensor data types in the integration manual for details.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x10	0x02	8 + numMeas·4 + [0,1]·4	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	timeTag	-	-	Time tag of measurement generated by external sensor	
4	X2	flags	-	-	Flags. Set all unused bits to zero.	
bits 1...0	U:2	timeMarkSent	-	-	Time mark signal was supplied just prior to sending this message: 0 = none, 1 = on Ext0, 2 = on Ext1	
bit 2	U:1	timeMarkEdge	-	-	Trigger on rising (0) or falling (1) edge of time mark signal	
bit 3	U:1	calibTtagValid	-	-	Calibration time tag available. Always set to zero.	
bits 15...11	U:5	numMeas	-	-	Number of measurements contained in this message (optional, can be obtained from message size)	
6	U2	id	-	-	Identification number of data provider	
<i>Start of repeated group (numMeas times)</i>						
8 + n·4	X4	data	-	-	data	
bits 23...0	U:24	dataField	-	-	Data	
bits 29...24	U:6	dataType	-	-	Type of data (0 = no data; 1..63 = data type)	
<i>End of repeated group (numMeas times)</i>						
<i>Start of optional group</i>						
8 + numMeas·4	U4	calibTtag	-	ms	Receiver local time calibrated. This field <b>must not</b> be supplied when calibTtagValid is set to 0.	
<i>End of optional group</i>						

### 3.11.4 UBX-ESF-RAW (0x10 0x03)

#### 3.11.4.1 Raw sensor measurements

<b>Message</b>	<b>UBX-ESF-RAW</b>					
	<b>Raw sensor measurements</b>					
<i>Type</i>	Output					
<i>Comment</i>						
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x10	0x03	4 + [0..n]·8	see below	CK_A CK_B

---

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1[4]	reserved0	-	-	<a href="#">Reserved</a>
<i>Start of repeated group (N times)</i>					
4 + n·8	X4	data	-	-	data Same as in <a href="#">UBX-ESF-MEAS</a>
bits 23...0	U:24	dataField	-	-	data
bits 31...24	U:8	dataType	-	-	type of data (0 = no data; 1..255 = data type)
8 + n·8	U4	sTtag	-	-	sensor time tag
<i>End of repeated group (N times)</i>					

### 3.11.5 UBX-ESF-STATUS (0x10 0x10)

#### 3.11.5.1 External sensor fusion status

<b>Message</b>	<b>UBX-ESF-STATUS</b>					
	<b>External sensor fusion status</b>					
Type	Periodic/polled					
Comment						
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x10	0x10	16 + numSens·4	<i>see below</i>	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x02 for this version)	
5	X1	initStatus1	-	-	Initialization status bitfield, part 1	
bits 1...0	U:2	wtInitStatus	-	-	Wheel tick factor initialization status (0: off, 1: initializing, 2: initialized).	
bits 4...2	U:3	mntAlgStatus	-	-	Automatic IMU-mount alignment status (0: off, 1: initializing, 2: initialized, 3: initialized).	
bits 6...5	U:2	insInitStatus	-	-	INS initialization status (0: off, 1: initializing, 2: initialized).	
6	X1	initStatus2	-	-	Initialization status bitfield, part 2	
bits 1...0	U:2	imuInitStatus	-	-	IMU initialization status (0: off, 1: initializing, 2: initialized).	
7	U1[5]	reserved0	-	-	<a href="#">Reserved</a>	

12	U1	fusionMode	-	-	<p>Fusion mode:</p> <ul style="list-style-type: none"> <li>0: Initialization mode: receiver is initializing some unknown values required for doing sensor fusion</li> <li>1: Fusion mode: GNSS and sensor data are used for navigation solution computation</li> <li>2: Suspended fusion mode: sensor fusion is temporarily disabled due to e.g. invalid sensor data or detected ferry</li> <li>3: Disabled fusion mode: sensor fusion is permanently disabled until receiver reset due e.g. to sensor error</li> </ul> <p>See the Fusion filter modes section in the integration manual for more details.</p>	
13	U1[2]	reserved1	-	-	Reserved	
15	U1	numSens	-	-	Number of sensors	
<i>Start of repeated group (numSens times)</i>						
16 + n·4	X1	sensStatus1	-	-	Sensor status, part 1	
	bits 5...0	U:6	type	-	-	Sensor data type. See section Sensor data types in the integration manual for details.
	bit 6	U:1	used	-	-	If set, sensor data is used for the current sensor fusion solution.
	bit 7	U:1	ready	-	-	If set, sensor is set up (configuration is available or not required) but not used for computing the current fusion solution.
17 + n·4	X1	sensStatus2	-	-	Sensor status, part 2	
	bits 1...0	U:2	calibStatus	-	-	<ul style="list-style-type: none"> <li>00: Sensor is not calibrated</li> <li>01: Sensor is calibrating</li> <li>10/11: Sensor is calibrated</li> </ul> <p>Good dead reckoning performance is only possible when all used sensors are calibrated. Depending on the quality of the GNSS signals and the sensor data, the sensors may take a longer time to get calibrated.</p>
	bits 3...2	U:2	timeStatus	-	-	<ul style="list-style-type: none"> <li>00: No data</li> <li>01: Reception of the first byte used to tag the measurement</li> <li>10: Event input used to tag the measurement</li> <li>11: Time tag provided with the data</li> </ul>
18 + n·4	U1	freq	-	Hz	Observation frequency	
19 + n·4	X1	faults	-	-	Sensor faults	
	bit 0	U:1	badMeas	-	-	Bad measurements detected
	bit 1	U:1	badTTag	-	-	Bad measurement time-tags detected
	bit 2	U:1	missingMeas	-	-	Missing or time-misaligned measurements detected
	bit 3	U:1	noisyMeas	-	-	High measurement noise-level detected
<i>End of repeated group (numSens times)</i>						

## 3.12 UBX-INF (0x04)

Messages in the UBX-INF class are used to output strings from the firmware or application code. All messages have an associated type to indicate the nature or priority of the message.

### 3.12.1 UBX-INF-DEBUG (0x04 0x04)



### 3.12.1.1 ASCII output with debug contents

<b>Message</b>	<b>UBX-INF-DEBUG</b>					
	<b>ASCII output with debug contents</b>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x04	[0..n]	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
Start of repeated group (N times)						
0 + n	CH	str	-	-	ASCII Character	
End of repeated group (N times)						

### 3.12.2 UBX-INF-ERROR (0x04 0x00)

#### 3.12.2.1 ASCII output with error contents

<b>Message</b>	<b>UBX-INF-ERROR</b>					
	<b>ASCII output with error contents</b>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x00	[0..n]	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
Start of repeated group (N times)						
0 + n	CH	str	-	-	ASCII Character	
End of repeated group (N times)						

### 3.12.3 UBX-INF-NOTICE (0x04 0x02)

#### 3.12.3.1 ASCII output with informational contents

<b>Message</b>	<b>UBX-INF-NOTICE</b>					
	<b>ASCII output with informational contents</b>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x02	[0..n]	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
Start of repeated group (N times)						
0 + n	CH	str	-	-	ASCII Character	
End of repeated group (N times)						

### 3.12.4 UBX-INF-TEST (0x04 0x03)

### 3.12.4.1 ASCII output with test contents

<b>Message</b>	<b>UBX-INF-TEST</b>					
	<b>ASCII output with test contents</b>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x03	[0..n]	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
Start of repeated group (N times)						
0 + n	CH	str	-	-	ASCII Character	
End of repeated group (N times)						

### 3.12.5 UBX-INF-WARNING (0x04 0x01)

#### 3.12.5.1 ASCII output with warning contents

<b>Message</b>	<b>UBX-INF-WARNING</b>					
	<b>ASCII output with warning contents</b>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x01	[0..n]	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
Start of repeated group (N times)						
0 + n	CH	str	-	-	ASCII Character	
End of repeated group (N times)						

## 3.13 UBX-MGA (0x13)

The messages in the UBX-MGA class are used for sending GNSS assistance (A-GNSS, aiding) information to the receiver as well as backing up the navigation database from the receiver to a host.

### 3.13.1 UBX-MGA-ACK (0x13 0x60)

#### 3.13.1.1 Multiple GNSS acknowledge message

<b>Message</b>	<b>UBX-MGA-ACK-DATA0</b>					
	<b>Multiple GNSS acknowledge message</b>					
Type	Output					
Comment	This message is sent by a u-blox receiver to acknowledge the receipt of an assistance message. Acknowledgments are enabled by setting the <a href="#">CFG-NAVSPG-ACKAIDING</a> item. See section Flow control in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x60	8	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	

0	U1	type	-	-	Type of acknowledgment: <ul style="list-style-type: none"> <li>0 = The message was not used by the receiver (see infoCode field for an indication of why)</li> <li>1 = The message was accepted for use by the receiver (the infoCode field will be 0)</li> </ul>
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	infoCode	-	-	Provides greater information on what the receiver chose to do with the message contents: <ul style="list-style-type: none"> <li>0 = The receiver accepted the data</li> <li>1 = The receiver does not know the time so it cannot use the data (To resolve this a <a href="#">UBX-MGA-INI-TIME_UTC</a> message should be supplied first)</li> <li>2 = The message version is not supported by the receiver</li> <li>3 = The message size does not match the message version</li> <li>4 = The message data could not be stored to the database</li> <li>5 = The receiver is not ready to use the message data</li> <li>6 = The message type is unknown</li> </ul>
3	U1	msgId	-	-	UBX message ID of the acknowledged message
4	U1[4]	msgPayload Start	-	-	The first 4 bytes of the acknowledged message's payload

### 3.13.2 UBX-MGA-BDS (0x13 0x03)

#### 3.13.2.1 BeiDou ephemeris assistance for satellites svId 1..37

<b>Message</b>	<b>UBX-MGA-BDS-EPH</b> <b>BeiDou ephemeris assistance for satellites svId 1..37</b>					
Type	Input					
Comment	This message allows the delivery of BeiDou D1/D2 ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x03	88	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x01 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	svId	-	-	BeiDou satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0	-	-	<a href="#">Reserved</a>	
4	U1	SatH1	-	-	Autonomous satellite Health flag	
5	U1	IODC	-	-	Issue of Data, Clock	
6	I2	a2	2 <sup>-66</sup>	s/s <sup>2</sup>	Time polynomial coefficient 2	
8	I4	a1	2 <sup>-50</sup>	s/s	Time polynomial coefficient 1	
12	I4	a0	2 <sup>-33</sup>	s	Time polynomial coefficient 0	
16	U4	toc	2 <sup>3</sup>	s	Clock data reference time	
20	I2	TGD1	0.1	ns	Equipment Group Delay Differential	
22	U1	URAI	-	-	User Range Accuracy Index	

23	U1	IODE	-	-	Issue of Data, Ephemeris
24	U4	toe	2 <sup>3</sup>	s	Ephemeris reference time
28	U4	sqrtA	2 <sup>19</sup>	m <sup>0.5</sup>	Square root of semi-major axis
32	U4	e	2 <sup>-33</sup>	-	Eccentricity
36	I4	omega	2 <sup>-31</sup>	semi-circles	Argument of perigee
40	I2	Deltan	2 <sup>-43</sup>	semi-circles/s	Mean motion difference from computed value
42	I2	IDOT	2 <sup>-43</sup>	semi-circles/s	Rate of inclination angle
44	I4	M0	2 <sup>-31</sup>	semi-circles	Mean anomaly at reference time
48	I4	Omega0	2 <sup>-31</sup>	semi-circles	Longitude of ascending node of orbital of plane computed according to reference time
52	I4	OmegaDot	2 <sup>-43</sup>	semi-circles/s	Rate of right ascension
56	I4	i0	2 <sup>-31</sup>	semi-circles	Inclination angle at reference time
60	I4	Cuc	2 <sup>-31</sup>	radians	Amplitude of cosine harmonic correction term to the argument of latitude
64	I4	Cus	2 <sup>-31</sup>	radians	Amplitude of sine harmonic correction term to the argument of latitude
68	I4	Crc	2 <sup>-6</sup>	m	Amplitude of cosine harmonic correction term to the orbit radius
72	I4	Crs	2 <sup>-6</sup>	m	Amplitude of sine harmonic correction term to the orbit radius
76	I4	Cic	2 <sup>-31</sup>	radians	Amplitude of cosine harmonic correction term to the angle of inclination
80	I4	Cis	2 <sup>-31</sup>	radians	Amplitude of sine harmonic correction term to the angle of inclination
84	U1[4]	reserved1	-	-	<a href="#">Reserved</a>

### 3.13.2.2 BeiDou almanac assistance

<b>Message</b>	<b>UBX-MGA-BDS-ALM</b> <b>BeiDou almanac assistance</b>					
<i>Type</i>	Input					
<i>Comment</i>	This message allows the delivery of BeiDou almanac assistance to a receiver. See section AssistNow online in the integration manual for details.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x03	40	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x02 for this version)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	svId	-	-	BeiDou satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0	-	-	<a href="#">Reserved</a>	
4	U1	wna	-	week	Almanac Week Number	
5	U1	toa	2 <sup>12</sup>	s	Almanac reference time	

6	I2	deltaI	2 <sup>-19</sup>	semi-circles	Almanac correction of orbit reference inclination at reference time
8	U4	sqrtA	2 <sup>-11</sup>	m <sup>0.5</sup>	Almanac square root of semi-major axis
12	U4	e	2 <sup>-21</sup>	-	Almanac eccentricity
16	I4	omega	2 <sup>-23</sup>	semi-circles	Almanac argument of perigee
20	I4	M0	2 <sup>-23</sup>	semi-circles	Almanac mean anomaly at reference time
24	I4	Omega0	2 <sup>-23</sup>	semi-circles	Almanac longitude of ascending node of orbit plane at computed according to reference time
28	I4	omegaDot	2 <sup>-38</sup>	semi-circles/s	Almanac rate of right ascension
32	I2	a0	2 <sup>-20</sup>	s	Almanac satellite clock bias
34	I2	a1	2 <sup>-38</sup>	s/s	Almanac satellite clock rate
36	U1[4]	reserved1	-	-	Reserved

### 3.13.2.3 BeiDou health assistance

<b>Message</b>	<b>UBX-MGA-BDS-HEALTH</b> <b>BeiDou health assistance</b>					
Type	Input					
Comment	This message allows the delivery of BeiDou health assistance from D1/D2 ephemeris to a receiver. See section AssistNow online in the integration manual for details. This message allows the delivery of health assistance data for all satellites with svld 1 to 30.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x03	68	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x04 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1[2]	reserved0	-	-	Reserved	
4	U2[30]	healthCode	-	-	Each two-byte value represents a BeiDou SV (1-30). The 9 LSBs of each byte contain the 9 bit health code from subframe 5 pages 7,8 of the D1 message, and from subframe 5 pages 35,36 of the D2 message.	
64	U1[4]	reserved1	-	-	Reserved	

### 3.13.2.4 BeiDou UTC assistance

<b>Message</b>	<b>UBX-MGA-BDS-UTC</b> <b>BeiDou UTC assistance</b>					
Type	Input					
Comment	This message allows the delivery of BeiDou UTC assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x03	20	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x05 for this type)	

1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	<a href="#">Reserved</a>
4	I4	a0UTC	2 <sup>-30</sup>	s	BDT clock bias relative to UTC
8	I4	a1UTC	2 <sup>-50</sup>	s/s	BDT clock rate relative to UTC
12	I1	dtLS	-	s	Delta time due to leap seconds before the new leap second effective
13	U1	reserved1	-	-	<a href="#">Reserved</a>
14	U1	wnRec	-	week	BeiDou week number of reception of this UTC parameter set (8-bit truncated)
15	U1	wnLSF	-	week	Week number of the new leap second
16	U1	dN	-	day	Day number of the new leap second
17	I1	dtLSF	-	s	Delta time due to leap seconds after the new leap second effective
18	U1[2]	reserved2	-	-	<a href="#">Reserved</a>

### 3.13.2.5 BeiDou ionosphere assistance

<b>Message</b>	<b>UBX-MGA-BDS-IONO</b> <b>BeiDou ionosphere assistance</b>					
<b>Type</b>	Input					
<b>Comment</b>	This message allows the delivery of BeiDou ionospheric assistance to a receiver. See section AssistNow online in the integration manual for details.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x03	16	<i>see below</i>	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x06 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1[2]	reserved0	-	-	<a href="#">Reserved</a>	
4	I1	alpha0	2 <sup>-30</sup>	s	Ionospheric parameter alpha0	
5	I1	alpha1	2 <sup>-27</sup>	s/pi	Ionospheric parameter alpha1	
6	I1	alpha2	2 <sup>-24</sup>	s/pi <sup>2</sup>	Ionospheric parameter alpha2	
7	I1	alpha3	2 <sup>-24</sup>	s/pi <sup>3</sup>	Ionospheric parameter alpha3	
8	I1	beta0	2 <sup>-11</sup>	s	Ionospheric parameter beta0	
9	I1	beta1	2 <sup>-14</sup>	s/pi	Ionospheric parameter beta1	
10	I1	beta2	2 <sup>-16</sup>	s/pi <sup>2</sup>	Ionospheric parameter beta2	
11	I1	beta3	2 <sup>-16</sup>	s/pi <sup>3</sup>	Ionospheric parameter beta3	
12	U1[4]	reserved1	-	-	<a href="#">Reserved</a>	

### 3.13.3 UBX-MGA-DBD (0x13 0x80)

#### 3.13.3.1 Poll the navigation database

<b>Message</b>	<b>UBX-MGA-DBD</b> <b>Poll the navigation database</b>
<b>Type</b>	Poll request

<b>Comment</b>	Poll the whole navigation data base. The receiver will send all available data from its internal database. The receiver will indicate the finish of the transmission with a <a href="#">UBX-MGA-ACK</a> . The msgPayloadStart field of the UBX-MGA-ACK message will contain a U4 representing the number of UBX-MGA-DBD-DATA* messages sent.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x80	0	see below	CK_A CK_B
<b>Payload</b>	This message has no payload.					

### 3.13.3.2 Navigation database dump entry

<b>Message</b>	<b>UBX-MGA-DBD</b> <b>Navigation database dump entry</b>					
<b>Type</b>	Input/output					
<b>Comment</b>	Navigation database entry. The data fields are firmware-specific. Transmission of this type of message will be acknowledged by <a href="#">UBX-MGA-ACK</a> messages, if acknowledgment has been enabled. See section AssistNow online in the integration manual for details. The maximum payload size for firmware 2.01 onwards is 164 bytes (which makes the maximum message size 172 bytes). <a href="#">↪</a> UBX-MGA-DBD messages are only intended to be sent back to the same receiver that generated them.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x80	12 + [0..n]	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1[12]	reserved0	-	-	Reserved	
<i>Start of repeated group (N times)</i>						
12 + n	U1	data	-	-	firmware-specific data	
<i>End of repeated group (N times)</i>						

### 3.13.4 UBX-MGA-GAL (0x13 0x02)

#### 3.13.4.1 Galileo ephemeris assistance

<b>Message</b>	<b>UBX-MGA-GAL-EPH</b> <b>Galileo ephemeris assistance</b>					
<b>Type</b>	Input					
<b>Comment</b>	This message allows the delivery of Galileo ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x02	76	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x01 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	svId	-	-	Galileo Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0	-	-	Reserved	
4	U2	iodNav	-	-	Ephemeris and clock correction Issue of Data	
6	I2	deltaN	2 <sup>-43</sup>	semi-circles/s	Mean motion difference from computed value	
8	I4	m0	2 <sup>-31</sup>	semi-circles	Mean anomaly at reference time	

12	U4	e	2 <sup>-33</sup>	-	Eccentricity
16	U4	sqrtA	2 <sup>-19</sup>	m <sup>0.5</sup>	Square root of the semi-major axis
20	I4	omega0	2 <sup>-31</sup>	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
24	I4	i0	2 <sup>-31</sup>	semi-circles	Inclination angle at reference time
28	I4	omega	2 <sup>-31</sup>	semi-circles	Argument of perigee
32	I4	omegaDot	2 <sup>-43</sup>	semi-circles/s	Rate of change of right ascension
36	I2	iDot	2 <sup>-43</sup>	semi-circles/s	Rate of change of inclination angle
38	I2	cuc	2 <sup>-29</sup>	radians	Amplitude of the cosine harmonic correction term to the argument of latitude
40	I2	cus	2 <sup>-29</sup>	radians	Amplitude of the sine harmonic correction term to the argument of latitude
42	I2	crc	2 <sup>-5</sup>	radians	Amplitude of the cosine harmonic correction term to the orbit radius
44	I2	crs	2 <sup>-5</sup>	radians	Amplitude of the sine harmonic correction term to the orbit radius
46	I2	cic	2 <sup>-29</sup>	radians	Amplitude of the cosine harmonic correction term to the angle of inclination
48	I2	cis	2 <sup>-29</sup>	radians	Amplitude of the sine harmonic correction term to the angle of inclination
50	U2	toe	60	s	Ephemeris reference time
52	I4	af0	2 <sup>-34</sup>	s	SV clock bias correction coefficient
56	I4	af1	2 <sup>-46</sup>	s/s	SV clock drift correction coefficient
60	I1	af2	2 <sup>-59</sup>	s/s squared	SV clock drift rate correction coefficient
61	U1	sisaIndexE1E5b	-	-	Signal-In-Space Accuracy index for dual frequency E1-E5b
62	U2	toc	60	s	Clock correction data reference Time of Week
64	I2	bgdE1E5b	2 <sup>-32</sup>	s	E1-E5b Broadcast Group Delay
66	U1[2]	reserved1	-	-	<a href="#">Reserved</a>
68	U1	healthE1B	-	-	E1-B Signal Health Status
69	U1	dataValidityE1B	-	-	E1-B Data Validity Status
70	U1	healthE5b	-	-	E5b Signal Health Status
71	U1	dataValidityE5b	-	-	E5b Data Validity Status
72	U1[4]	reserved2	-	-	<a href="#">Reserved</a>

### 3.13.4.2 Galileo almanac assistance

<b>Message</b>	<b>UBX-MGA-GAL-ALM</b> <b>Galileo almanac assistance</b>
<b>Type</b>	Input
<b>Comment</b>	This message allows the delivery of Galileo almanac assistance to a receiver. See section AssistNow online in the integration manual for details.



Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x02	32	see below	CK_A CK_B

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	Galileo Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	<a href="#">Reserved</a>
4	U1	ioda	-	-	Almanac Issue of Data
5	U1	almWNa	-	week	Almanac reference week number
6	U2	toa	600	s	Almanac reference time
8	I2	deltaSqrtA	2 <sup>-9</sup>	m <sup>0.5</sup>	Difference with respect to the square root of the nominal semi-major axis (29 600 km)
10	U2	e	2 <sup>-16</sup>	-	Eccentricity
12	I2	deltaI	2 <sup>-14</sup>	semi-circles	Inclination at reference time relative to i0 = 56 degree
14	I2	omega0	2 <sup>-15</sup>	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
16	I2	omegaDot	2 <sup>-33</sup>	semi-circles/s	Rate of change of right ascension
18	I2	omega	2 <sup>-15</sup>	semi-circles	Argument of perigee
20	I2	m0	2 <sup>-15</sup>	semi-circles	Satellite mean anomaly at reference time
22	I2	af0	2 <sup>-19</sup>	s	Satellite clock correction bias 'truncated'
24	I2	af1	2 <sup>-38</sup>	s/s	Satellite clock correction linear 'truncated'
26	U1	healthE1B	-	-	Satellite E1-B signal health status
27	U1	healthE5b	-	-	Satellite E5b signal health status
28	U1[4]	reserved1	-	-	<a href="#">Reserved</a>

### 3.13.4.3 Galileo GPS time offset assistance

<b>Message</b>	<b>UBX-MGA-GAL-TIMEOFFSET</b> <b>Galileo GPS time offset assistance</b>
----------------	----------------------------------------------------------------------------

Type	Input
------	-------

Comment	This message allows the delivery of Galileo time to GPS time offset. See section AssistNow online in the integration manual for details.
---------	---------------------------------------------------------------------------------------------------------------------------------------------

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x02	12	see below	CK_A CK_B

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x03 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	<a href="#">Reserved</a>
4	I2	a0G	2 <sup>-35</sup>	s	Constant term of the polynomial describing the offset
6	I2	a1G	2 <sup>-51</sup>	s/s	Rate of change of the offset
8	U1	t0G	3600	s	Reference time for GGTO data

9	U1	wn0G	-	weeks	Week Number of GGTO reference
10	U1[2]	reserved1	-	-	<a href="#">Reserved</a>

### 3.13.4.4 Galileo UTC assistance

<b>Message</b>	<b>UBX-MGA-GAL-UTC</b>				
	<b>Galileo UTC assistance</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message allows the delivery of Galileo UTC assistance to a receiver. See section AssistNow online in the integration manual for details.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5 0x62	0x13	0x02	20	see below
					CK_A CK_B
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U1	type	-	-	Message type (0x05 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	<a href="#">Reserved</a>
4	I4	a0	2 <sup>-30</sup>	s	First parameter of UTC polynomial
8	I4	a1	2 <sup>-50</sup>	s/s	Second parameter of UTC polynomial
12	I1	dtLS	-	s	Delta time due to current leap seconds
13	U1	tot	3600	s	UTC parameters reference time of week (Galileo time)
14	U1	wnt	-	weeks	UTC parameters reference week number (the 8-bit WNt field)
15	U1	wnLSF	-	weeks	Week number at the end of which the future leap second becomes effective (the 8-bit WNLSF field)
16	U1	dN	-	days	Day number at the end of which the future leap second becomes effective
17	I1	dTLSF	-	s	Delta time due to future leap seconds
18	U1[2]	reserved1	-	-	<a href="#">Reserved</a>

### 3.13.5 UBX-MGA-GLO (0x13 0x06)

#### 3.13.5.1 GLONASS ephemeris assistance

<b>Message</b>	<b>UBX-MGA-GLO-EPH</b>				
	<b>GLONASS ephemeris assistance</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message allows the delivery of GLONASS ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5 0x62	0x13	0x06	48	see below
					CK_A CK_B
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GLONASS Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	<a href="#">Reserved</a>

4	U1	FT	-	-	User range accuracy
5	U1	B	-	-	Health flag from string 2
6	U1	M	-	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	I1	H	-	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6), -128 for unknown
8	I4	x	2 <sup>-11</sup>	km	X component of the SV position in PZ-90.02 coordinate System
12	I4	y	2 <sup>-11</sup>	km	Y component of the SV position in PZ-90.02 coordinate System
16	I4	z	2 <sup>-11</sup>	km	Z component of the SV position in PZ-90.02 coordinate System
20	I4	dx	2 <sup>-20</sup>	km/s	X component of the SV velocity in PZ-90.02 coordinate System
24	I4	dy	2 <sup>-20</sup>	km/s	Y component of the SV velocity in PZ-90.02 coordinate System
28	I4	dz	2 <sup>-20</sup>	km/s	Z component of the SV velocity in PZ-90.02 coordinate System
32	I1	ddx	2 <sup>-30</sup>	km/s <sup>2</sup>	X component of the SV acceleration in PZ-90.02 coordinate System
33	I1	ddy	2 <sup>-30</sup>	km/s <sup>2</sup>	Y component of the SV acceleration in PZ-90.02 coordinate System
34	I1	ddz	2 <sup>-30</sup>	km/s <sup>2</sup>	Z component of the SV acceleration in PZ-90.02 coordinate System
35	U1	tb	15	minutes	Index of a time interval within current day according to UTC(SU)
36	I2	gamma	2 <sup>-40</sup>	-	Relative carrier frequency deviation
38	U1	E	-	days	Ephemeris data age indicator
39	I1	deltaTau	2 <sup>-30</sup>	s	Time difference between L2 and L1 band
40	I4	tau	2 <sup>-30</sup>	s	SV clock bias
44	U1[4]	reserved1	-	-	<a href="#">Reserved</a>

### 3.13.5.2 GLONASS almanac assistance

<b>Message</b>	<b>UBX-MGA-GLO-ALM GLONASS almanac assistance</b>					
Type	Input					
Comment	This message allows the delivery of GLONASS almanac assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x06	36	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x02 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	svId	-	-	GLONASS Satellite identifier	(see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	<a href="#">Reserved</a>	

4	U2	N	-	days	Reference calendar day number of almanac within the four-year period (from string 5)
6	U1	M	-	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	U1	C	-	-	Unhealthy flag at instant of almanac upload (1 indicates operability of satellite)
8	I2	tau	2 <sup>-18</sup>	s	Coarse time correction to GLONASS time
10	U2	epsilon	2 <sup>-20</sup>	-	Eccentricity
12	I4	lambda	2 <sup>-20</sup>	semi-circles	Longitude of the first (within the N-day) ascending node of satellite orbit in PC-90.02 coordinate system
16	I4	deltaI	2 <sup>-20</sup>	semi-circles	Correction to the mean value of inclination
20	U4	tLambda	2 <sup>-5</sup>	s	Time of the first ascending node passage
24	I4	deltaT	2 <sup>-9</sup>	s/orbital-period	Correction to the mean value of Draconian period
28	I1	deltaDT	2 <sup>-14</sup>	s/orbital-period <sup>2</sup>	Rate of change of Draconian period
29	I1	H	-	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6)
30	I2	omega	-	-	Argument of perigee
32	U1[4]	reserved1	-	-	Reserved

### 3.13.5.3 GLONASS auxiliary time offset assistance

<b>Message</b>	<b>UBX-MGA-GLO-TIMEOFFSET</b>				
	<b>GLONASS auxiliary time offset assistance</b>				
Type	Input				
Comment	This message allows the delivery of auxiliary GLONASS assistance (including the GLONASS time offsets to other GNSS systems) to a receiver. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Checksum
	0xb5 0x62	0x13	0x06	20	see below CK_A CK_B
Payload description:					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x03 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U2	N	-	days	Reference calendar day number within the four-year period of almanac (from string 5)
4	I4	tauC	2 <sup>-27</sup>	s	Time scale correction to UTC(SU) time
8	I4	tauGps	2 <sup>-31</sup>	s	Correction to GPS time relative to GLONASS time
12	I2	B1	2 <sup>-10</sup>	s	Coefficient to determine delta UT1
14	I2	B2	2 <sup>-16</sup>	s/msd	Rate of change of delta UT1
16	U1[4]	reserved0	-	-	Reserved

### 3.13.6 UBX-MGA-GPS (0x13 0x00)

### 3.13.6.1 GPS ephemeris assistance

<b>Message</b>		<b>UBX-MGA-GPS-EPH</b>				
		<b>GPS ephemeris assistance</b>				
<i>Type</i>	Input					
<i>Comment</i>	This message allows the delivery of GPS ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x00	68	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x01 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	svId	-	-	GPS Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0	-	-	Reserved	
4	U1	fitInterval	-	-	Fit interval flag	
5	U1	uraIndex	-	-	URA index	
6	U1	svHealth	-	-	SV health	
7	I1	tgd	2 <sup>-31</sup>	s	Group delay differential	
8	U2	iodc	-	-	IODC	
10	U2	toc	2 <sup>4</sup>	s	Clock data reference time	
12	U1	reserved1	-	-	Reserved	
13	I1	af2	2 <sup>-55</sup>	s/s squared	Time polynomial coefficient 2	
14	I2	af1	2 <sup>-43</sup>	s/s	Time polynomial coefficient 1	
16	I4	af0	2 <sup>-31</sup>	s	Time polynomial coefficient 0	
20	I2	crs	2 <sup>-5</sup>	m	Crs	
22	I2	deltaN	2 <sup>-43</sup>	semi-circles/s	Mean motion difference from computed value	
24	I4	m0	2 <sup>-31</sup>	semi-circles	Mean anomaly at reference time	
28	I2	cuc	2 <sup>-29</sup>	radians	Amplitude of cosine harmonic correction term to argument of latitude	
30	I2	cus	2 <sup>-29</sup>	radians	Amplitude of sine harmonic correction term to argument of latitude	
32	U4	e	2 <sup>-33</sup>	-	Eccentricity	
36	U4	sqrtA	2 <sup>-19</sup>	m <sup>0.5</sup>	Square root of the semi-major axis	
40	U2	toe	2 <sup>4</sup>	s	Reference time of ephemeris	
42	I2	cic	2 <sup>-29</sup>	radians	Amplitude of cos harmonic correction term to angle of inclination	
44	I4	omega0	2 <sup>-31</sup>	semi-circles	Longitude of ascending node of orbit plane at weekly epoch	
48	I2	cis	2 <sup>-29</sup>	radians	Amplitude of sine harmonic correction term to angle of inclination	
50	I2	crc	2 <sup>-5</sup>	m	Amplitude of cosine harmonic correction term to orbit radius	

52	I4	i0	2 <sup>-31</sup>	semi-circles	Inclination angle at reference time
56	I4	omega	2 <sup>-31</sup>	semi-circles	Argument of perigee
60	I4	omegaDot	2 <sup>-43</sup>	semi-circles/s	Rate of right ascension
64	I2	idot	2 <sup>-43</sup>	semi-circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	Reserved

### 3.13.6.2 GPS almanac assistance

<b>Message</b>	<b>UBX-MGA-GPS-ALM</b>					
	<b>GPS almanac assistance</b>					
Type	Input					
Comment	This message allows the delivery of GPS almanac assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x00	36	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x02 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	svId	-	-	GPS Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	svHealth	-	-	SV health information	
4	U2	e	2 <sup>-21</sup>	-	Eccentricity	
6	U1	almWNa	-	week	Reference week number of almanac (the 8-bit WNa field)	
7	U1	toa	2 <sup>-12</sup>	s	Reference time of almanac	
8	I2	deltaI	2 <sup>-19</sup>	semi-circles	Delta inclination angle at reference time	
10	I2	omegaDot	2 <sup>-38</sup>	semi-circles/s	Rate of right ascension	
12	U4	sqrtA	2 <sup>-11</sup>	m <sup>0.5</sup>	Square root of the semi-major axis	
16	I4	omega0	2 <sup>-23</sup>	semi-circles	Longitude of ascending node of orbit plane	
20	I4	omega	2 <sup>-23</sup>	semi-circles	Argument of perigee	
24	I4	m0	2 <sup>-23</sup>	semi-circles	Mean anomaly at reference time	
28	I2	af0	2 <sup>-20</sup>	s	Time polynomial coefficient 0 (8 MSBs)	
30	I2	af1	2 <sup>-38</sup>	s/s	Time polynomial coefficient 1	
32	U1[4]	reserved0	-	-	Reserved	

### 3.13.6.3 GPS health assistance

<b>Message</b>	<b>UBX-MGA-GPS-HEALTH</b>					
	<b>GPS health assistance</b>					
Type	Input					
Comment	This message allows the delivery of GPS health assistance to a receiver.					

See section AssistNow online in the integration manual for details.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x00	40	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x04 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	U1[32]	healthCode	-	-	Each byte represents a GPS SV (1-32). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5 page 25.
36	U1[4]	reserved1	-	-	Reserved

### 3.13.6.4 GPS UTC assistance

Message	UBX-MGA-GPS-UTC GPS UTC assistance
---------	---------------------------------------

Type	Input
------	-------

Comment	This message allows the delivery of GPS UTC assistance to a receiver. See section AssistNow online in the integration manual for details.
---------	----------------------------------------------------------------------------------------------------------------------------------------------

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x00	20	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x05 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	utcA0	2 <sup>-30</sup>	s	First parameter of UTC polynomial
8	I4	utcA1	2 <sup>-50</sup>	s/s	Second parameter of UTC polynomial
12	I1	utcDtLS	-	s	Delta time due to current leap seconds
13	U1	utcTot	2 <sup>12</sup>	s	UTC parameters reference time of week (GPS time)
14	U1	utcWNt	-	weeks	UTC parameters reference week number (the 8-bit WNt field)
15	U1	utcWNlsf	-	weeks	Week number at the end of which the future leap second becomes effective (the 8-bit WNLSF field)
16	U1	utcDn	-	days	Day number at the end of which the future leap second becomes effective
17	I1	utcDtLSF	-	s	Delta time due to future leap seconds
18	U1[2]	reserved1	-	-	Reserved

### 3.13.6.5 GPS ionosphere assistance

Message	UBX-MGA-GPS-IONO GPS ionosphere assistance
---------	-----------------------------------------------

Type	Input
------	-------

Comment	This message allows the delivery of GPS ionospheric assistance to a receiver. See section AssistNow online in the integration manual for details.
---------	------------------------------------------------------------------------------------------------------------------------------------------------------

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x00	16	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x06 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I1	ionoAlpha0	2 <sup>-30</sup>	s	Ionospheric parameter alpha0 [s]
5	I1	ionoAlpha1	2 <sup>-27</sup>	s/semi-circle	Ionospheric parameter alpha1 [s/semi-circle]
6	I1	ionoAlpha2	2 <sup>-24</sup>	s/(semi-circle <sup>2</sup> )	Ionospheric parameter alpha2 [s/semi-circle <sup>2</sup> ]
7	I1	ionoAlpha3	2 <sup>-24</sup>	s/(semi-circle <sup>3</sup> )	Ionospheric parameter alpha3 [s/semi-circle <sup>3</sup> ]
8	I1	ionoBeta0	2 <sup>11</sup>	s	Ionospheric parameter beta0 [s]
9	I1	ionoBeta1	2 <sup>14</sup>	s/semi-circle	Ionospheric parameter beta1 [s/semi-circle]
10	I1	ionoBeta2	2 <sup>16</sup>	s/(semi-circle <sup>2</sup> )	Ionospheric parameter beta2 [s/semi-circle <sup>2</sup> ]
11	I1	ionoBeta3	2 <sup>16</sup>	s/(semi-circle <sup>3</sup> )	Ionospheric parameter beta3 [s/semi-circle <sup>3</sup> ]
12	U1[4]	reserved1	-	-	Reserved

### 3.13.7 UBX-MGA-INI (0x13 0x40)

#### 3.13.7.1 Initial position assistance

Message	UBX-MGA-INI-POS_XYZ Initial position assistance					
Type	Input					
Comment	<p>This message allows the delivery of initial position assistance to a receiver in cartesian ECEF coordinates. This message is equivalent to the <a href="#">UBX-MGA-INI-POS_LLH</a> message, except for the coordinate system. See section AssistNow Online in the integration manual for details.</p> <p>↪ Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.</p>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x40	20	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x00 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	ecefX	-	cm	WGS84 ECEF X coordinate
8	I4	ecefY	-	cm	WGS84 ECEF Y coordinate
12	I4	ecefZ	-	cm	WGS84 ECEF Z coordinate
16	U4	posAcc	-	cm	Position accuracy (stddev)



### 3.13.7.2 Initial position assistance

<b>Message</b>	<b>UBX-MGA-INI-POS_LLH</b>					
	<b>Initial position assistance</b>					
<b>Type</b>	Input					
<b>Comment</b>	This message allows the delivery of initial position assistance to a receiver in WGS84 lat/long/alt coordinates. This message is equivalent to the <a href="#">UBX-MGA-INI-POS_XYZ</a> message, except for the coordinate system. See section AssistNow online in the integration manual for details. ☞ Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x40	20	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x01 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1[2]	reserved0	-	-	<a href="#">Reserved</a>	
4	I4	lat	1e-7	deg	WGS84 Latitude	
8	I4	lon	1e-7	deg	WGS84 Longitude	
12	I4	alt	-	cm	WGS84 Altitude	
16	U4	posAcc	-	cm	Position accuracy (stddev)	

### 3.13.7.3 Initial time assistance

<b>Message</b>	<b>UBX-MGA-INI-TIME.UTC</b>					
	<b>Initial time assistance</b>					
<b>Type</b>	Input					
<b>Comment</b>	This message allows the delivery of UTC time assistance to a receiver. This message is equivalent to the <a href="#">UBX-MGA-INI-TIME_GNSS</a> message, except for the time base. See section AssistNow online in the integration manual for details. ☞ Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x40	24	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x10 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	X1	ref	-	-	Reference to be used to set time	
bits 3...0	U:4	source	-	-	<ul style="list-style-type: none"> <li>0 = none, i.e. on receipt of message (will be inaccurate!)</li> <li>1 = relative to pulse sent to EXTINT0</li> <li>2 = relative to pulse sent to EXTINT1</li> <li>3-15 = reserved</li> </ul>	
bit 4	U:1	fall	-	-	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT	
bit 5	U:1	last	-	-	use last EXTINT pulse (default next pulse) - only if source is EXTINT	
3	I1	leapSecs	-	s	Number of leap seconds since 1980 (or 0x80 = -128 if unknown)	

4	U2	year	-	-	Year	
6	U1	month	-	-	Month, starting at 1	
7	U1	day	-	-	Day, starting at 1	
8	U1	hour	-	-	Hour, from 0 to 23	
9	U1	minute	-	-	Minute, from 0 to 59	
10	U1	second	-	s	Seconds, from 0 to 59	
11	X1	bitfield0	-	-	bitfield:	
	bit 0	U:1	trustedSource	-	-	Time is provided from a trusted source. Potentially usable for replay attack detection <ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: Time source can be trusted for spoofing detection</li> </ul>
12	U4	ns	-	ns	Nanoseconds, from 0 to 999,999,999	
16	U2	tAccS	-	s	Seconds part of time accuracy	
18	U1[2]	reserved0	-	-	Reserved	
20	U4	tAccNs	-	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999	

### 3.13.7.4 Initial time assistance

<b>Message</b>	<b>UBX-MGA-INI-TIME_GNSS</b>					
	<b>Initial time assistance</b>					
<b>Type</b>	Input					
<b>Comment</b>	This message allows the delivery of time assistance to a receiver in a chosen GNSS timebase. This message is equivalent to the <a href="#">UBX-MGA-INI-TIME_UTC</a> message, except for the time base. See section AssistNow online in the integration manual for details. ☞ Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x40	24	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x1 1 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	X1	ref	-	-	Reference to be used to set time	
	bits 3...0	U:4	source	-	-	<ul style="list-style-type: none"> <li>0 = none, i.e. on receipt of message (will be inaccurate!)</li> <li>1 = relative to pulse sent to EXTINT0</li> <li>2 = relative to pulse sent to EXTINT1</li> <li>3-15 = reserved</li> </ul>
	bit 4	U:1	fall	-	-	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
	bit 5	U:1	last	-	-	use last EXTINT pulse (default next pulse) - only if source is EXTINT
3	U1	gnssId	-	-	Source of time information. Currently supported: <ul style="list-style-type: none"> <li>0 = GPS time</li> <li>2 = Galileo time</li> <li>3 = BeiDou time</li> <li>6 = GLONASS time</li> <li>7 = NavIC time</li> </ul>	

4	X1	bitfield0	-	-	bitfield:	
	bit 0	U:1	trustedSource	-	-	Time is provided from a trusted source. Potentially usable for replay attack detection
						<ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: Time source can be trusted for spoofing detection</li> </ul>
5	U1	reserved0	-	-	Reserved	
6	U2	week	-	-	GNSS week number	
8	U4	tow	-	s	GNSS time of week	
12	U4	ns	-	ns	GNSS time of week, nanosecond part from 0 to 999,999,999	
16	U2	tAccs	-	s	Seconds part of time accuracy	
18	U1[2]	reserved1	-	-	Reserved	
20	U4	tAccNs	-	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999	

### 3.13.7.5 Initial clock drift assistance

<b>Message</b>	<b>UBX-MGA-INI-CLKD</b>					
	<b>Initial clock drift assistance</b>					
<b>Type</b>	Input					
<b>Comment</b>	<p>This message allows the delivery of clock drift assistance to a receiver. See section AssistNow online in the integration manual for details.</p> <p>☞ Supplying clock drift assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.</p>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x40	12	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x20 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1[2]	reserved0	-	-	Reserved	
4	I4	clkD	-	ns/s	Clock drift	
8	U4	clkDAcc	-	ns/s	Clock drift accuracy	

### 3.13.7.6 Initial frequency assistance

<b>Message</b>	<b>UBX-MGA-INI-FREQ</b>					
	<b>Initial frequency assistance</b>					
<b>Type</b>	Input					
<b>Comment</b>	<p>This message allows the delivery of external frequency assistance to a receiver. See section AssistNow online in the integration manual for details.</p> <p>☞ Supplying external frequency assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.</p>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x13	0x40	12	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	type	-	-	Message type (0x21 for this type)	

1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	reserved0	-	-	<a href="#">Reserved</a>	
3	X1	flags	-	-	Frequency reference	
	bits 3...0	U:4	source	-	-	<ul style="list-style-type: none"> <li>0 = frequency available on EXTINT0</li> <li>1 = frequency available on EXTINT1</li> <li>2-15 = reserved</li> </ul>
	bit 4	U:1	fall	-	-	use falling edge of EXTINT pulse (default rising)
4	I4	freq	1e-2	Hz	Frequency	
8	U4	freqAcc	-	ppb	Frequency accuracy	

### 3.13.7.7 Attitude initialization data

<b>Message</b>	<b>UBX-MGA-INI-ATT</b>					
	<b>Attitude initialization data</b>					
Type	Input					
Comment	This message is used to set attitude initialization data.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x40	28	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x40 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U2	age	-	s	Age of calibration data. (Set to 0 if unknown)	
4	I4	roll	1e-5	deg	Vehicle roll.	
8	I4	pitch	1e-5	deg	Vehicle pitch.	
12	I4	heading	1e-5	deg	Vehicle heading.	
16	U4	accRoll	1e-5	deg	Vehicle roll accuracy (if null, roll angle is not available).	
20	U4	accPitch	1e-5	deg	Vehicle pitch accuracy (if null, pitch angle is not available).	
24	U4	accHeading	1e-5	deg	Vehicle heading accuracy (if null, heading angle is not available).	

### 3.13.8 UBX-MGA-QZSS (0x13 0x05)

#### 3.13.8.1 QZSS ephemeris assistance

<b>Message</b>	<b>UBX-MGA-QZSS-EPH</b>					
	<b>QZSS ephemeris assistance</b>					
Type	Input					
Comment	This message allows the delivery of QZSS ephemeris assistance to a receiver. See section AssistNow Online in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x05	68	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x01 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	

2	U1	svId	-	-	QZSS Satellite identifier (see <a href="#">Satellite Numbering</a> ), Range 1-5
3	U1	reserved0	-	-	<a href="#">Reserved</a>
4	U1	fitInterval	-	-	Fit interval flag
5	U1	uraIndex	-	-	URA index
6	U1	svHealth	-	-	SV health
7	I1	tgD	2 <sup>-31</sup>	s	Group delay differential
8	U2	iodc	-	-	IODC
10	U2	toc	2 <sup>4</sup>	s	Clock data reference time
12	U1	reserved1	-	-	<a href="#">Reserved</a>
13	I1	af2	2 <sup>-55</sup>	s/s squared	Time polynomial coefficient 2
14	I2	af1	2 <sup>-43</sup>	s/s	Time polynomial coefficient 1
16	I4	af0	2 <sup>-31</sup>	s	Time polynomial coefficient 0
20	I2	crs	2 <sup>-5</sup>	m	Crs
22	I2	deltaN	2 <sup>-43</sup>	semi-circles/s	Mean motion difference from computed value
24	I4	m0	2 <sup>-31</sup>	semi-circles	Mean anomaly at reference time
28	I2	cuc	2 <sup>-29</sup>	radians	Amp of cosine harmonic corr term to arg of lat
30	I2	cus	2 <sup>-29</sup>	radians	Amp of sine harmonic corr term to arg of lat
32	U4	e	2 <sup>-33</sup>	-	eccentricity
36	U4	sqrtA	2 <sup>-19</sup>	m <sup>0.5</sup>	Square root of the semi-major axis A
40	U2	toe	2 <sup>4</sup>	s	Reference time of ephemeris
42	I2	cic	2 <sup>-29</sup>	radians	Amp of cos harmonic corr term to angle of inclination
44	I4	omega0	2 <sup>-31</sup>	semi-circles	Long of asc node of orbit plane at weekly epoch
48	I2	cis	2 <sup>-29</sup>	radians	Amp of sine harmonic corr term to angle of inclination
50	I2	crc	2 <sup>-5</sup>	m	Amp of cosine harmonic corr term to orbit radius
52	I4	i0	2 <sup>-31</sup>	semi-circles	Inclination angle at reference time
56	I4	omega	2 <sup>-31</sup>	semi-circles	Argument of perigee
60	I4	omegaDot	2 <sup>-43</sup>	semi-circles/s	Rate of right ascension
64	I2	idot	2 <sup>-43</sup>	semi-circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	<a href="#">Reserved</a>

### 3.13.8.2 QZSS almanac assistance

<b>Message</b>	<b>UBX-MGA-QZSS-ALM</b> <b>QZSS almanac assistance</b>					
Type	Input					
Comment	This message allows the delivery of QZSS almanac assistance to a receiver. See section AssistNow Online in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x05	36	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	QZSS Satellite identifier (see <a href="#">Satellite Numbering</a> ), Range 1-5
3	U1	svHealth	-	-	Almanac SV health information
4	U2	e	2 <sup>-21</sup>	-	Almanac eccentricity
6	U1	almWNa	-	week	Reference week number of almanac (the 8-bit WNa field)
7	U1	toa	2 <sup>12</sup>	s	Reference time of almanac
8	I2	deltaI	2 <sup>-19</sup>	semi-circles	Delta inclination angle at reference time
10	I2	omegaDot	2 <sup>-38</sup>	semi-circles/s	Almanac rate of right ascension
12	U4	sqrtA	2 <sup>-11</sup>	m <sup>0.5</sup>	Almanac square root of the semi-major axis A
16	I4	omega0	2 <sup>-23</sup>	semi-circles	Almanac long of asc node of orbit plane at weekly
20	I4	omega	2 <sup>-23</sup>	semi-circles	Almanac argument of perigee
24	I4	m0	2 <sup>-23</sup>	semi-circles	Almanac mean anomaly at reference time
28	I2	af0	2 <sup>-20</sup>	s	Almanac time polynomial coefficient 0 (8 MSBs)
30	I2	af1	2 <sup>-38</sup>	s/s	Almanac time polynomial coefficient 1
32	U1[4]	reserved0	-	-	<a href="#">Reserved</a>

### 3.13.8.3 QZSS health assistance

**Message**    **UBX-MGA-QZSS-HEALTH**  
**QZSS health assistance**

*Type*            Input

*Comment*        This message allows the delivery of QZSS health assistance to a receiver.  
See section AssistNow Online in the integration manual for details.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x05	12	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x04 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	<a href="#">Reserved</a>
4	U1[5]	healthCode	-	-	Each byte represents a QZSS SV (1-5). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5, data ID = 3, SV ID = 51
9	U1[3]	reserved1	-	-	<a href="#">Reserved</a>

### 3.13.9 UBX-MGA-SF (0x13 0x10)

### 3.13.9.1 Sensor fusion initialization data

<b>Message</b>		<b>UBX-MGA-SF-INI</b>				
		<b>Sensor fusion initialization data</b>				
Type	Input/output					
Comment	This message is used to poll and set sensor fusion initialization data.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x10	96 + nValA·8 + nValB·8	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x00 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	nValA	-	-	Number of values in sensor data repeated group	
3	U1	nValB	-	-	Number of values in sensor data repeated group B	
4	U2	age	-	s	Age of calibration data. (Set to 0 if unknown)	
6	U1[90]	reserved0	-	-	Reserved	
Start of repeated group (nValA times)						
96 + n·8	U1[8]	reserved1	-	-	Reserved	
End of repeated group (nValA times)						
Start of repeated group (nValB times)						
96 + nValA·8 + n·8	U1[8]	reserved2	-	-	Reserved	
End of repeated group (nValB times)						

### 3.13.9.2 Sensor fusion initialization data

<b>Message</b>		<b>UBX-MGA-SF-INI2</b>				
		<b>Sensor fusion initialization data</b>				
Type	Input/output					
Comment	This message is used to poll and set sensor fusion initialization data.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x10	464	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x10 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1[462]	reserved0	-	-	Reserved	

## 3.14 UBX-MON (0x0a)

The messages in the UBX-MON class are used to report the receiver status, such as hardware status or I/O subsystem statistics.

### 3.14.1 UBX-MON-COMMS (0x0a 0x36)

### 3.14.1.1 Communication port information

<b>Message</b>		<b>UBX-MON-COMMS</b>				
		<b>Communication port information</b>				
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	Consolidated communications information for all ports. The size of the message is determined by the number of ports that are in use on the receiver. A port is only included if communication, either send or receive, has been initiated on that port.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x0a	0x36	8 + nPorts·40	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	nPorts	-	-	Number of ports included	
2	X1	txErrors	-	-	TX error bitmask	
	bit 0 U:1	mem	-	-	Memory Allocation error	
	bit 1 U:1	alloc	-	-	Allocation error (TX buffer full)	
3	U1	reserved0	-	-	Reserved	
4	U1[4]	protIds	-		The identifiers of the protocols reported in the msgs array. 0: UBX, 1: NMEA, 2: RTCM2, 5: RTCM3, 6: SPARTN, 0xFF: No protocol reported.	
<i>Start of repeated group (nPorts times)</i>						
8 + n·40	U2	portId	-	-	Unique identifier for the port. See section Communications ports in the integration manual for details.	
10 + n·40	U2	txPending	-	bytes	Number of bytes pending in transmitter buffer	
12 + n·40	U4	txBytes	-	bytes	Number of bytes ever sent	
16 + n·40	U1	txUsage	-	%	Maximum usage transmitter buffer during the last sysmon period	
17 + n·40	U1	txPeakUsage	-	%	Maximum usage transmitter buffer	
18 + n·40	U2	rxPending	-	bytes	Number of bytes in receiver buffer	
20 + n·40	U4	rxBytes	-	bytes	Number of bytes ever received	
24 + n·40	U1	rxUsage	-	%	Maximum usage receiver buffer during the last sysmon period	
25 + n·40	U1	rxPeakUsage	-	%	Maximum usage receiver buffer	
26 + n·40	U2	overrunErrs	-	-	Number of 100 ms timeslots with overrun errors	
28 + n·40	U2[4]	msgs	-	msg	Number of successfully parsed messages for each protocol. The reported protocols are identified through the protIds field.	
36 + n·40	U1[8]	reserved1	-	-	Reserved	
44 + n·40	U4	skipped	-	bytes	Number of skipped bytes	
<i>End of repeated group (nPorts times)</i>						

### 3.14.2 UBX-MON-GNSS (0x0a 0x28)



### 3.14.2.1 Information message major GNSS selection

<b>Message</b>		<b>UBX-MON-GNSS</b>				
		<b>Information message major GNSS selection</b>				
<i>Type</i>	Polled					
<i>Comment</i>	This message reports major GNSS selection. It does this by means of bit masks in U1 fields. Each bit in a bit mask corresponds to one major GNSS. Augmentation systems are not reported.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x0a	0x28	8	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	X1	supported	-	-	A bit mask showing the major GNSS that can be supported by this receiver	
bit 0	U <sub>:1</sub>	GPSSup	-	-	GPS is supported	
bit 1	U <sub>:1</sub>	GlonassSup	-	-	GLONASS is supported	
bit 2	U <sub>:1</sub>	BeidouSup	-	-	BeiDou is supported	
bit 3	U <sub>:1</sub>	GalileoSup	-	-	Galileo is supported	
2	X1	defaultGnss	-	-	A bit mask showing the default major GNSS selection. If the default major GNSS selection is currently configured in the efuse for this receiver, it takes precedence over the default major GNSS selection configured in the executing firmware of this receiver.	
bit 0	U <sub>:1</sub>	GPSDef	-	-	GPS is default-enabled	
bit 1	U <sub>:1</sub>	GlonassDef	-	-	GLONASS is default-enabled	
bit 2	U <sub>:1</sub>	BeidouDef	-	-	BeiDou is default-enabled	
bit 3	U <sub>:1</sub>	GalileoDef	-	-	Galileo is default-enabled	
3	X1	enabled	-	-	A bit mask showing the current major GNSS selection enabled for this receiver	
bit 0	U <sub>:1</sub>	GPSEna	-	-	GPS is enabled	
bit 1	U <sub>:1</sub>	GlonassEna	-	-	GLONASS is enabled	
bit 2	U <sub>:1</sub>	BeidouEna	-	-	BeiDou is enabled	
bit 3	U <sub>:1</sub>	GalileoEna	-	-	Galileo is enabled	
4	U1	simultaneous	-	-	Maximum number of concurrent major GNSS that can be supported by this receiver	
5	U1[3]	reserved0	-	-	Reserved	

### 3.14.3 UBX-MON-HW (0x0a 0x09)

#### 3.14.3.1 Hardware status

<b>Message</b>		<b>UBX-MON-HW</b>	
		<b>Hardware status</b>	
<i>Type</i>	Periodic/pollled		
<i>Comment</i>	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-HW3</a> and <a href="#">UBX-MON-RF</a> instead.</b> Status of different aspects of the hardware, such as antenna, PIO/peripheral pins, noise level, automatic gain control (AGC)		

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x09	60	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description	
0	X4	pinSel	-	-	Mask of pins set as peripheral/PIO	
4	X4	pinBank	-	-	Mask of pins set as bank A/B	
8	X4	pinDir	-	-	Mask of pins set as input/output	
12	X4	pinVal	-	-	Mask of pins value low/high	
16	U2	noisePerMS	-	-	Noise level as measured by the GPS core	
18	U2	agcCnt	-	-	AGC Monitor, as percentage of maximum gain, range 0 to 8191 (100%)	
20	U1	aStatus	-	-	Status of the antenna supervisor state machine (0=INIT, 1=DONTKNOW, 2=OK, 3=SHORT, 4=OPEN)	
21	U1	aPower	-	-	Current power status of antenna (0=OFF, 1=ON, 2=DONTKNOW)	
22	X1	flags	-	-	Flags	
	bit 0	U:1	rtcCalib	-	-	RTC is calibrated
	bit 1	U:1	safeBoot	-	-	Safeboot mode (0 = inactive, 1 = active)
	bits 3...2	U:2	jammingState	-	-	Output from jamming/interference monitor (0 = unknown or feature disabled or flag unavailable, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix). This flag is deprecated in protocol versions that support UBX-SEC-SIG (version 0x02) and always reported as 0; instead jammingState in UBX-SEC-SIG should be monitored.
	bit 4	U:1	xtalAbsent	-	-	RTC xtal has been determined to be absent (not supported for protocol versions less than 18.00)
23	U1	reserved0	-	-	<a href="#">Reserved</a>	
24	X4	usedMask	-	-	Mask of pins that are used by the virtual pin manager	
28	U1[17]	vp	-	-	Array of pin mappings for each of the 17 physical pins	
45	U1	cwSuppression	-	-	CW interference suppression level, scaled (0 = no CW jamming, 255 = strong CW jamming)	
46	U1[2]	reserved1	-	-	<a href="#">Reserved</a>	
48	X4	pinIrq	-	-	Mask of pins value using the PIO Irq	
52	X4	pullH	-	-	Mask of pins value using the PIO pull high resistor	
56	X4	pullL	-	-	Mask of pins value using the PIO pull low resistor	

### 3.14.4 UBX-MON-HW2 (0x0a 0x0b)

#### 3.14.4.1 Extended hardware status

<b>Message</b>	<b>UBX-MON-HW2</b> <b>Extended hardware status</b>
<b>Type</b>	Periodic/pollled
<b>Comment</b>	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-HW3</a> and <a href="#">UBX-MON-RF</a> instead.</b> Status of different aspects of the hardware such as Imbalance, Low-Level Configuration and POST Results. The first four parameters of this message represent the complex signal from the RF front end. The following rules of thumb apply:

- The smaller the absolute value of the variable `ofsI` and `ofsQ`, the better.
- Ideally, the magnitude of the I-part (`magI`) and the Q-part (`magQ`) of the complex signal should be the same.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x0b	28	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	I1	<code>ofsI</code>	-	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
1	U1	<code>magI</code>	-	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
2	I1	<code>ofsQ</code>	-	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
3	U1	<code>magQ</code>	-	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
4	U1	<code>cfgSource</code>	-	-	Source of low-level configuration (114 = ROM, 111 = OTP, 112 = config pins, 102 = flash image)
5	U1[3]	<code>reserved0</code>	-	-	Reserved
8	U4	<code>lowLevCfg</code>	-	-	Low-level configuration (obsolete for protocol versions greater than 15.00)
12	U1[8]	<code>reserved1</code>	-	-	Reserved
20	U4	<code>postStatus</code>	-	-	POST status word
24	U1[4]	<code>reserved2</code>	-	-	Reserved

### 3.14.5 UBX-MON-HW3 (0x0a 0x37)

#### 3.14.5.1 I/O pin status

Message	UBX-MON-HW3 I/O pin status					
Type	Periodic/pollled					
Comment	This message contains information specific to each HW I/O pin, for example whether the pin is set as Input or Output. For the antenna supervisor status and other RF status information, see the <a href="#">UBX-MON-RF</a> message.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x37	22 + nPins*6	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	<code>version</code>	-	-	Message version (0x00 for this version)	
1	U1	<code>nPins</code>	-	-	The number of I/O pins included	
2	X1	<code>flags</code>	-	-	Flags	
	bit 0	U:1	<code>rtcCalib</code>	-	-	RTC is calibrated
	bit 1	U:1	<code>safeBoot</code>	-	-	Safeboot mode (0 = inactive, 1 = active)
	bit 2	U:1	<code>xtalAbsent</code>	-	-	RTC xtal has been determined to be absent
3	CH[10]	<code>hwVersion</code>	-	-	Zero-terminated hardware version string (same as that returned in the <a href="#">UBX-MON-VER</a> message)	

13	U1[9]	reserved0	-	-	Reserved
<i>Start of repeated group (nPins times)</i>					
22 + n·6	U1	reserved1	-	-	Reserved
23 + n·6	U1	pinId	-	-	Identifier for the pin, including both external and internal pins
24 + n·6	X2	pinMask	-	-	Pin mask
	bit 0 U:1	periphPIO	-	-	Pin is set to peripheral or PIO? 0=Peripheral 1=PIO
	bits 3...1 U:3	pinBank	-	-	Bank the pin belongs to, where 0=A 1=B 2=C 3=D 4=E 5=F 6=G 7=H
	bit 4 U:1	direction	-	-	Pin direction? 0=Input 1=Output
	bit 5 U:1	value	-	-	Pin value? 0=Low 1=High
	bit 6 U:1	vpManager	-	-	Used by virtual pin manager? 0=No 1=Yes
	bit 7 U:1	pioIrq	-	-	Interrupt enabled? 0=No 1=Yes
	bit 8 U:1	pioPullHigh	-	-	Using pull high resistor? 0=No 1=Yes
	bit 9 U:1	pioPullLow	-	-	Using pull low resistor 0=No 1=Yes
26 + n·6	U1	VP	-	-	Virtual pin mapping
27 + n·6	U1	reserved2	-	-	Reserved
<i>End of repeated group (nPins times)</i>					

### 3.14.6 UBX-MON-IO (0x0a 0x02)

#### 3.14.6.1 I/O system status

<b>Message</b>	<b>UBX-MON-IO</b>					
	<b>I/O system status</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	<b>This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.</b>					
	The size of the message is determined by the number of ports 'N' the receiver supports, i.e. on u-blox 5 the number of ports is 6.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x0a	0x02	[0..n]·20	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
<i>Start of repeated group (N times)</i>						
0 + n·20	U4	rxBytes	-	bytes	Number of bytes ever received	
4 + n·20	U4	txBytes	-	bytes	Number of bytes ever sent	
8 + n·20	U2	parityErrs	-	-	Number of 100 ms timeslots with parity errors	
10 + n·20	U2	framingErrs	-	-	Number of 100 ms timeslots with framing errors	
12 + n·20	U2	overrunErrs	-	-	Number of 100 ms timeslots with overrun errors	
14 + n·20	U2	breakCond	-	-	Number of 100 ms timeslots with break conditions	
16 + n·20	U1[4]	reserved0	-	-	Reserved	
<i>End of repeated group (N times)</i>						

### 3.14.7 UBX-MON-MSGPP (0x0a 0x06)

### 3.14.7.1 Message parse and process status

<b>Message</b>		<b>UBX-MON-MSGPP</b>				
		<b>Message parse and process status</b>				
Type	Periodic/pollled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x06	120	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U2[8]	msg1	-	msgs	Number of successfully parsed messages for each protocol on port0	
16	U2[8]	msg2	-	msgs	Number of successfully parsed messages for each protocol on port1	
32	U2[8]	msg3	-	msgs	Number of successfully parsed messages for each protocol on port2	
48	U2[8]	msg4	-	msgs	Number of successfully parsed messages for each protocol on port3	
64	U2[8]	msg5	-	msgs	Number of successfully parsed messages for each protocol on port4	
80	U2[8]	msg6	-	msgs	Number of successfully parsed messages for each protocol on port5	
96	U4[6]	skipped	-	bytes	Number skipped bytes for each port	

### 3.14.8 UBX-MON-PATCH (0x0a 0x27)

#### 3.14.8.1 Installed patches

<b>Message</b>		<b>UBX-MON-PATCH</b>				
		<b>Installed patches</b>				
Type	Polled					
Comment	This message reports information about patches installed and currently enabled on the receiver. It does not report on patches installed and then disabled. An enabled patch is considered active when the receiver executes from the code space where the patch resides on. For example, a ROM patch is reported active only when the system runs from ROM.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x27	4 + nEntries·16	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U2	version	-	-	Message version (0x0001 for this version)	
2	U2	nEntries	-	-	Total number of reported patches	
Start of repeated group (nEntries times)						
4 + n·16	X4	patchInfo	-	-	Status information about the reported patch	
	bit 0	U <sub>1</sub>	activated	-	-	1: the patch is active, 0: otherwise
	bits 2...1	U <sub>2</sub>	location	-	-	Indicates where the patch is stored. 0: eFuse, 1: ROM, 2: BBR, 3: file system
8 + n·16	U4	comparator Number	-	-	The number of the comparator	
12 + n·16	U4	patchAddress	-	-	The address that is targeted by the patch	

16 + n·16	U4	patchData	-	-	The data that is inserted at the patchAddress
-----------	----	-----------	---	---	-----------------------------------------------

End of repeated group (*nEntries* times)

### 3.14.9 UBX-MON-RF (0x0a 0x38)

#### 3.14.9.1 RF information

<b>Message</b>		<b>UBX-MON-RF RF information</b>				
Type	Periodic/pollled					
Comment	Information for each RF block. There are as many RF blocks reported as bands supported by this receiver.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x38	4 + nBlocks·24	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	nBlocks	-	-	The number of RF blocks included	
2	U1[2]	reserved0	-	-	Reserved	
<i>Start of repeated group (nBlocks times)</i>						
4 + n·24	U1	blockId	-	-	RF block ID (0 = L1 band, 1 = L2 or L5 band depending on product configuration)	
5 + n·24	X1	flags	-	-	Flags	
	bits 1...0	U <sub>2</sub>	jammingState	-	-	Output from jamming/interference monitor (0 = unknown or feature disabled or flag unavailable, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix). This flag is deprecated in protocol versions that support UBX-SEC-SIG (version 0x02) and always reported as 0; instead jammingState in UBX-SEC-SIG should be monitored.
6 + n·24	U1	antStatus	-	-	Status of the antenna supervisor state machine (0x00=INIT, 0x01=DONTKNOW, 0x02=OK, 0x03=SHORT, 0x04=OPEN)	
7 + n·24	U1	antPower	-	-	Current power status of antenna (0x00=OFF, 0x01=ON, 0x02=DONTKNOW)	
8 + n·24	U4	postStatus	-	-	POST status word	
12 + n·24	U1[4]	reserved1	-	-	Reserved	
16 + n·24	U2	noisePerMS	-	-	Noise level as measured by the GPS core	
18 + n·24	U2	agcCnt	-	-	AGC Monitor, as percentage of maximum gain, range 0 to 8191 (100%)	
20 + n·24	U1	cwSuppression	-	-	CW interference suppression level, scaled (0=no CW jamming, 255 = strong CW jamming)	
21 + n·24	I1	ofsI	-	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)	
22 + n·24	U1	magI	-	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max.magnitude)	
23 + n·24	I1	ofsQ	-	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)	

24 + n·24	U1	magQ	-	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max.magnitude)
25 + n·24	U1[3]	reserved2	-	-	Reserved

End of repeated group (nBlocks times)

### 3.14.10 UBX-MON-RXBUF (0x0a 0x07)

#### 3.14.10.1 Receiver buffer status

<b>Message</b>	<b>UBX-MON-RXBUF</b>					
	<b>Receiver buffer status</b>					
Type	Periodic/pollled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x07	24	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U2[6]	pending	-	bytes	Number of bytes pending in receiver buffer for each target	
12	U1[6]	usage	-	%	Maximum usage receiver buffer during the last sysmon period for each target	
18	U1[6]	peakUsage	-	%	Maximum usage receiver buffer for each target	

### 3.14.11 UBX-MON-RXR (0x0a 0x21)

#### 3.14.11.1 Receiver status information

<b>Message</b>	<b>UBX-MON-RXR</b>					
	<b>Receiver status information</b>					
Type	Output					
Comment	The receiver ready message is sent when the receiver changes from or to backup mode.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x21	1	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	X1	flags	-	-	Receiver status flags	
bit 0	U <sub>1</sub>	awake	-	-	not in backup mode	

### 3.14.12 UBX-MON-SPAN (0x0a 0x31)

#### 3.14.12.1 Signal characteristics

<b>Message</b>	<b>UBX-MON-SPAN</b>					
	<b>Signal characteristics</b>					
Type	Periodic/pollled					
Comment	This message is to be used as a basic spectrum analyzer, where it displays one spectrum for each of the receiver's existing RF paths. The spectrum is conveyed with the following parameters: The frequency span in Hz, the frequency bin resolution in Hz, the center frequency in Hz, and 256 bins with amplitude data. Additionally, in order to give further insight on the signal captured by the receiver, the current gain of the internal programmable gain amplifier (PGA) is provided.					

**This message gives information for comparative analysis rather than absolute and precise spectrum overview. Users should not expect highly accurate spectrum amplitude.**

Note that the PGA gain is not included in the spectrum data but is available as a separate field. Neither the spectrum, nor the PGA gain considers the internal fixed LNA gain or an external third-party LNA.

The center frequency at each bin, assuming a zero-based bin count, can be computed as

$$f(i) = center + span * (i - 127) / 256$$

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x31	4 + numRfBlocks*272	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	numRfBlocks	-	-	Number of RF blocks included
2	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (numRfBlocks times)</i>					
4 + n*272	U1[256]	spectrum	-	dB	Spectrum data (number of points = span/res)
260 + n*272	U4	span	-	Hz	Spectrum span
264 + n*272	U4	res	-	Hz	Resolution of the spectrum
268 + n*272	U4	center	-	Hz	Center of spectrum span
272 + n*272	U1	pga	-	dB	Programmable gain amplifier
273 + n*272	U1[3]	reserved1	-	-	Reserved

*End of repeated group (numRfBlocks times)*

### 3.14.13 UBX-MON-SPT (0x0a 0x2f)

#### 3.14.13.1 Sensor production test

Message	UBX-MON-SPT Sensor production test					
Type	Polled					
Comment	<p>This message reports the state of, and measurements made during, sensor self-tests. This message can also be used to retrieve information about detected sensor(s) and driver(s) used. This message is only supported if a sensor is directly connected to the u-blox chip. This includes modules that contain IMUs.</p> <p>Note that this message shows the status of the last self-test since sensor startup. The self-test results are not stored in non-volatile memory.</p>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x2f	4 + numSensor*4 + numRes*12	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	numSensor	-	-	number of sensors reported in this message
2	U1	numRes	-	-	number of result items reported in this message
3	U1	reserved0	-	-	Reserved

*Start of repeated group (numSensor times)*



4 + n·4	U1	sensorId	-	-	<p>Sensor ID</p> <p>The following IDs are defined, others are reserved:</p> <ul style="list-style-type: none"> <li>• 1: ST LSM6DS0 6-axis IMU with temperature sensor</li> <li>• 2: Invensense MPU6500 6-axis IMU with temperature sensor</li> <li>• 3: Bosch BMI160 6-axis IMU with temperature sensor</li> <li>• 7: ST LSM6DS3 6-axis IMU with temperature sensor</li> <li>• 9: Bosch SMI130 6-axis IMU with temperature sensor</li> <li>• 12: MPU6515, 6-axis inertial sensor from Invensense</li> <li>• 13: ST LSM6DSL 6-axis IMU with temperature sensor</li> <li>• 14: SMG130, 3-axis gyroscope with temperature sensor from Bosch</li> <li>• 15: SMI230, 6-axis IMU with temperature sensor from Bosch</li> <li>• 16: BMI260, 6-axis IMU with temperature sensor from Bosch</li> <li>• 17: ICM330DLC, 6-axis IMU with temperature sensor from ST</li> <li>• 18: LSM6DSR, 6-axis IMU with 85 deg temperature sensor from ST</li> <li>• 19: ICM42605, 6-axis IMU with 85 deg temperature sensor from InvenSense TDK</li> <li>• 20: IIM42652, 6-axis IMU with 105 deg temperature sensor from InvenSense TDK</li> <li>• 21: BMI320, 6-axis IMU with 85 deg temperature sensor from Bosch</li> <li>• 22: IAM20680HT, 6-axis IMU with 105 deg temperature sensor from InvenSense TDK</li> <li>• 23: LSM6DSOW, 6-axis IMU with 85 deg temperature sensor from ST</li> </ul> <p>Not all sensors are supported in any released firmware. Refer to the release notes to find out which sensor is supported by a certain firmware.</p>
5 + n·4	X1	drvVer	-	-	Version information
	bits 3...0 U:4	drvVerMaj	-	-	Driver major version
	bits 7...4 U:4	drvVerMin	-	-	Driver minor version
6 + n·4	U1	testState	-	-	<p>State of one sensor's test, it can be</p> <ul style="list-style-type: none"> <li>• 0: test not yet started</li> <li>• 1: test started but not yet finished</li> <li>• 2: test did not finish due to error during execution</li> <li>• 3: test finished normally, test data is available</li> </ul>
7 + n·4	U1	drvFileName	-	-	0 if the active driver is loaded from image, last character of the file name if it is loaded from separate file.
<i>End of repeated group (numSensor times)</i>					
<i>Start of repeated group (numRes times)</i>					
4 + numSensor·4 + n·12	U2	sensorIdRes	-	-	Sensor ID; eligible values are the same as in sensorIdState field

6 + numSensor:4 + n:12	U2	sensorType	-	-	Sensor type and axis (if applicable) to which the result refers The following values are defined, others are reserved: <ul style="list-style-type: none"> <li>• 5: Gyroscope z axis</li> <li>• 12: Gyroscope temperature</li> <li>• 13: Gyroscope y axis</li> <li>• 14: Gyroscope x axis</li> <li>• 16: Accelerometer x axis</li> <li>• 17: Accelerometer y axis</li> <li>• 18: Accelerometer z axis</li> <li>• 19: Barometer</li> <li>• 22: Magnetometer x axis</li> <li>• 23: Magnetometer y axis</li> <li>• 24: Magnetometer z axis</li> <li>• 25: Barometer temperature</li> </ul>
8 + numSensor:4 + n:12	U2	resType	-	-	The type of result stored in the <code>value</code> field <ul style="list-style-type: none"> <li>• 1: Measurement without self-test offset (raw and unscaled digital value)</li> <li>• 2: Measurement with positive self-test offset (raw and unscaled digital value)</li> <li>• 3: Measurement with negative self-test offset (raw and unscaled digital value)</li> <li>• 4: Minimum off-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>• 5: Maximum off-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>• 6: Minimum negative-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>• 7: Maximum negative-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>• 8: Self-test passed; test passed if value = 1 and failed if 0. Used if the decision is read out from the sensor itself.</li> </ul>
10 + numSensor:4 + n:12	U1[2]	reserved1	-	-	Reserved
12 + numSensor:4 + n:12	I4	value	-	-	value of the specific test result
<i>End of repeated group (numRes times)</i>					

### 3.14.14 UBX-MON-SYS (0x0a 0x39)

#### 3.14.14.1 Current system performance information

<b>Message</b>	<b>UBX-MON-SYS</b>					
	<b>Current system performance information</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message contains operationally relevant system information for monitoring purposes. cpuLoadMax value is only valid, if 1 second output frequency is set. Detailed information about ioUsage/ioUsageMax are available in <a href="#">UBX-MON-COMMS</a> message. tempValue has an accuracy of +/- 2 deg.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x0a	0x39	24	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	msgVer	-	-	Message Version (0x01)
1	U1	bootType	-	-	Boot type of master chip 0-Unknown 1-Cold Start 2-Watchdog 3-Hardware reset 4-Hardware backup 5-Software backup 6-Software reset 7-VIO fail 8-VDD_X fail 9-VDD_RF fail 10-V_CORE_HIGH fail
2	U1	cpuLoad	-	-	Highest actual load of realtime tasks of all CPUs in %
3	U1	cpuLoadMax	-	-	Maximal CPU load value in % seen since last restart
4	U1	memUsage	-	-	Highest actual dynamic memory usage of all CPUs in %
5	U1	memUsageMax	-	-	Maximal dynamic memory usage in % seen since last restart
6	U1	ioUsage	-	-	Highest actual IO bandwidth usage of all rx/tx interfaces in %
7	U1	ioUsageMax	-	-	Maximal bandwidth usage of all rx/tx interfaces in % seen since last restart
8	U4	runTime	-	sec	Time since last restart
12	U2	noticeCount	-	-	Number of notices occurred since last restart
14	U2	warnCount	-	-	Number of warnings occurred since last restart
16	U2	errorCount	-	-	Number of errors occurred since last restart
18	I1	tempValue	-	-	Temperature value [C]
19	U1[5]	reserved0	-	-	<a href="#">Reserved</a>

### 3.14.15 UBX-MON-TXBUF (0x0a 0x08)

#### 3.14.15.1 Transmitter buffer status

Message	UBX-MON-TXBUF Transmitter buffer status					
Type	Periodic/pollled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x08	28	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U2[6]	pending	-	bytes	Number of bytes pending in transmitter buffer for each target	
12	U1[6]	usage	-	%	Maximum usage transmitter buffer during the last sysmon period for each target	

18	U1[6]	peakUsage	-	%	Maximum usage transmitter buffer for each target
24	U1	tUsage	-	%	Maximum usage of transmitter buffer during the last sysmon period for all targets
25	U1	tPeakusage	-	%	Maximum usage of transmitter buffer for all targets
26	X1	errors	-	-	Error bitmask
	bits 5...0	U:6	limit	-	Buffer limit of corresponding target reached
	bit 6	U:1	mem	-	Memory Allocation error
	bit 7	U:1	alloc	-	Allocation error (TX buffer full)
27	U1	reserved0	-	-	<a href="#">Reserved</a>

### 3.14.16 UBX-MON-VER (0x0a 0x04)

#### 3.14.16.1 Receiver and software version

<b>Message</b>	<b>UBX-MON-VER</b>					
	<b>Receiver and software version</b>					
<i>Type</i>	Polled					
<i>Comment</i>						
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x0a	0x04	40 + [0..n]·30	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	CH[30]	swVersion	-	-	Nul-terminated software version string.	
30	CH[10]	hwVersion	-	-	Nul-terminated hardware version string	
<i>Start of repeated group (N times)</i>						
40 + n·30	CH[30]	extension	-	-	Extended software information strings. A series of nul-terminated strings. Each extension field is 30 characters long and contains varying software information. Not all extension fields may appear. Examples of reported information: the software version string of the underlying ROM (when the receiver's firmware is running from flash), the firmware version, the supported <a href="#">protocol version</a> , the module identifier, the flash information structure (FIS) file information, the supported major GNSS, the supported augmentation systems. See <a href="#">Firmware and protocol versions</a> for details.	
<i>End of repeated group (N times)</i>						

### 3.15 UBX-NAV (0x01)

The messages in the UBX-NAV class are used to output navigation results and data, such as position, altitude and velocity in a number of formats, and status flags and accuracy estimate figures, or satellite and signal information. The messages are generated with the configured navigation rate.

#### 3.15.1 UBX-NAV-ATT (0x01 0x05)

### 3.15.1.1 Attitude solution

<b>Message</b>	<b>UBX-NAV-ATT</b>					
	<b>Attitude solution</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message outputs the attitude solution as roll, pitch and heading angles. See important comments concerning vehicle attitude given in the Vehicle attitude output section of the integration manual.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x05	32	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1[3]	reserved0	-	-	Reserved	
8	I4	roll	1e-5	deg	Vehicle roll.	
12	I4	pitch	1e-5	deg	Vehicle pitch.	
16	I4	heading	1e-5	deg	Vehicle heading.	
20	U4	accRoll	1e-5	deg	Vehicle roll accuracy (if null, roll angle is not available).	
24	U4	accPitch	1e-5	deg	Vehicle pitch accuracy (if null, pitch angle is not available).	
28	U4	accHeading	1e-5	deg	Vehicle heading accuracy (if null, heading angle is not available).	

### 3.15.2 UBX-NAV-CLOCK (0x01 0x22)

#### 3.15.2.1 Clock solution

<b>Message</b>	<b>UBX-NAV-CLOCK</b>					
	<b>Clock solution</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>						
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x22	20	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section Navigation epochs in the integration manual for details. See section iTOW timestamps in the integration manual for details.	
4	I4	clkB	-	ns	Clock bias	
8	I4	clkD	-	ns/s	Clock drift	
12	U4	tAcc	-	ns	Time accuracy estimate	
16	U4	fAcc	-	ps/s	Frequency accuracy estimate	

### 3.15.3 UBX-NAV-COV (0x01 0x36)

### 3.15.3.1 Covariance matrices

<b>Message</b>		<b>UBX-NAV-COV</b>				
		<b>Covariance matrices</b>				
Type	Periodic/polled					
Comment	This message outputs the covariance matrices for the position and velocity solutions in the topocentric coordinate system defined as the local-level North (N), East (E), Down (D) frame. As the covariance matrices are symmetric, only the upper triangular part is output.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x36	64	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1	posCovValid	-	-	Position covariance matrix validity flag	
6	U1	velCovValid	-	-	Velocity covariance matrix validity flag	
7	U1[9]	reserved0	-	-	Reserved	
16	R4	posCovNN	-	m <sup>2</sup>	Position covariance matrix value p <sub>NN</sub>	
20	R4	posCovNE	-	m <sup>2</sup>	Position covariance matrix value p <sub>NE</sub>	
24	R4	posCovND	-	m <sup>2</sup>	Position covariance matrix value p <sub>ND</sub>	
28	R4	posCovEE	-	m <sup>2</sup>	Position covariance matrix value p <sub>EE</sub>	
32	R4	posCovED	-	m <sup>2</sup>	Position covariance matrix value p <sub>ED</sub>	
36	R4	posCovDD	-	m <sup>2</sup>	Position covariance matrix value p <sub>DD</sub>	
40	R4	velCovNN	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>NN</sub>	
44	R4	velCovNE	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>NE</sub>	
48	R4	velCovND	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>ND</sub>	
52	R4	velCovEE	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>EE</sub>	
56	R4	velCovED	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>ED</sub>	
60	R4	velCovDD	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>DD</sub>	

### 3.15.4 UBX-NAV-DOP (0x01 0x04)

#### 3.15.4.1 Dilution of precision

<b>Message</b>		<b>UBX-NAV-DOP</b>				
		<b>Dilution of precision</b>				
Type	Periodic/polled					
Comment	<ul style="list-style-type: none"> <li>DOP values are dimensionless.</li> <li>All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56.</li> </ul>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x04	18	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	

0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U2	gDOP	0.01	-	Geometric DOP
6	U2	pDOP	0.01	-	Position DOP
8	U2	tDOP	0.01	-	Time DOP
10	U2	vDOP	0.01	-	Vertical DOP
12	U2	hDOP	0.01	-	Horizontal DOP
14	U2	nDOP	0.01	-	Northing DOP
16	U2	eDOP	0.01	-	Easting DOP

### 3.15.5 UBX-NAV-EELL (0x01 0x3d)

#### 3.15.5.1 Position error ellipse parameters

<b>Message</b>	<b>UBX-NAV-EELL</b> <b>Position error ellipse parameters</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message outputs the error ellipse parameters for the position solutions.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x3d	16	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1	reserved0	-	-	Reserved	
6	U2	errEllipse Orient	1e-2	deg	Orientation of semi-major axis of error ellipse (degrees from true north)	
8	U4	errEllipse Major	-	mm	Semi-major axis of error ellipse	
12	U4	errEllipse Minor	-	mm	Semi-minor axis of error ellipse	

### 3.15.6 UBX-NAV-EOE (0x01 0x61)

#### 3.15.6.1 End of epoch

<b>Message</b>	<b>UBX-NAV-EOE</b> <b>End of epoch</b>					
<i>Type</i>	Periodic					
<i>Comment</i>	This message is intended to be used as a marker to collect all navigation messages of an epoch. It is output after all enabled NAV class messages and after all enabled NMEA messages.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x61	4	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	

0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
---	----	------	---	----	-----------------------------------------------------------------------------------------------------------------

### 3.15.7 UBX-NAV-GEOFENCE (0x01 0x39)

#### 3.15.7.1 Geofencing status

<b>Message</b>	<b>UBX-NAV-GEOFENCE</b>					
	<b>Geofencing status</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	This message outputs the evaluated states of all configured geofences for the current epoch's position. See section Geofencing in the integration manual for feature details.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x39	8 + numFences*2	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1	status	-	-	Geofencing status <ul style="list-style-type: none"> <li>0 - Geofencing not available or not reliable</li> <li>1 - Geofencing active</li> </ul>	
6	U1	numFences	-	-	Number of geofences	
7	U1	combState	-	-	Combined (logical OR) state of all geofences <ul style="list-style-type: none"> <li>0 - Unknown</li> <li>1 - Inside</li> <li>2 - Outside</li> </ul>	
<i>Start of repeated group (numFences times)</i>						
8 + n*2	U1	state	-	-	Geofence state <ul style="list-style-type: none"> <li>0 - Unknown</li> <li>1 - Inside</li> <li>2 - Outside</li> </ul>	
9 + n*2	U1	id	-	-	Geofence ID (0 = not available)	
<i>End of repeated group (numFences times)</i>						

### 3.15.8 UBX-NAV-HPPOSECEF (0x01 0x13)

#### 3.15.8.1 High precision position solution in ECEF

<b>Message</b>	<b>UBX-NAV-HPPOSECEF</b>					
	<b>High precision position solution in ECEF</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x13	28	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	



0	U1	version	-	-	Message version (0x00 for this version)
1	U1[3]	reserved0	-	-	<a href="#">Reserved</a>
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
8	I4	ecefX	-	cm	ECEF X coordinate
12	I4	ecefY	-	cm	ECEF Y coordinate
16	I4	ecefZ	-	cm	ECEF Z coordinate
20	I1	ecefXHp	0.1	mm	High precision component of ECEF X coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefX + (ecefXHp * 1e-2).
21	I1	ecefYHp	0.1	mm	High precision component of ECEF Y coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefY + (ecefYHp * 1e-2).
22	I1	ecefZHp	0.1	mm	High precision component of ECEF Z coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefZ + (ecefZHp * 1e-2).
23	X1	flags	-	-	Additional flags
	bit 0 U:1	invalidEcef	-	-	1 = Invalid ecefX, ecefY, ecefZ, ecefXHp, ecefYHp and ecefZHp
24	U4	pAcc	0.1	mm	Position Accuracy Estimate

### 3.15.9 UBX-NAV-HPPOSLLH (0x01 0x14)

#### 3.15.9.1 High precision geodetic position solution

<b>Message</b>	<b>UBX-NAV-HPPOSLLH</b> <b>High precision geodetic position solution</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	See important comments concerning validity of position given in section Navigation output filters in the integration manual. This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">CFG-NAVSPG-USE_USRDAT</a> .					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x14	36	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1[2]	reserved0	-	-	<a href="#">Reserved</a>	
3	X1	flags	-	-	Additional flags	
	bit 0 U:1	invalidLlh	-	-	1 = Invalid lon, lat, height, hMSL, lonHp, latHp, heightHp and hMSLHp	
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
8	I4	lon	1e-7	deg	Longitude	
12	I4	lat	1e-7	deg	Latitude	
16	I4	height	-	mm	Height above ellipsoid.	

20	I4	hMSL	-	mm	Height above mean sea level
24	I1	lonHp	1e-9	deg	High precision component of longitude. Must be in the range -99..+99. Precise longitude in deg * 1e-7 = lon + (lonHp * 1e-2).
25	I1	latHp	1e-9	deg	High precision component of latitude. Must be in the range -99..+99. Precise latitude in deg * 1e-7 = lat + (latHp * 1e-2).
26	I1	heightHp	0.1	mm	High precision component of height above ellipsoid. Must be in the range -9..+9. Precise height in mm = height + (heightHp * 0.1).
27	I1	hMSLHp	0.1	mm	High precision component of height above mean sea level. Must be in range -9..+9. Precise height in mm = hMSL + (hMSLHp * 0.1)
28	U4	hAcc	0.1	mm	Horizontal accuracy estimate
32	U4	vAcc	0.1	mm	Vertical accuracy estimate

### 3.15.10 UBX-NAV-ORB (0x01 0x34)

#### 3.15.10.1 GNSS orbit database info

<b>Message</b>		<b>UBX-NAV-ORB</b>				
		<b>GNSS orbit database info</b>				
Type	Periodic/pollled					
Comment	Status of the GNSS orbit database knowledge.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x34	8 + numSv*6	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x01 for this version)	
5	U1	numSv	-	-	Number of SVs in the database	
6	U1[2]	reserved0	-	-	Reserved	
<i>Start of repeated group (numSv times)</i>						
8 + n*6	U1	gnssId	-	-	GNSS ID	
9 + n*6	U1	svId	-	-	Satellite ID	
10 + n*6	X1	svFlag	-	-	Information Flags	
bits 1...0	U:2	health	-	-	SV health: <ul style="list-style-type: none"> <li>0 = unknown</li> <li>1 = healthy</li> <li>2 = not healthy</li> </ul>	
bits 3...2	U:2	visibility	-	-	SV health: <ul style="list-style-type: none"> <li>0 = unknown</li> <li>1 = below horizon</li> <li>2 = above horizon</li> <li>3 = above elevation mask</li> </ul>	

11 + n·6	X1	eph	-	-	Ephemeris data In products supporting L5 signals, the receiver may store multiple ephemeris data sets per satellite. ephUsability and ephSource fields show information on one of the data sets. It is not possible to choose which data set's status is shown.
bits 4...0	U:5	ephUsability	-	-	How long the receiver will be able to use the stored ephemeris data from now on: <ul style="list-style-type: none"> <li>• 31 = The usability period is unknown</li> <li>• 30 = The usability period is more than 450 minutes</li> <li>• 30 &gt; n &gt; 0 = The usability period is between (n-1)*15 and n*15 minutes</li> <li>• 0 = Ephemeris can no longer be used</li> </ul>
bits 7...5	U:3	ephSource	-	-	<ul style="list-style-type: none"> <li>• 0 = not available</li> <li>• 1 = GNSS transmission</li> <li>• 2 = external aiding</li> <li>• 3-7 = other</li> </ul>
12 + n·6	X1	alm	-	-	Almanac data
bits 4...0	U:5	almUsability	-	-	How long the receiver will be able to use the stored almanac data from now on: <ul style="list-style-type: none"> <li>• 31 = The usability period is unknown</li> <li>• 30 = The usability period is more than 30 days</li> <li>• 30 &gt; n &gt; 0 = The usability period is between n-1 and n days</li> <li>• 0 = Almanac can no longer be used</li> </ul>
bits 7...5	U:3	almSource	-	-	<ul style="list-style-type: none"> <li>• 0 = not available</li> <li>• 1 = GNSS transmission</li> <li>• 2 = external aiding</li> <li>• 3-7 = other</li> </ul>
13 + n·6	X1	otherOrb	-	-	Other orbit data available
bits 4...0	U:5	anoAop Usability	-	-	How long the receiver will be able to use the orbit data from now on: <ul style="list-style-type: none"> <li>• 31 = The usability period is unknown</li> <li>• 30 = The usability period is more than 30 days</li> <li>• 30 &gt; n &gt; 0 = The usability period is between n-1 and n days</li> <li>• 0 = Data can no longer be used</li> </ul>
bits 7...5	U:3	type	-	-	Type of orbit data: <ul style="list-style-type: none"> <li>• 0 = No orbit data available</li> <li>• 1 = AssistNow Offline data</li> <li>• 2 = AssistNow Autonomous data</li> <li>• 3-7 = Other orbit data</li> </ul>

End of repeated group (*numSv* times)

### 3.15.11 UBX-NAV-PL (0x01 0x62)

#### 3.15.11.1 Protection level information

<b>Message</b>	UBX-NAV-PL Protection level information
<b>Type</b>	Periodic
<b>Comment</b>	This message provides protection level (PL) values per protection level state (e.g. position ECEF X/Y/Z) and w.r.t. the given target misleading information risk (TMIR) per coordinate axis.

Target misleading information risk is expressed as X [%MI/epoch] (read: X% probability of having an MI per epoch). Misleading information (MI) occurs when the Protection Level value is smaller than the true position error.

Message structure	Header	Class ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01 0x62	52	see below	CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	msgVersion	-	-	Message version (0x01 for this version)
1	U1	tmirCoeff	-	-	Target misleading information risk (TMIR) [%MI/epoch], coefficient integer number of base 10 scientific notation (see e.g. plPos field)
2	I1	tmirExp	-	-	Target misleading information risk (TMIR) [%MI/epoch], exponent integer number of base 10 scientific notation (see e.g. plPos field)
3	U1	plPosValid	-	-	Position protection level validity <ul style="list-style-type: none"> <li>0: Invalid (Protection level should not be used)</li> <li>1: Protection level is valid</li> </ul>
4	U1	plPosFrame	-	-	Position protection level frame: <ul style="list-style-type: none"> <li>0: Invalid (not possible to calculate frame conversion)</li> <li>1: North-East-Down</li> <li>2: Longitudinal-Lateral-Vertical</li> <li>3: HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical</li> </ul>
5	U1	plVelValid	-	-	Velocity protection level validity <ul style="list-style-type: none"> <li>0: Invalid (Protection level should not be used)</li> <li>1: Protection level is valid</li> </ul>
6	U1	plVelFrame	-	-	Velocity protection level frame: <ul style="list-style-type: none"> <li>0: Invalid (not possible to calculate frame conversion)</li> <li>1: North-East-Down</li> <li>2: Longitudinal-Lateral-Vertical</li> <li>3: HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical</li> </ul>
7	U1	plTimeValid	-	-	Time protection level validity <ul style="list-style-type: none"> <li>0: Invalid (Protection level should not be used)</li> <li>1: Protection level is valid</li> </ul>
8	U1	plPos Invalidity Reason	-	-	Position protection level invalidity reason <ul style="list-style-type: none"> <li>0: Not available</li> <li>1- 29: Solution not trustworthy</li> <li>30-100: PL not verified for this receiver configuration</li> </ul>
9	U1	plVel Invalidity Reason	-	-	Velocity protection level invalidity reason <ul style="list-style-type: none"> <li>0: Not available</li> <li>1- 29: Solution not trustworthy</li> <li>30-100: PL not verified for this receiver configuration</li> </ul>
10	U1	plTime Invalidity Reason	-	-	Time protection level invalidity reason <ul style="list-style-type: none"> <li>0: Not available</li> <li>1- 29: Solution not trustworthy</li> <li>30-100: PL not verified for this receiver configuration</li> </ul>
11	U1	reserved0	-	-	<a href="#">Reserved</a>

12	U4	iTow	-	ms	GPS time of week
16	U4	p1Pos1	-	mm	First axis of position protection level value, given in coordinate frame of p1PosFrame (see p1PosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of $[tmirCoeff * 10^{(tmirExp)}]$
20	U4	p1Pos2	-	mm	Second axis of position protection level value, given in coordinate frame of p1PosFrame (see p1PosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of $[tmirCoeff * 10^{(tmirExp)}]$
24	U4	p1Pos3	-	mm	Third axis of position protection level value, given in coordinate frame of p1PosFrame (see p1PosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of $[tmirCoeff * 10^{(tmirExp)}]$
28	U4	p1Vel1	-	mm/s	First axis of velocity protection level value, given in coordinate frame of p1VelFrame (see p1VelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of $[tmirCoeff * 10^{(tmirExp)}]$
32	U4	p1Vel2	-	mm/s	Second axis of velocity protection level value, given in coordinate frame of p1VelFrame (see p1VelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of $[tmirCoeff * 10^{(tmirExp)}]$
36	U4	p1Vel3	-	mm/s	Third axis of velocity protection level value, given in coordinate frame of p1VelFrame (see p1VelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of $[tmirCoeff * 10^{(tmirExp)}]$
40	U2	p1PosHoriz Orient	1e-2	deg	Orientation of HorizSemiMajorAxis (see p1PosFrame) of horizontal ellipse position protection level (clockwise degrees from true North), if p1PosFrame==3; zero otherwise.
42	U2	p1VelHoriz Orient	1e-2	deg	Orientation of HorizSemiMajorAxis (see p1VelFrame) of horizontal ellipse velocity protection level (clockwise degrees from true North), if p1VelFrame==3; zero otherwise.
44	U4	p1Time	-	ns	Time protection level value, w.r.t. the given target misleading information risk (TMIR) of $[tmirCoeff * 10^{(tmirExp)}]$
48	U1[4]	reserved1	-	-	<a href="#">Reserved</a>

### 3.15.12 UBX-NAV-POSECEF (0x01 0x01)

#### 3.15.12.1 Position solution in ECEF

<b>Message</b>	<b>UBX-NAV-POSECEF</b> <b>Position solution in ECEF</b>					
Type	Periodic/pollled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x01	20	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	

0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	ecefX	-	cm	ECEF X coordinate
8	I4	ecefY	-	cm	ECEF Y coordinate
12	I4	ecefZ	-	cm	ECEF Z coordinate
16	U4	pAcc	-	cm	Position Accuracy Estimate

### 3.15.13 UBX-NAV-POSLLH (0x01 0x02)

#### 3.15.13.1 Geodetic position solution

<b>Message</b>	<b>UBX-NAV-POSLLH</b>					
	<b>Geodetic position solution</b>					
Type	Periodic/pollled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual. This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">CFG-NAVSPG-USE_USRDAT</a> .					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x02	28	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	lon	1e-7	deg	Longitude	
8	I4	lat	1e-7	deg	Latitude	
12	I4	height	-	mm	Height above ellipsoid	
16	I4	hMSL	-	mm	Height above mean sea level	
20	U4	hAcc	-	mm	Horizontal accuracy estimate	
24	U4	vAcc	-	mm	Vertical accuracy estimate	

### 3.15.14 UBX-NAV-PVAT (0x01 0x17)

#### 3.15.14.1 Navigation position velocity attitude time solution

<b>Message</b>	<b>UBX-NAV-PVAT</b>					
	<b>Navigation position velocity attitude time solution</b>					
Type	Periodic/pollled					
Comment	This message combines position, velocity, attitude and time solution, including accuracy figures. Note that during a leap second there may be more or less than 60 seconds in a minute. See description of leap seconds in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x17	116	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	

0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	X1	valid	-	-	Validity flags	
	bit 0	U:1	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
	bit 1	U:1	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
	bit 2	U:1	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
	bit 3	U:1	validMag	-	-	1 = valid magnetic declination
6	U2	year	-	y	Year (UTC)	
8	U1	month	-	month	Month, range 1..12 (UTC)	
9	U1	day	-	d	Day of month, range 1..31 (UTC)	
10	U1	hour	-	h	Hour of day, range 0..23 (UTC)	
11	U1	min	-	min	Minute of hour, range 0..59 (UTC)	
12	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)	
13	U1	reserved0	-	-	Reserved	
14	U1[2]	reserved1	-	-	Reserved	
16	U4	tAcc	-	ns	Time accuracy estimate (UTC)	
20	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
24	U1	fixType	-	-	GNSSfix Type: <ul style="list-style-type: none"> <li>• 0 = no fix</li> <li>• 1 = dead reckoning only</li> <li>• 2 = 2D-fix</li> <li>• 3 = 3D-fix</li> <li>• 4 = GNSS + dead reckoning combined</li> <li>• 5 = time only fix</li> </ul>	
25	X1	flags	-	-	Fix status flags	
	bit 0	U:1	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
	bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
	bit 3	U:1	vehRollValid	-	-	1 = roll of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 4	U:1	vehPitchValid	-	-	1 = pitch of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 5	U:1	vehHeadingValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 7...6	U:2	carrSoln	-	-	Carrier range solution status: <ul style="list-style-type: none"> <li>• 0 = no carrier range solution</li> <li>• 1 = carrier range solution with float ambiguities</li> <li>• 2 = carrier range solution with fixed ambiguities</li> </ul>
26	X1	flags2	-	-	Additional flags	
	bit 5	U:1	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)

bit 6	U:1	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
bit 7	U:1	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
27	U1	numSV	-	-	Number of satellites used in Nav Solution
28	I4	lon	1e-7	deg	Longitude
32	I4	lat	1e-7	deg	Latitude
36	I4	height	-	mm	Height above ellipsoid
40	I4	hMSL	-	mm	Height above mean sea level
44	U4	hAcc	-	mm	Horizontal accuracy estimate
48	U4	vAcc	-	mm	Vertical accuracy estimate
52	I4	velN	-	mm/s	NED north velocity
56	I4	velE	-	mm/s	NED east velocity
60	I4	velD	-	mm/s	NED down velocity
64	I4	gSpeed	-	mm/s	Ground Speed (2-D)
68	U4	sAcc	-	mm/s	Speed accuracy estimate
72	I4	vehRoll	1e-5	deg	Vehicle roll.
76	I4	vehPitch	1e-5	deg	Vehicle pitch.
80	I4	vehHeading	1e-5	deg	Vehicle heading.
84	I4	motHeading	1e-5	deg	Motion heading.
88	U2	accRoll	1e-2	deg	Vehicle roll accuracy (if null, roll angle is not available).
90	U2	accPitch	1e-2	deg	Vehicle pitch accuracy (if null, pitch angle is not available).
92	U2	accHeading	1e-2	deg	Vehicle heading accuracy (if null, heading angle is not available).
94	I2	magDec	1e-2	deg	Magnetic declination.
96	U2	magAcc	1e-2	deg	Magnetic declination accuracy.
98	U2	errEllipse Orient	1e-2	deg	Orientation of semi-major axis of error ellipse (degrees from true north)
100	U4	errEllipse Major	-	mm	Semi-major axis of error ellipse
104	U4	errEllipse Minor	-	mm	Semi-minor axis of error ellipse
108	U1[4]	reserved2	-	-	Reserved
112	U1[4]	reserved3	-	-	Reserved

### 3.15.15 UBX-NAV-PVT (0x01 0x07)

#### 3.15.15.1 Navigation position velocity time solution

<b>Message</b>	<b>UBX-NAV-PVT</b> <b>Navigation position velocity time solution</b>
<b>Type</b>	Periodic/poll
<b>Comment</b>	This message combines position, velocity and time solution, including accuracy figures. Note that during a leap second there may be more or less than 60 seconds in a minute. See description of leap seconds in the integration manual for details.




Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x07	92	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U2	year	-	y	Year (UTC)	
6	U1	month	-	month	Month, range 1..12 (UTC)	
7	U1	day	-	d	Day of month, range 1..31 (UTC)	
8	U1	hour	-	h	Hour of day, range 0..23 (UTC)	
9	U1	min	-	min	Minute of hour, range 0..59 (UTC)	
10	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)	
11	X1	valid	-	-	Validity flags	
	bit 0	U:1	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
	bit 1	U:1	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
	bit 2	U:1	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
	bit 3	U:1	validMag	-	-	1 = valid magnetic declination
12	U4	tAcc	-	ns	Time accuracy estimate (UTC)	
16	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
20	U1	fixType	-	-	GNSSfix Type: <ul style="list-style-type: none"> <li>0 = no fix</li> <li>1 = dead reckoning only</li> <li>2 = 2D-fix</li> <li>3 = 3D-fix</li> <li>4 = GNSS + dead reckoning combined</li> <li>5 = time only fix</li> </ul>	
21	X1	flags	-	-	Fix status flags	
	bit 0	U:1	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
	bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
	bits 4...2	U:3	psmState	-	-	Power save mode state (see Power management section in the integration manual for details). <ul style="list-style-type: none"> <li>0 = PSM is not active</li> <li>1 = Enabled (an intermediate state before Acquisition state)</li> <li>2 = Acquisition</li> <li>3 = Tracking</li> <li>4 = Power Optimized Tracking</li> <li>5 = Inactive</li> </ul>
	bit 5	U:1	headVehValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 7...6	U:2	carrSoln	-	-	Carrier phase range solution status: <ul style="list-style-type: none"> <li>0 = no carrier phase range solution</li> <li>1 = carrier phase range solution with floating ambiguities</li> </ul>

					<ul style="list-style-type: none"> <li>2 = carrier phase range solution with fixed ambiguities</li> </ul> (not supported for protocol versions less than 20.00)	
22	X1	flags2	-	-	Additional flags	
	bit 5	U <sub>1</sub>	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details) This flag is only supported in <a href="#">Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28</a> .
	bit 6	U <sub>1</sub>	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U <sub>1</sub>	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
23	U1	numSV	-	-	Number of satellites used in Nav Solution	
24	I4	lon	1e-7	deg	Longitude	
28	I4	lat	1e-7	deg	Latitude	
32	I4	height	-	mm	Height above ellipsoid	
36	I4	hMSL	-	mm	Height above mean sea level	
40	U4	hAcc	-	mm	Horizontal accuracy estimate	
44	U4	vAcc	-	mm	Vertical accuracy estimate	
48	I4	velN	-	mm/s	NED north velocity	
52	I4	velE	-	mm/s	NED east velocity	
56	I4	velD	-	mm/s	NED down velocity	
60	I4	gSpeed	-	mm/s	Ground Speed (2-D)	
64	I4	headMot	1e-5	deg	Heading of motion (2-D)	
68	U4	sAcc	-	mm/s	Speed accuracy estimate	
72	U4	headAcc	1e-5	deg	Heading accuracy estimate (both motion and vehicle)	
76	U2	pDOP	0.01	-	Position DOP	
78	X2	flags3	-	-	Additional flags	
	bit 0	U <sub>1</sub>	invalidLlh	-	-	1 = Invalid lon, lat, height and hMSL
	bits 4...1	U <sub>4</sub>	lastCorrection Age	-	-	Age of the most recently received differential correction: <ul style="list-style-type: none"> <li>0 = Not available</li> <li>1 = Age between 0 and 1 second</li> <li>2 = Age between 1 (inclusive) and 2 seconds</li> <li>3 = Age between 2 (inclusive) and 5 seconds</li> <li>4 = Age between 5 (inclusive) and 10 seconds</li> <li>5 = Age between 10 (inclusive) and 15 seconds</li> <li>6 = Age between 15 (inclusive) and 20 seconds</li> <li>7 = Age between 20 (inclusive) and 30 seconds</li> <li>8 = Age between 30 (inclusive) and 45 seconds</li> <li>9 = Age between 45 (inclusive) and 60 seconds</li> <li>10 = Age between 60 (inclusive) and 90 seconds</li> <li>11 = Age between 90 (inclusive) and 120 seconds</li> <li>&gt;=12 = Age greater or equal than 120 seconds</li> </ul>
	bit 13	U <sub>1</sub>	authTime	-	-	Flag that indicates if the output time has been validated against an external trusted time source <ul style="list-style-type: none"> <li>0 = Time is not authenticated</li> <li>1 = Time is authenticated</li> </ul>

80	U1[4]	reserved0	-	-	Reserved
84	I4	headVeh	1e-5	deg	Heading of vehicle (2-D), this is only valid when headVehValid is set, otherwise the output is set to the heading of motion
88	I2	magDec	1e-2	deg	Magnetic declination. Only supported in ADR 4.10 and later.
90	U2	magAcc	1e-2	deg	Magnetic declination accuracy. Only supported in ADR 4.10 and later.

### 3.15.16 UBX-NAV-RELPOSNE (0x01 0x3c)

#### 3.15.16.1 Relative positioning information in NED frame

<b>Message</b>	<b>UBX-NAV-RELPOSNE</b>					
	<b>Relative positioning information in NED frame</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	<p>This message contains the relative position vector from the reference station to the rover, including accuracy figures, in the local topological system defined at the reference station.</p> <p> The NED frame is defined as the local topological system at the reference station. The relative position vector components in this message, along with their associated accuracies, are given in that local topological system.</p>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x3c	64	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1	reserved0	-	-	Reserved	
2	U2	refStationId	-	-	Reference station ID. Must be in the range 0..4095.	
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
8	I4	relPosN	-	cm	North component of relative position vector	
12	I4	relPosE	-	cm	East component of relative position vector	
16	I4	relPosD	-	cm	Down component of relative position vector	
20	I4	relPosLength	-	cm	Length of the relative position vector	
24	I4	relPosHeading	1e-5	deg	Heading of the relative position vector	
28	U1[4]	reserved1	-	-	Reserved	
32	I1	relPosHPN	0.1	mm	High-precision North component of relative position vector. Must be in the range -99 to +99. The full North component of the relative position vector, in units of cm, is given by $relPosN + (relPosHPN * 1e-2)$	
33	I1	relPosHPE	0.1	mm	High-precision East component of relative position vector. Must be in the range -99 to +99. The full East component of the relative position vector, in units of cm, is given by $relPosE + (relPosHPE * 1e-2)$	

34	I1	relPosHPD	0.1	mm	High-precision Down component of relative position vector. Must be in the range -99 to +99. The full Down component of the relative position vector, in units of cm, is given by $relPosD + (relPosHPD * 1e-2)$	
35	I1	relPosHPLength	0.1	mm	High-precision component of the length of the relative position vector. Must be in the range -99 to +99. The full length of the relative position vector, in units of cm, is given by $relPosLength + (relPosHPLength * 1e-2)$	
36	U4	accN	0.1	mm	Accuracy of relative position North component	
40	U4	accE	0.1	mm	Accuracy of relative position East component	
44	U4	accD	0.1	mm	Accuracy of relative position Down component	
48	U4	accLength	0.1	mm	Accuracy of length of the relative position vector	
52	U4	accHeading	1e-5	deg	Accuracy of heading of the relative position vector	
56	U1[4]	reserved2	-	-	Reserved	
60	X4	flags	-	-	Flags	
	bit 0	U:1	gnssFixOK	-	-	A valid fix (i.e within DOP & accuracy masks)
	bit 1	U:1	diffSoln	-	-	1 if differential corrections were applied
	bit 2	U:1	relPosValid	-	-	1 if relative position components and accuracies are valid and, in moving base mode only, if baseline is valid
	bits 4...3	U:2	carrSoln	-	-	Carrier phase range solution status: <ul style="list-style-type: none"> <li>0 = no carrier phase range solution</li> <li>1 = carrier phase range solution with floating ambiguities</li> <li>2 = carrier phase range solution with fixed ambiguities</li> </ul>
	bit 5	U:1	isMoving	-	-	1 if the receiver is operating in moving base mode
	bit 6	U:1	refPosMiss	-	-	1 if extrapolated reference position was used to compute moving base solution this epoch. (Flag set for protocol versions 27.10, and 27.11, and 31.11)
	bit 7	U:1	refObsMiss	-	-	1 if extrapolated reference observations were used to compute moving base solution this epoch. (Flag set for protocol versions 27.10, and 27.11, and 31.11)
	bit 8	U:1	relPosHeadingValid	-	-	1 if relPosHeading is valid
	bit 9	U:1	relPosNormalized	-	-	1 if the components of the relative position vector (including the high-precision parts) are normalized

### 3.15.17 UBX-NAV-SAT (0x01 0x35)

#### 3.15.17.1 Satellite information

<b>Message</b>	<b>UBX-NAV-SAT</b> <b>Satellite information</b>
<b>Type</b>	Periodic/pollled
<b>Comment</b>	This message displays information about SVs that are either known to be visible or currently tracked by the receiver. All signal related information corresponds to the subset of signals specified in <a href="#">Signal Identifiers</a> .

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x35	8 + numSvs·12	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x01 for this version)	
5	U1	numSvs	-	-	Number of satellites	
6	U1[2]	reserved0	-	-	<a href="#">Reserved</a>	
<i>Start of repeated group (numSvs times)</i>						
8 + n·12	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment	
9 + n·12	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment	
10 + n·12	U1	cno	-	dBHz	Carrier to noise ratio (signal strength)	
11 + n·12	I1	elev	-	deg	Elevation (range: +/-90), unknown if out of range	
12 + n·12	I2	azim	-	deg	Azimuth (range 0-360), unknown if elevation is out of range	
14 + n·12	I2	prRes	0.1	m	Pseudorange residual	
16 + n·12	X4	flags	-	-	Bitmask	
bits 2...0	U:3	qualityInd	-	-	Signal quality indicator: <ul style="list-style-type: none"> <li>0 = no signal</li> <li>1 = searching signal</li> <li>2 = signal acquired</li> <li>3 = signal detected but unusable</li> <li>4 = code locked and time synchronized</li> <li>5, 6, 7 = code and carrier locked and time synchronized</li> </ul>	
bit 3	U:1	svUsed	-	-	1 = Signal in the subset specified in <a href="#">Signal Identifiers</a> is currently being used for navigation	
bits 5...4	U:2	health	-	-	Signal health flag: <ul style="list-style-type: none"> <li>0 = unknown</li> <li>1 = healthy</li> <li>2 = unhealthy</li> </ul>	
bit 6	U:1	diffCorr	-	-	1 = differential correction data is available for this SV	
bit 7	U:1	smoothed	-	-	1 = carrier smoothed pseudorange used	
bits 10...8	U:3	orbitSource	-	-	Orbit source: <ul style="list-style-type: none"> <li>0 = no orbit information is available for this SV</li> <li>1 = ephemeris is used</li> <li>2 = almanac is used</li> <li>3 = AssistNow Offline orbit is used</li> <li>4 = AssistNow Autonomous orbit is used</li> <li>5, 6, 7 = other orbit information is used</li> </ul>	
bit 11	U:1	ephAvail	-	-	1 = ephemeris is available for this SV	
bit 12	U:1	almAvail	-	-	1 = almanac is available for this SV	
bit 13	U:1	anoAvail	-	-	1 = AssistNow Offline data is available for this SV	
bit 14	U:1	aopAvail	-	-	1 = AssistNow Autonomous data is available for this SV	

bit 16	U:1	sbasCorrUsed	-	-	1 = SBAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 17	U:1	rtcmCorrUsed	-	-	1 = RTCM corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 18	U:1	slasCorrUsed	-	-	1 = QZSS SLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 19	U:1	spartnCorrUsed	-	-	1 = SPARTN corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 20	U:1	prCorrUsed	-	-	1 = Pseudorange corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 21	U:1	crCorrUsed	-	-	1 = Carrier range corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 22	U:1	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 23	U:1	clasCorrUsed	-	-	1 = CLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>

End of repeated group (*numSvs* times)

### 3.15.18 UBX-NAV-SBAS (0x01 0x32)

#### 3.15.18.1 SBAS status data

<b>Message</b>	<b>UBX-NAV-SBAS SBAS status data</b>					
Type	Periodic/pollled					
Comment	This message outputs the status of the SBAS sub system					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x32	12 + cnt·12	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.	
4	U1	geo	-	-	PRN Number of the GEO where correction and integrity data is used from	
5	U1	mode	-	-	SBAS Mode <ul style="list-style-type: none"> <li>• 0 Disabled</li> <li>• 1 Enabled integrity</li> <li>• 3 Enabled test mode</li> </ul>	
6	I1	sys	-	-	SBAS System (WAAS/EGNOS/...) <ul style="list-style-type: none"> <li>• -1 Unknown</li> <li>• 0 WAAS</li> <li>• 1 EGNOS</li> <li>• 2 MSAS</li> <li>• 3 GAGAN</li> <li>• 16 GPS</li> </ul>	
7	X1	service	-	-	SBAS Services available	
bit 0	U:1	Ranging	-	-	GEO may be used as ranging source	
bit 1	U:1	Corrections	-	-	GEO is providing correction data	
bit 2	U:1	Integrity	-	-	GEO is providing integrity	
bit 3	U:1	Testmode	-	-	GEO is in test mode	

	bit 4	U:1	Bad	-	-	Problem with signal or broadcast data indicated
8		U1	cnt	-	-	Number of SV data following
9		X1	statusFlags	-	-	SBAS status flags
	bits 1...0	U:2	integrityUsed	-	-	SBAS integrity used <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Integrity information is not available or SBAS integrity is not enabled</li> <li>• 2 = Receiver uses only GPS satellites for which integrity information is available</li> </ul>
10		U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (cnt times)</i>						
12 + n·12		U1	svid	-	-	SV ID
13 + n·12		U1	reserved1	-	-	Reserved
14 + n·12		U1	udre	-	-	Monitoring status
15 + n·12		U1	svSys	-	-	System (WAAS/EGNOS/...) same as SYS
16 + n·12		U1	svService	-	-	Services available same as SERVICE
17 + n·12		U1	reserved2	-	-	Reserved
18 + n·12		I2	prc	-	cm	Pseudo Range correction in [cm]
20 + n·12		U1[2]	reserved3	-	-	Reserved
22 + n·12		I2	ic	-	cm	Ionosphere correction in [cm]
<i>End of repeated group (cnt times)</i>						

### 3.15.19 UBX-NAV-SIG (0x01 0x43)

#### 3.15.19.1 Signal information

<b>Message</b>	<b>UBX-NAV-SIG</b>					
	<b>Signal information</b>					
Type	Periodic/pollled					
Comment	This message displays information about signals currently tracked or searched by the receiver.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x43	8 + numSigs·16	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1	numSigs	-	-	Number of signals	
6	U1[2]	reserved0	-	-	Reserved	
<i>Start of repeated group (numSigs times)</i>						
8 + n·16	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment	
9 + n·16	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment	

10 + n·16	U1	sigId	-	-	New style signal identifier (see <a href="#">Signal Identifiers</a> )
11 + n·16	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
12 + n·16	I2	prRes	0.1	m	Pseudorange residual
14 + n·16	U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength)
15 + n·16	U1	qualityInd	-	-	Signal quality indicator: <ul style="list-style-type: none"> <li>• 0 = no signal</li> <li>• 1 = searching signal</li> <li>• 2 = signal acquired</li> <li>• 3 = signal detected but unusable</li> <li>• 4 = code locked and time synchronized</li> <li>• 5, 6, 7 = code and carrier locked and time synchronized</li> </ul>
16 + n·16	U1	corrSource	-	-	Correction source: <ul style="list-style-type: none"> <li>• 0 = no corrections</li> <li>• 1 = SBAS corrections</li> <li>• 2 = BeiDou corrections</li> <li>• 3 = RTCM2 corrections</li> <li>• 4 = RTCM3 OSR corrections</li> <li>• 5 = RTCM3 SSR corrections</li> <li>• 6 = QZSS SLAS corrections</li> <li>• 7 = SPARTN corrections</li> <li>• 8 = CLAS corrections</li> </ul>
17 + n·16	U1	ionoModel	-	-	Ionospheric model used: <ul style="list-style-type: none"> <li>• 0 = no model</li> <li>• 1 = Klobuchar model transmitted by GPS</li> <li>• 2 = SBAS model</li> <li>• 3 = Klobuchar model transmitted by BeiDou</li> <li>• 8 = Iono delay derived from dual frequency observations</li> </ul>
18 + n·16	X2	sigFlags	-	-	Signal related flags
	bits 1...0	U:2	health	-	Signal health flag: <ul style="list-style-type: none"> <li>• 0 = unknown</li> <li>• 1 = healthy</li> <li>• 2 = unhealthy</li> </ul>
	bit 2	U:1	prSmoothed	-	1 = Pseudorange has been smoothed
	bit 3	U:1	prUsed	-	1 = Pseudorange has been used for this signal
	bit 4	U:1	crUsed	-	1 = Carrier range has been used for this signal
	bit 5	U:1	doUsed	-	1 = Range rate (Doppler) has been used for this signal
	bit 6	U:1	prCorrUsed	-	1 = Pseudorange corrections have been used for this signal
	bit 7	U:1	crCorrUsed	-	1 = Carrier range corrections have been used for this signal
	bit 8	U:1	doCorrUsed	-	1 = Range rate (Doppler) corrections have been used for this signal
	bit 9	U:1	authStatus	-	Authentication status of the navigation data used to compute the satellite's position in current navigation epoch. If the authentication fails, the navigation data will not be used so the authentication status in this message can only take two values: <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Authenticated</li> </ul>



Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message.

20 + n·16	U1[4]	reserved1	-	-	Reserved
<i>End of repeated group (numSigs times)</i>					

### 3.15.20 UBX-NAV-SLAS (0x01 0x42)

#### 3.15.20.1 QZSS L1S SLAS status data

<b>Message</b>		<b>UBX-NAV-SLAS</b>				
		<b>QZSS L1S SLAS status data</b>				
Type	Periodic/pollled					
Comment	This message outputs the status of the QZSS L1S SLAS sub system					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x42	20 + cnt·8	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1[3]	reserved0	-	-	Reserved	
8	I4	gmsLon	1e-3	deg	Longitude of the used ground monitoring station	
12	I4	gmsLat	1e-3	deg	Latitude of the used ground monitoring station	
16	U1	gmsCode	-	-	Code of the used ground monitoring station according to the QZSS SLAS Interface Specification, available from <a href="http://qzss.go.jp/en/">qzss.go.jp/en/</a>	
17	U1	qzssSvId	-	-	Satellite identifier of the QZS/GEO whose correction data is used (see <a href="#">Satellite Numbering</a> )	
18	X1	serviceFlags	-	-	Flags regarding SLAS service	
	bit 0	U:1	gmsAvailable	-	-	1 = Ground monitoring station available
	bit 1	U:1	qzssSv Available	-	-	1 = Correction providing QZSS SV available
	bit 2	U:1	testMode	-	-	1 = Currently used QZSS SV in test mode
19	U1	cnt	-	-	Number of pseudorange corrections following	
<i>Start of repeated group (cnt times)</i>						
20 + n·8	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> )	
21 + n·8	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )	
22 + n·8	U1	reserved1	-	-	Reserved	
23 + n·8	U1[3]	reserved2	-	-	Reserved	
26 + n·8	I2	prc	-	cm	Pseudorange correction	
<i>End of repeated group (cnt times)</i>						

#### 3.15.21 UBX-NAV-STATUS (0x01 0x03)

### 3.15.21.1 Receiver navigation status

<b>Message</b>		<b>UBX-NAV-STATUS</b>				
		<b>Receiver navigation status</b>				
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x03	16	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	gpsFix	-	-	GPSfix Type, this value does <b>not</b> qualify a fix as valid and within the limits. See note on flag gpsFixOk below. <ul style="list-style-type: none"> <li>• 0x00 = no fix</li> <li>• 0x01 = dead reckoning only</li> <li>• 0x02 = 2D-fix</li> <li>• 0x03 = 3D-fix</li> <li>• 0x04 = GPS + dead reckoning combined</li> <li>• 0x05 = Time only fix</li> <li>• 0x06..0xff = reserved</li> </ul>	
5	X1	flags	-	-	Navigation Status Flags	
bit 0	U:1	gpsFixOk	-	-	1 = position and velocity valid and within DOP and ACC Masks.	
bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied	
bit 2	U:1	wknSet	-	-	1 = Week Number valid (see section Time validity in the integration manual for details)	
bit 3	U:1	towSet	-	-	1 = Time of Week valid (see section Time validity in the integration manual for details)	
6	X1	fixStat	-	-	Fix Status Information	
bit 0	U:1	diffCorr	-	-	1 = differential corrections available	
bit 1	U:1	carrSolnValid	-	-	1 = valid carrSoln	
bits 7...6	U:2	mapMatching	-	-	map matching status: <ul style="list-style-type: none"> <li>• 00: none</li> <li>• 01: valid but not used, i.e. map matching data was received, but was too old</li> <li>• 10: valid and used, map matching data was applied</li> <li>• 11: valid and used, map matching data was applied. In case of sensor unavailability map matching data enables dead reckoning. This requires map matched latitude/longitude or heading data.</li> </ul>	
7	X1	flags2	-	-	further information about navigation output	
bits 1...0	U:2	psmState	-	-	power save mode state (not supported for protocol versions less than 13.01) <ul style="list-style-type: none"> <li>• 0 = ACQUISITION [or when psm disabled]</li> <li>• 1 = TRACKING</li> <li>• 2 = POWER OPTIMIZED TRACKING</li> <li>• 3 = INACTIVE</li> </ul>	

bits 4...3	U:2	spooofDetState	-	-	Spoofing detection state (not supported for protocol versions less than 18.00) <ul style="list-style-type: none"> <li>0: Unknown or deactivated</li> <li>1: No spoofing indicated</li> <li>2: Spoofing indicated</li> <li>3: Multiple spoofing indications</li> </ul> Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. I.e. a value of 1 - <i>No spoofing indicated</i> does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.
bits 7...6	U:2	carrSoln	-	-	Carrier phase range solution status: <ul style="list-style-type: none"> <li>0 = no carrier phase range solution</li> <li>1 = carrier phase range solution with floating ambiguities</li> <li>2 = carrier phase range solution with fixed ambiguities</li> </ul>
8	U4	ttff	-	ms	Time to first fix (millisecond time tag)
12	U4	msss	-	ms	Milliseconds since Startup / Reset

### 3.15.22 UBX-NAV-TIMEBDS (0x01 0x24)

#### 3.15.22.1 BeiDou time solution

<b>Message</b>	<b>UBX-NAV-TIMEBDS</b>					
	<b>BeiDou time solution</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x24	20	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U4	SOW	-	s	BDS time of week (rounded to seconds)	
8	I4	fSOW	-	ns	Fractional part of SOW (range: +/-500000000). The precise BDS time of week in seconds is: $SOW + fSOW * 1e-9$	
12	I2	week	-	-	BDS week number of the navigation epoch	
14	I1	leapS	-	s	BDS leap seconds (BDS-UTC)	
15	X1	valid	-	-	Validity Flags	
bit 0	U:1	sowValid	-	-	1 = Valid SOW and fSOW (see section Time validity in the integration manual for details)	
bit 1	U:1	weekValid	-	-	1 = Valid week (see section Time validity in the integration manual for details)	
bit 2	U:1	leapSValid	-	-	1 = Valid leap second	

16	U4	tAcc	-	ns	Time Accuracy Estimate
----	----	------	---	----	------------------------

### 3.15.23 UBX-NAV-TIMEGAL (0x01 0x25)

#### 3.15.23.1 Galileo time solution

<b>Message</b>		<b>UBX-NAV-TIMEGAL Galileo time solution</b>				
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x25	20	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U4	galTow	-	s	Galileo time of week (rounded to seconds)	
8	I4	fGalTow	-	ns	Fractional part of the Galileo time of week (range: +/-500000000). The precise Galileo time of week in seconds is: $galTow + fGalTow * 1e-9$	
12	I2	galWno	-	-	Galileo week number	
14	I1	leapS	-	s	Galileo leap seconds (Galileo-UTC)	
15	X1	valid	-	-	Validity Flags	
	bit 0	U:1	galTowValid	-	-	1 = Valid galTow and fGalTow (see section Time validity in the integration manual for details)
	bit 1	U:1	galWnoValid	-	-	1 = Valid galWno (see section Time validity in the integration manual for details)
	bit 2	U:1	leapSValid	-	-	1 = Valid leapS
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.15.24 UBX-NAV-TIMEGLO (0x01 0x23)

#### 3.15.24.1 GLONASS time solution

<b>Message</b>		<b>UBX-NAV-TIMEGLO GLONASS time solution</b>				
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message reports the precise GLO time of the most recent navigation solution including validity flags and an accuracy estimate.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x23	20	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	

4	U4	TOD	-	s	GLONASS time of day (rounded to integer seconds)	
8	I4	fTOD	-	ns	Fractional part of TOD (range: +/-500000000). The precise GLONASS time of day in seconds is: $TOD + fTOD * 1e-9$	
12	U2	Nt	-	days	Current date (range: 1-1461), starting at 1 from the 1st Jan of the year indicated by N4 and ending at 1461 at the 31st Dec of the third year after that indicated by N4	
14	U1	N4	-	-	Four-year interval number starting from 1996 (1=1996, 2=2000, 3=2004...)	
15	X1	valid	-	-	Validity flags	
	bit 0	U:1	todValid	-	-	1 = Valid TOD and fTOD (see section Time validity in the integration manual for details)
	bit 1	U:1	dateValid	-	-	1 = Valid N4 and Nt (see section Time validity in the integration manual for details)
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.15.25 UBX-NAV-TIMEGPS (0x01 0x20)

#### 3.15.25.1 GPS time solution

<b>Message</b>	<b>UBX-NAV-TIMEGPS</b>					
	<b>GPS time solution</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x20	16	see below	CK_A CK_B
<i>Payload description:</i>						
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	fTOW	-	ns	Fractional part of iTOW (range: +/-500000). The precise GPS time of week in seconds is: $(iTOW * 1e-3) + (fTOW * 1e-9)$	
8	I2	week	-	-	GPS week number of the navigation epoch	
10	I1	leapS	-	s	GPS leap seconds (GPS-UTC)	
11	X1	valid	-	-	Validity Flags	
	bit 0	U:1	towValid	-	-	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in the integration manual for details)
	bit 1	U:1	weekValid	-	-	1 = Valid GPS week number (see section Time validity in the integration manual for details)
	bit 2	U:1	leapSValid	-	-	1 = Valid GPS leap seconds
12	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.15.26 UBX-NAV-TIMELS (0x01 0x26)

### 3.15.26.1 Leap second event information

<b>Message</b>		<b>UBX-NAV-TIMELS</b>				
		<b>Leap second event information</b>				
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	Information about the upcoming leap second event if one is scheduled.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x26	24	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1[3]	reserved0	-	-	<a href="#">Reserved</a>	
8	U1	srcOfCurrLs	-	-	Information source for the current number of leap seconds. <ul style="list-style-type: none"> <li>0 = Default (hardcoded in the firmware, can be outdated)</li> <li>1 = Derived from time difference between GPS and GLONASS time</li> <li>2 = GPS</li> <li>3 = SBAS</li> <li>4 = BeiDou</li> <li>5 = Galileo</li> <li>6 = Aided data</li> <li>7 = Configured</li> <li>8 = NavIC</li> <li>255 = Unknown</li> </ul>	
9	l1	currLs	-	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.	
10	U1	srcOfLsChange	-	-	Information source for the future leap second event. <ul style="list-style-type: none"> <li>0 = No source</li> <li>2 = GPS</li> <li>3 = SBAS</li> <li>4 = BeiDou</li> <li>5 = Galileo</li> <li>6 = GLONASS</li> <li>7 = NavIC</li> </ul>	
11	l1	lsChange	-	s	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available. If the value is 0, then the amount of leap seconds did not change and the event should be ignored.	
12	l4	timeToLsEvent	-	s	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.	

16	U2	dateOfLsGps Wn	-	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.	
18	U2	dateOfLsGps Dn	-	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)	
20	U1[3]	reserved1	-	-	Reserved	
23	X1	valid	-	-	Validity flags	
	bit 0	U <sub>1</sub>	validCurrLs	-	-	1 = Valid current number of leap seconds value.
	bit 1	U <sub>1</sub>	validTimeToLs Event	-	-	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.

### 3.15.27 UBX-NAV-TIMEQZSS (0x01 0x27)

#### 3.15.27.1 QZSS time solution

<b>Message</b>	<b>UBX-NAV-TIMEQZSS</b>					
	<b>QZSS time solution</b>					
Type	Periodic/pollled					
Comment	This message reports the precise QZSS time of the most recent navigation solution including validity flags and an accuracy estimate. See the Clocks and time section in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x27	20	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch.	
4	U4	qzssTow	-	s	QZSS time of week (rounded to seconds)	
8	I4	fQzssTow	-	ns	Fractional part of QZSS time of week (range: +/-500000000). The precise QZSS time of week in seconds is: $qzssTow + (fQzssTow * 1e-9)$	
12	I2	qzssWno	-	-	QZSS week number of the navigation epoch	
14	I1	leapS	-	s	QZSS leap seconds (QZSS-UTC)	
15	X1	valid	-	-	Validity Flags	
	bit 0	U <sub>1</sub>	qzssTowValid	-	-	1 = Valid QZSS time of week (qzssTow and fQzssTow)
	bit 1	U <sub>1</sub>	qzssWnoValid	-	-	1 = Valid QZSS week number
	bit 2	U <sub>1</sub>	leapSValid	-	-	1 = Valid QZSS leap seconds
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.15.28 UBX-NAV-TIMEUTC (0x01 0x21)

#### 3.15.28.1 UTC time solution

<b>Message</b>	<b>UBX-NAV-TIMEUTC</b>					
	<b>UTC time solution</b>					
Type	Periodic/pollled					

*Comment* Note that during a leap second there may be more or less than 60 seconds in a minute. See the description of leap seconds in the integration manual for details.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x21	20	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	tAcc	-	ns	Time accuracy estimate (UTC)
8	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
12	U2	year	-	y	Year, range 1999..2099 (UTC)
14	U1	month	-	month	Month, range 1..12 (UTC)
15	U1	day	-	d	Day of month, range 1..31 (UTC)
16	U1	hour	-	h	Hour of day, range 0..23 (UTC)
17	U1	min	-	min	Minute of hour, range 0..59 (UTC)
18	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)
19	X1	valid	-	-	Validity Flags
bit 0	U:1	validTOW	-	-	1 = Valid Time of Week (see section Time validity in the integration manual for details)
bit 1	U:1	validWKN	-	-	1 = Valid Week Number (see section Time validity in the integration manual for details)
bit 2	U:1	validUTC	-	-	1 = Valid UTC Time
bit 3	U:1	authStatus	-	-	Indicates if the parameters used to convert GNSS time into UTC time have been authenticated. <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Authenticated</li> </ul> Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message which means that data can only be authenticated for EU UTC standard.
bits 7...4	U:4	utcStandard	-	-	UTC standard identifier. (Not supported for protocol versions less than 15.00) <ul style="list-style-type: none"> <li>• 0 = Information not available</li> <li>• 1 = Communications Research Laboratory (CRL), Tokyo, Japan</li> <li>• 2 = National Institute of Standards and Technology (NIST)</li> <li>• 3 = U.S. Naval Observatory (USNO)</li> <li>• 4 = International Bureau of Weights and Measures (BIPM)</li> <li>• 5 = European laboratories</li> <li>• 6 = Former Soviet Union (SU)</li> <li>• 7 = National Time Service Center (NTSC), China</li> <li>• 8 = National Physics Laboratory India (NPLI)</li> <li>• 15 = Unknown</li> </ul>

### 3.15.29 UBX-NAV-VELECEF (0x01 0x11)



### 3.15.29.1 Velocity solution in ECEF

<b>Message</b>	<b>UBX-NAV-VELECEF</b> <b>Velocity solution in ECEF</b>					
Type	Periodic/pollled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x11	20	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	ecefVX	-	cm/s	ECEF X velocity	
8	I4	ecefVY	-	cm/s	ECEF Y velocity	
12	I4	ecefVZ	-	cm/s	ECEF Z velocity	
16	U4	sAcc	-	cm/s	Speed accuracy estimate	

### 3.15.30 UBX-NAV-VELNED (0x01 0x12)

#### 3.15.30.1 Velocity solution in NED frame

<b>Message</b>	<b>UBX-NAV-VELNED</b> <b>Velocity solution in NED frame</b>					
Type	Periodic/pollled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x12	36	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	velN	-	cm/s	North velocity component	
8	I4	velE	-	cm/s	East velocity component	
12	I4	velD	-	cm/s	Down velocity component	
16	U4	speed	-	cm/s	Speed (3-D)	
20	U4	gSpeed	-	cm/s	Ground speed (2-D)	
24	I4	heading	1e-5	deg	Heading of motion 2-D	
28	U4	sAcc	-	cm/s	Speed accuracy Estimate	
32	U4	cAcc	1e-5	deg	Course / Heading accuracy estimate	

### 3.16 UBX-NAV2 (0x29)

The messages in the UBX-NAV2 class are used to output navigation results and data, such as position, altitude and velocity in a number of formats, and status flags and accuracy estimate

figures, or satellite and signal information. The messages are generated with the configured navigation rate.

### 3.16.1 UBX-NAV2-CLOCK (0x29 0x22)

#### 3.16.1.1 Clock solution

<b>Message</b>		<b>UBX-NAV2-CLOCK</b>				
		<b>Clock solution</b>				
Type	Periodic/pollled					
Comment						
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x22	20	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section Navigation epochs in the integration manual for details. See section iTOW timestamps in the integration manual for details.	
4	I4	clkB	-	ns	Clock bias	
8	I4	clkD	-	ns/s	Clock drift	
12	U4	tAcc	-	ns	Time accuracy estimate	
16	U4	fAcc	-	ps/s	Frequency accuracy estimate	

### 3.16.2 UBX-NAV2-COV (0x29 0x36)

#### 3.16.2.1 Covariance matrices

<b>Message</b>		<b>UBX-NAV2-COV</b>				
		<b>Covariance matrices</b>				
Type	Periodic/pollled					
Comment	This message outputs the covariance matrices for the position and velocity solutions in the topocentric coordinate system defined as the local-level North (N), East (E), Down (D) frame. As the covariance matrices are symmetric, only the upper triangular part is output.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x36	64	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1	posCovValid	-	-	Position covariance matrix validity flag	
6	U1	velCovValid	-	-	Velocity covariance matrix validity flag	
7	U1[9]	reserved0	-	-	Reserved	
16	R4	posCovNN	-	m <sup>2</sup>	Position covariance matrix value p <sub>NN</sub>	
20	R4	posCovNE	-	m <sup>2</sup>	Position covariance matrix value p <sub>NE</sub>	
24	R4	posCovND	-	m <sup>2</sup>	Position covariance matrix value p <sub>ND</sub>	

28	R4	posCovEE	-	m <sup>2</sup>	Position covariance matrix value p <sub>EE</sub>
32	R4	posCovED	-	m <sup>2</sup>	Position covariance matrix value p <sub>ED</sub>
36	R4	posCovDD	-	m <sup>2</sup>	Position covariance matrix value p <sub>DD</sub>
40	R4	velCovNN	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>NN</sub>
44	R4	velCovNE	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>NE</sub>
48	R4	velCovND	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>ND</sub>
52	R4	velCovEE	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>EE</sub>
56	R4	velCovED	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>ED</sub>
60	R4	velCovDD	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v <sub>DD</sub>

### 3.16.3 UBX-NAV2-DOP (0x29 0x04)

#### 3.16.3.1 Dilution of precision

<b>Message</b>	<b>UBX-NAV2-DOP</b>					
	<b>Dilution of precision</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	<ul style="list-style-type: none"> <li>DOP values are dimensionless.</li> <li>All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56.</li> </ul>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x04	18	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U2	gDOP	0.01	-	Geometric DOP	
6	U2	pDOP	0.01	-	Position DOP	
8	U2	tDOP	0.01	-	Time DOP	
10	U2	vDOP	0.01	-	Vertical DOP	
12	U2	hDOP	0.01	-	Horizontal DOP	
14	U2	nDOP	0.01	-	Northing DOP	
16	U2	eDOP	0.01	-	Easting DOP	

### 3.16.4 UBX-NAV2-EELL (0x29 0x3d)

#### 3.16.4.1 Position error ellipse parameters

<b>Message</b>	<b>UBX-NAV2-EELL</b>					
	<b>Position error ellipse parameters</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	This message outputs the error ellipse parameters for the position solutions.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x3d	16	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	

0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	reserved0	-	-	<a href="#">Reserved</a>
6	U2	errEllipseOrient	1e-2	deg	Orientation of semi-major axis of error ellipse (degrees from true north)
8	U4	errEllipseMajor	-	mm	Semi-major axis of error ellipse
12	U4	errEllipseMinor	-	mm	Semi-minor axis of error ellipse

### 3.16.5 UBX-NAV2-EOE (0x29 0x61)

#### 3.16.5.1 End of epoch

<b>Message</b>	<b>UBX-NAV2-EOE</b>				
	<b>End of epoch</b>				
Type	Periodic				
Comment	This message is intended to be used as a marker to collect all navigation messages of an epoch. It is output after all enabled NAV class messages and after all enabled NMEA messages.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x29	0x61	4	see below
					Checksum
					CK_A CK_B
Payload description:					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.

### 3.16.6 UBX-NAV2-POSECEF (0x29 0x01)

#### 3.16.6.1 Position solution in ECEF

<b>Message</b>	<b>UBX-NAV2-POSECEF</b>				
	<b>Position solution in ECEF</b>				
Type	Periodic/pollled				
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x29	0x01	20	see below
					Checksum
					CK_A CK_B
Payload description:					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	ecefX	-	cm	ECEF X coordinate
8	I4	ecefY	-	cm	ECEF Y coordinate
12	I4	ecefZ	-	cm	ECEF Z coordinate

16	U4	pAcc	-	cm	Position Accuracy Estimate
----	----	------	---	----	----------------------------

### 3.16.7 UBX-NAV2-POSLLH (0x29 0x02)

#### 3.16.7.1 Geodetic position solution

<b>Message</b>	<b>UBX-NAV2-POSLLH</b>					
	<b>Geodetic position solution</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	See important comments concerning validity of position given in section Navigation output filters in the integration manual. This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">CFG-NAVSPG-USE_USRDAT</a> .					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x02	28	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	lon	1e-7	deg	Longitude	
8	I4	lat	1e-7	deg	Latitude	
12	I4	height	-	mm	Height above ellipsoid	
16	I4	hMSL	-	mm	Height above mean sea level	
20	U4	hAcc	-	mm	Horizontal accuracy estimate	
24	U4	vAcc	-	mm	Vertical accuracy estimate	

### 3.16.8 UBX-NAV2-PVAT (0x29 0x17)

#### 3.16.8.1 Navigation position velocity attitude time solution

<b>Message</b>	<b>UBX-NAV2-PVAT</b>					
	<b>Navigation position velocity attitude time solution</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message combines position, velocity, attitude and time solution, including accuracy figures. Note that during a leap second there may be more or less than 60 seconds in a minute. See description of leap seconds in the integration manual for details.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x17	116	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	X1	valid	-	-	Validity flags	
	bit 0	U:1	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)

	bit 1	U:1	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
	bit 2	U:1	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
	bit 3	U:1	validMag	-	-	1 = valid magnetic declination
6		U2	year	-	y	Year (UTC)
8		U1	month	-	month	Month, range 1..12 (UTC)
9		U1	day	-	d	Day of month, range 1..31 (UTC)
10		U1	hour	-	h	Hour of day, range 0..23 (UTC)
11		U1	min	-	min	Minute of hour, range 0..59 (UTC)
12		U1	sec	-	s	Seconds of minute, range 0..60 (UTC)
13		U1	reserved0	-	-	Reserved
14		U1[2]	reserved1	-	-	Reserved
16		U4	tAcc	-	ns	Time accuracy estimate (UTC)
20		I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
24		U1	fixType	-	-	GNSSfix Type: <ul style="list-style-type: none"> <li>• 0 = no fix</li> <li>• 1 = dead reckoning only</li> <li>• 2 = 2D-fix</li> <li>• 3 = 3D-fix</li> <li>• 4 = GNSS + dead reckoning combined</li> <li>• 5 = time only fix</li> </ul>
25		X1	flags	-	-	Fix status flags
	bit 0	U:1	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
	bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
	bit 3	U:1	vehRollValid	-	-	1 = roll of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 4	U:1	vehPitchValid	-	-	1 = pitch of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 5	U:1	vehHeadingValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 7...6	U:2	carrSoln	-	-	Carrier range solution status: <ul style="list-style-type: none"> <li>• 0 = no carrier range solution</li> <li>• 1 = carrier range solution with float ambiguities</li> <li>• 2 = carrier range solution with fixed ambiguities</li> </ul>
26		X1	flags2	-	-	Additional flags
	bit 5	U:1	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)
	bit 6	U:1	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U:1	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
27		U1	numSV	-	-	Number of satellites used in Nav Solution
28		I4	lon	1e-7	deg	Longitude
32		I4	lat	1e-7	deg	Latitude
36		I4	height	-	mm	Height above ellipsoid

40	I4	hMSL	-	mm	Height above mean sea level
44	U4	hAcc	-	mm	Horizontal accuracy estimate
48	U4	vAcc	-	mm	Vertical accuracy estimate
52	I4	velN	-	mm/s	NED north velocity
56	I4	velE	-	mm/s	NED east velocity
60	I4	velD	-	mm/s	NED down velocity
64	I4	gSpeed	-	mm/s	Ground Speed (2-D)
68	U4	sAcc	-	mm/s	Speed accuracy estimate
72	I4	vehRoll	1e-5	deg	Vehicle roll.
76	I4	vehPitch	1e-5	deg	Vehicle pitch.
80	I4	vehHeading	1e-5	deg	Vehicle heading.
84	I4	motHeading	1e-5	deg	Motion heading.
88	U2	accRoll	1e-2	deg	Vehicle roll accuracy (if null, roll angle is not available).
90	U2	accPitch	1e-2	deg	Vehicle pitch accuracy (if null, pitch angle is not available).
92	U2	accHeading	1e-2	deg	Vehicle heading accuracy (if null, heading angle is not available).
94	I2	magDec	1e-2	deg	Magnetic declination.
96	U2	magAcc	1e-2	deg	Magnetic declination accuracy.
98	U2	errEllipse Orient	1e-2	deg	Orientation of semi-major axis of error ellipse (degrees from true north)
100	U4	errEllipse Major	-	mm	Semi-major axis of error ellipse
104	U4	errEllipse Minor	-	mm	Semi-minor axis of error ellipse
108	U1[4]	reserved2	-	-	Reserved
112	U1[4]	reserved3	-	-	Reserved

### 3.16.9 UBX-NAV2-PVT (0x29 0x07)

#### 3.16.9.1 Navigation position velocity time solution

<b>Message</b>	<b>UBX-NAV2-PVT</b>					
	<b>Navigation position velocity time solution</b>					
Type	Periodic/polled					
Comment	This message combines position, velocity and time solution, including accuracy figures. Note that during a leap second there may be more or less than 60 seconds in a minute. See description of leap seconds in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x07	92	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U2	year	-	y	Year (UTC)	

6	U1	month	-	month	Month, range 1..12 (UTC)	
7	U1	day	-	d	Day of month, range 1..31 (UTC)	
8	U1	hour	-	h	Hour of day, range 0..23 (UTC)	
9	U1	min	-	min	Minute of hour, range 0..59 (UTC)	
10	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)	
11	X1	valid	-	-	Validity flags	
	bit 0	U <sub>:1</sub>	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
	bit 1	U <sub>:1</sub>	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
	bit 2	U <sub>:1</sub>	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
	bit 3	U <sub>:1</sub>	validMag	-	-	1 = valid magnetic declination
12	U4	tAcc	-	ns	Time accuracy estimate (UTC)	
16	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
20	U1	fixType	-	-	GNSSfix Type: <ul style="list-style-type: none"> <li>• 0 = no fix</li> <li>• 1 = dead reckoning only</li> <li>• 2 = 2D-fix</li> <li>• 3 = 3D-fix</li> <li>• 4 = GNSS + dead reckoning combined</li> <li>• 5 = time only fix</li> </ul>	
21	X1	flags	-	-	Fix status flags	
	bit 0	U <sub>:1</sub>	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
	bit 1	U <sub>:1</sub>	diffSoln	-	-	1 = differential corrections were applied
	bits 4...2	U <sub>:3</sub>	psmState	-	-	Power save mode state (see Power management section in the integration manual for details). <ul style="list-style-type: none"> <li>• 0 = PSM is not active</li> <li>• 1 = Enabled (an intermediate state before Acquisition state)</li> <li>• 2 = Acquisition</li> <li>• 3 = Tracking</li> <li>• 4 = Power Optimized Tracking</li> <li>• 5 = Inactive</li> </ul>
	bit 5	U <sub>:1</sub>	headVehValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 7...6	U <sub>:2</sub>	carrSoln	-	-	Carrier phase range solution status: <ul style="list-style-type: none"> <li>• 0 = no carrier phase range solution</li> <li>• 1 = carrier phase range solution with floating ambiguities</li> <li>• 2 = carrier phase range solution with fixed ambiguities</li> </ul> (not supported for protocol versions less than 20.00)
22	X1	flags2	-	-	Additional flags	
	bit 5	U <sub>:1</sub>	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details) This flag is only supported in <a href="#">Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28.</a>



bit 6	U:1	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
bit 7	U:1	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
23	U1	numSV	-	-	Number of satellites used in Nav Solution
24	I4	lon	1e-7	deg	Longitude
28	I4	lat	1e-7	deg	Latitude
32	I4	height	-	mm	Height above ellipsoid
36	I4	hMSL	-	mm	Height above mean sea level
40	U4	hAcc	-	mm	Horizontal accuracy estimate
44	U4	vAcc	-	mm	Vertical accuracy estimate
48	I4	velN	-	mm/s	NED north velocity
52	I4	velE	-	mm/s	NED east velocity
56	I4	velD	-	mm/s	NED down velocity
60	I4	gSpeed	-	mm/s	Ground Speed (2-D)
64	I4	headMot	1e-5	deg	Heading of motion (2-D)
68	U4	sAcc	-	mm/s	Speed accuracy estimate
72	U4	headAcc	1e-5	deg	Heading accuracy estimate (both motion and vehicle)
76	U2	pDOP	0.01	-	Position DOP
78	X2	flags3	-	-	Additional flags
bit 0	U:1	invalidLlh	-	-	1 = Invalid lon, lat, height and hMSL
bits 4...1	U:4	lastCorrection Age	-	-	Age of the most recently received differential correction: <ul style="list-style-type: none"> <li>• 0 = Not available</li> <li>• 1 = Age between 0 and 1 second</li> <li>• 2 = Age between 1 (inclusive) and 2 seconds</li> <li>• 3 = Age between 2 (inclusive) and 5 seconds</li> <li>• 4 = Age between 5 (inclusive) and 10 seconds</li> <li>• 5 = Age between 10 (inclusive) and 15 seconds</li> <li>• 6 = Age between 15 (inclusive) and 20 seconds</li> <li>• 7 = Age between 20 (inclusive) and 30 seconds</li> <li>• 8 = Age between 30 (inclusive) and 45 seconds</li> <li>• 9 = Age between 45 (inclusive) and 60 seconds</li> <li>• 10 = Age between 60 (inclusive) and 90 seconds</li> <li>• 11 = Age between 90 (inclusive) and 120 seconds</li> <li>• &gt;=12 = Age greater or equal than 120 seconds</li> </ul>
bit 13	U:1	authTime	-	-	Flag that indicates if the output time has been validated against an external trusted time source <ul style="list-style-type: none"> <li>• 0 = Time is not authenticated</li> <li>• 1 = Time is authenticated</li> </ul>
80	U1[4]	reserved0	-	-	<a href="#">Reserved</a>
84	I4	headVeh	1e-5	deg	Heading of vehicle (2-D), this is only valid when headVehValid is set, otherwise the output is set to the heading of motion
88	I2	magDec	1e-2	deg	Magnetic declination. Only supported in ADR 4.10 and later.

90	U2	magAcc	1e-2	deg	Magnetic declination accuracy. Only supported in ADR 4.10 and later.
----	----	--------	------	-----	----------------------------------------------------------------------

### 3.16.10 UBX-NAV2-SAT (0x29 0x35)

#### 3.16.10.1 Satellite information

<b>Message</b>		<b>UBX-NAV2-SAT</b>				
		<b>Satellite information</b>				
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message displays information about SVs that are either known to be visible or currently tracked by the receiver. All signal related information corresponds to the subset of signals specified in <a href="#">Signal Identifiers</a> .					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x35	8 + numSvs·12	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x01 for this version)	
5	U1	numSvs	-	-	Number of satellites	
6	U1[2]	reserved0	-	-	<a href="#">Reserved</a>	
<i>Start of repeated group (numSvs times)</i>						
8 + n·12	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment	
9 + n·12	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment	
10 + n·12	U1	cno	-	dBHz	Carrier to noise ratio (signal strength)	
11 + n·12	I1	elev	-	deg	Elevation (range: +/-90), unknown if out of range	
12 + n·12	I2	azim	-	deg	Azimuth (range 0-360), unknown if elevation is out of range	
14 + n·12	I2	prRes	0.1	m	Pseudorange residual	
16 + n·12	X4	flags	-	-	Bitmask	
	bits 2...0	U:3	qualityInd	-	-	Signal quality indicator: <ul style="list-style-type: none"> <li>• 0 = no signal</li> <li>• 1 = searching signal</li> <li>• 2 = signal acquired</li> <li>• 3 = signal detected but unusable</li> <li>• 4 = code locked and time synchronized</li> <li>• 5, 6, 7 = code and carrier locked and time synchronized</li> </ul>
	bit 3	U:1	svUsed	-	-	1 = Signal in the subset specified in <a href="#">Signal Identifiers</a> is currently being used for navigation
	bits 5...4	U:2	health	-	-	Signal health flag: <ul style="list-style-type: none"> <li>• 0 = unknown</li> <li>• 1 = healthy</li> <li>• 2 = unhealthy</li> </ul>
	bit 6	U:1	diffCorr	-	-	1 = differential correction data is available for this SV
	bit 7	U:1	smoothed	-	-	1 = carrier smoothed pseudorange used

bits 10...8	U:3	orbitSource	-	-	Orbit source: <ul style="list-style-type: none"> <li>• 0 = no orbit information is available for this SV</li> <li>• 1 = ephemeris is used</li> <li>• 2 = almanac is used</li> <li>• 3 = AssistNow Offline orbit is used</li> <li>• 4 = AssistNow Autonomous orbit is used</li> <li>• 5, 6, 7 = other orbit information is used</li> </ul>
bit 11	U:1	ephAvail	-	-	1 = ephemeris is available for this SV
bit 12	U:1	almAvail	-	-	1 = almanac is available for this SV
bit 13	U:1	anoAvail	-	-	1 = AssistNow Offline data is available for this SV
bit 14	U:1	aopAvail	-	-	1 = AssistNow Autonomous data is available for this SV
bit 16	U:1	sbasCorrUsed	-	-	1 = SBAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 17	U:1	rtcmCorrUsed	-	-	1 = RTCM corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 18	U:1	slasCorrUsed	-	-	1 = QZSS SLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 19	U:1	spartnCorrUsed	-	-	1 = SPARTN corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 20	U:1	prCorrUsed	-	-	1 = Pseudorange corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 21	U:1	crCorrUsed	-	-	1 = Carrier range corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 22	U:1	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 23	U:1	clasCorrUsed	-	-	1 = CLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>

End of repeated group (*numSVs* times)

### 3.16.11 UBX-NAV2-SBAS (0x29 0x32)

#### 3.16.11.1 SBAS status data

<b>Message</b>	<b>UBX-NAV2-SBAS SBAS status data</b>					
Type	Periodic/pollled					
Comment	This message outputs the status of the SBAS sub system					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x32	12 + cnt·12	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.	
4	U1	geo	-	-	PRN Number of the GEO where correction and integrity data is used from	
5	U1	mode	-	-	SBAS Mode <ul style="list-style-type: none"> <li>• 0 Disabled</li> <li>• 1 Enabled integrity</li> <li>• 3 Enabled test mode</li> </ul>	

6	11	sys	-	-	SBAS System (WAAS/EGNOS/...) <ul style="list-style-type: none"> <li>-1 Unknown</li> <li>0 WAAS</li> <li>1 EGNOS</li> <li>2 MSAS</li> <li>3 GAGAN</li> <li>16 GPS</li> </ul>	
7	X1	service	-	-	SBAS Services available	
	bit 0	U:1	Ranging	-	-	GEO may be used as ranging source
	bit 1	U:1	Corrections	-	-	GEO is providing correction data
	bit 2	U:1	Integrity	-	-	GEO is providing integrity
	bit 3	U:1	Testmode	-	-	GEO is in test mode
	bit 4	U:1	Bad	-	-	Problem with signal or broadcast data indicated
8	U1	cnt	-	-	Number of SV data following	
9	X1	statusFlags	-	-	SBAS status flags	
	bits 1...0	U:2	integrityUsed	-	-	SBAS integrity used <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Integrity information is not available or SBAS integrity is not enabled</li> <li>2 = Receiver uses only GPS satellites for which integrity information is available</li> </ul>
10	U1[2]	reserved0	-	-	Reserved	
<i>Start of repeated group (cnt times)</i>						
12 + n·12	U1	svid	-	-	SV ID	
13 + n·12	U1	reserved1	-	-	Reserved	
14 + n·12	U1	udre	-	-	Monitoring status	
15 + n·12	U1	svSys	-	-	System (WAAS/EGNOS/...) same as SYS	
16 + n·12	U1	svService	-	-	Services available same as SERVICE	
17 + n·12	U1	reserved2	-	-	Reserved	
18 + n·12	I2	prc	-	cm	Pseudo Range correction in [cm]	
20 + n·12	U1[2]	reserved3	-	-	Reserved	
22 + n·12	I2	ic	-	cm	Ionosphere correction in [cm]	
<i>End of repeated group (cnt times)</i>						

### 3.16.12 UBX-NAV2-SIG (0x29 0x43)

#### 3.16.12.1 Signal information

<b>Message</b>	<b>UBX-NAV2-SIG</b>					
	<b>Signal information</b>					
Type	Periodic/pollled					
Comment	This message displays information about signals currently tracked or searched by the receiver.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x43	8 + numSigs·16	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	numSigs	-	-	Number of signals
6	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (numSigs times)</i>					
8 + n·16	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment
9 + n·16	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment
10 + n·16	U1	sigId	-	-	New style signal identifier (see <a href="#">Signal Identifiers</a> )
11 + n·16	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
12 + n·16	I2	prRes	0.1	m	Pseudorange residual
14 + n·16	U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength)
15 + n·16	U1	qualityInd	-	-	Signal quality indicator: <ul style="list-style-type: none"> <li>0 = no signal</li> <li>1 = searching signal</li> <li>2 = signal acquired</li> <li>3 = signal detected but unusable</li> <li>4 = code locked and time synchronized</li> <li>5, 6, 7 = code and carrier locked and time synchronized</li> </ul>
16 + n·16	U1	corrSource	-	-	Correction source: <ul style="list-style-type: none"> <li>0 = no corrections</li> <li>1 = SBAS corrections</li> <li>2 = BeiDou corrections</li> <li>3 = RTCM2 corrections</li> <li>4 = RTCM3 OSR corrections</li> <li>5 = RTCM3 SSR corrections</li> <li>6 = QZSS SLAS corrections</li> <li>7 = SPARTN corrections</li> <li>8 = CLAS corrections</li> </ul>
17 + n·16	U1	ionoModel	-	-	Ionospheric model used: <ul style="list-style-type: none"> <li>0 = no model</li> <li>1 = Klobuchar model transmitted by GPS</li> <li>2 = SBAS model</li> <li>3 = Klobuchar model transmitted by BeiDou</li> <li>8 = Iono delay derived from dual frequency observations</li> </ul>
18 + n·16	X2	sigFlags	-	-	Signal related flags
bits 1...0	U:2	health	-	-	Signal health flag: <ul style="list-style-type: none"> <li>0 = unknown</li> <li>1 = healthy</li> <li>2 = unhealthy</li> </ul>
bit 2	U:1	prSmoothed	-	-	1 = Pseudorange has been smoothed
bit 3	U:1	prUsed	-	-	1 = Pseudorange has been used for this signal
bit 4	U:1	crUsed	-	-	1 = Carrier range has been used for this signal
bit 5	U:1	doUsed	-	-	1 = Range rate (Doppler) has been used for this signal

bit 6	U:1	prCorrUsed	-	-	1 = Pseudorange corrections have been used for this signal
bit 7	U:1	crCorrUsed	-	-	1 = Carrier range corrections have been used for this signal
bit 8	U:1	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for this signal
bit 9	U:1	authStatus	-	-	<p>Authentication status of the navigation data used to compute the satellite's position in current navigation epoch. If the authentication fails, the navigation data will not be used so the authentication status in this message can only take two values:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Authenticated</li> </ul> <p>Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message.</p>
20 + n·16	U1[4]	reserved1	-	-	Reserved

End of repeated group (*numSigs* times)

### 3.16.13 UBX-NAV2-SLAS (0x29 0x42)

#### 3.16.13.1 QZSS L1S SLAS status data

<b>Message</b>	<b>UBX-NAV2-SLAS</b>					
	<b>QZSS L1S SLAS status data</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	This message outputs the status of the QZSS L1S SLAS sub system					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x42	20 + cnt·8	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1[3]	reserved0	-	-	Reserved	
8	I4	gmsLon	1e-3	deg	Longitude of the used ground monitoring station	
12	I4	gmsLat	1e-3	deg	Latitude of the used ground monitoring station	
16	U1	gmsCode	-	-	Code of the used ground monitoring station according to the QZSS SLAS Interface Specification, available from <a href="http://qzss.go.jp/en/">qzss.go.jp/en/</a>	
17	U1	qzssSvId	-	-	Satellite identifier of the QZS/GEO whose correction data is used (see <a href="#">Satellite Numbering</a> )	
18	X1	serviceFlags	-	-	Flags regarding SLAS service	
	bit 0	U:1	gmsAvailable	-	-	1 = Ground monitoring station available
	bit 1	U:1	qzssSv Available	-	-	1 = Correction providing QZSS SV available
	bit 2	U:1	testMode	-	-	1 = Currently used QZSS SV in test mode
19	U1	cnt	-	-	Number of pseudorange corrections following	

Start of repeated group (*cnt* times)

20 + n·8	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> )
21 + n·8	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )
22 + n·8	U1	reserved1	-	-	Reserved
23 + n·8	U1[3]	reserved2	-	-	Reserved
26 + n·8	I2	prc	-	cm	Pseudorange correction

End of repeated group (*cnt* times)

### 3.16.14 UBX-NAV2-STATUS (0x29 0x03)

#### 3.16.14.1 Receiver navigation status

<b>Message</b>	<b>UBX-NAV2-STATUS</b>				
	<b>Receiver navigation status</b>				
<b>Type</b>	Periodic/pollled				
<b>Comment</b>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5 0x62	0x29	0x03	16	see below
<b>Checksum</b>	CK_A CK_B				
<b>Payload description:</b>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	gpsFix	-	-	GPSfix Type, this value does <b>not</b> qualify a fix as valid and within the limits. See note on flag gpsFixOk below. <ul style="list-style-type: none"> <li>0x00 = no fix</li> <li>0x01 = dead reckoning only</li> <li>0x02 = 2D-fix</li> <li>0x03 = 3D-fix</li> <li>0x04 = GPS + dead reckoning combined</li> <li>0x05 = Time only fix</li> <li>0x06..0xff = reserved</li> </ul>
5	X1	flags	-	-	Navigation Status Flags
bit 0	U:1	gpsFixOk	-	-	1 = position and velocity valid and within DOP and ACC Masks.
bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
bit 2	U:1	wknSet	-	-	1 = Week Number valid (see section Time validity in the integration manual for details)
bit 3	U:1	towSet	-	-	1 = Time of Week valid (see section Time validity in the integration manual for details)
6	X1	fixStat	-	-	Fix Status Information
bit 0	U:1	diffCorr	-	-	1 = differential corrections available
bit 1	U:1	carrSolnValid	-	-	1 = valid carrSoln
bits 7...6	U:2	mapMatching	-	-	map matching status: <ul style="list-style-type: none"> <li>00: none</li> <li>01: valid but not used, i.e. map matching data was received, but was too old</li> <li>10: valid and used, map matching data was applied</li> </ul>

- 11: valid and used, map matching data was applied. In case of sensor unavailability map matching data enables dead reckoning. This requires map matched latitude/longitude or heading data.

7	X1	flags2	-	-	further information about navigation output
bits 1...0	U:2	psmState	-	-	power save mode state (not supported for protocol versions less than 13.01) <ul style="list-style-type: none"> <li>• 0 = ACQUISITION [or when psm disabled]</li> <li>• 1 = TRACKING</li> <li>• 2 = POWER OPTIMIZED TRACKING</li> <li>• 3 = INACTIVE</li> </ul>
bits 4...3	U:2	spooofDetState	-	-	Spooofing detection state (not supported for protocol versions less than 18.00) <ul style="list-style-type: none"> <li>• 0: Unknown or deactivated</li> <li>• 1: No spooofing indicated</li> <li>• 2: Spooofing indicated</li> <li>• 3: Multiple spooofing indications</li> </ul> Note that the spooofing state value only reflects the detector state for the current navigation epoch. As spooofing can be detected most easily at the transition from real signal to spooofing signal, this is also where the detector is triggered the most. I.e. a value of 1 - <i>No spooofing indicated</i> does not mean that the receiver is not spooofed, it simply states that the detector was not triggered in this epoch.
bits 7...6	U:2	carrSoln	-	-	Carrier phase range solution status: <ul style="list-style-type: none"> <li>• 0 = no carrier phase range solution</li> <li>• 1 = carrier phase range solution with floating ambiguities</li> <li>• 2 = carrier phase range solution with fixed ambiguities</li> </ul>
8	U4	ttff	-	ms	Time to first fix (millisecond time tag)
12	U4	msss	-	ms	Milliseconds since Startup / Reset

### 3.16.15 UBX-NAV2-TIMEBDS (0x29 0x24)

#### 3.16.15.1 BeiDou time solution

<b>Message</b>	<b>UBX-NAV2-TIMEBDS</b> <b>BeiDou time solution</b>					
Type	Periodic/pollled					
Comment	This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x24	20	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U4	SOW	-	s	BDS time of week (rounded to seconds)	



8	I4	fSOW	-	ns	Fractional part of SOW (range: +/-500000000). The precise BDS time of week in seconds is: $SOW + fSOW * 1e-9$	
12	I2	week	-	-	BDS week number of the navigation epoch	
14	I1	leapS	-	s	BDS leap seconds (BDS-UTC)	
15	X1	valid	-	-	Validity Flags	
	bit 0	U:1	sowValid	-	-	1 = Valid SOW and fSOW (see section Time validity in the integration manual for details)
	bit 1	U:1	weekValid	-	-	1 = Valid week (see section Time validity in the integration manual for details)
	bit 2	U:1	leapSValid	-	-	1 = Valid leap second
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.16.16 UBX-NAV2-TIMEGAL (0x29 0x25)

#### 3.16.16.1 Galileo time solution

<b>Message</b>	<b>UBX-NAV2-TIMEGAL</b> <b>Galileo time solution</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x25	20	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U4	galTow	-	s	Galileo time of week (rounded to seconds)	
8	I4	fGalTow	-	ns	Fractional part of the Galileo time of week (range: +/-500000000). The precise Galileo time of week in seconds is: $galTow + fGalTow * 1e-9$	
12	I2	galWno	-	-	Galileo week number	
14	I1	leapS	-	s	Galileo leap seconds (Galileo-UTC)	
15	X1	valid	-	-	Validity Flags	
	bit 0	U:1	galTowValid	-	-	1 = Valid galTow and fGalTow (see section Time validity in the integration manual for details)
	bit 1	U:1	galWnoValid	-	-	1 = Valid galWno (see section Time validity in the integration manual for details)
	bit 2	U:1	leapSValid	-	-	1 = Valid leapS
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.16.17 UBX-NAV2-TIMEGLO (0x29 0x23)

### 3.16.17.1 GLONASS time solution

<b>Message</b>	<b>UBX-NAV2-TIMEGLO</b> <b>GLONASS time solution</b>					
Type	Periodic/pollled					
Comment	This message reports the precise GLO time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x23	20	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U4	TOD	-	s	GLONASS time of day (rounded to integer seconds)	
8	I4	fTOD	-	ns	Fractional part of TOD (range: +/-500000000). The precise GLONASS time of day in seconds is: $TOD + fTOD * 1e-9$	
12	U2	Nt	-	days	Current date (range: 1-1461), starting at 1 from the 1st Jan of the year indicated by N4 and ending at 1461 at the 31st Dec of the third year after that indicated by N4	
14	U1	N4	-	-	Four-year interval number starting from 1996 (1=1996, 2=2000, 3=2004...)	
15	X1	valid	-	-	Validity flags	
	bit 0	U:1	todValid	-	-	1 = Valid TOD and fTOD (see section Time validity in the integration manual for details)
	bit 1	U:1	dateValid	-	-	1 = Valid N4 and Nt (see section Time validity in the integration manual for details)
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.16.18 UBX-NAV2-TIMEGPS (0x29 0x20)

#### 3.16.18.1 GPS time solution

<b>Message</b>	<b>UBX-NAV2-TIMEGPS</b> <b>GPS time solution</b>					
Type	Periodic/pollled					
Comment	This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x20	16	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	fTOW	-	ns	Fractional part of iTOW (range: +/-500000). The precise GPS time of week in seconds is: $(iTOW * 1e-3) + (fTOW * 1e-9)$	

8	I2	week	-	-	GPS week number of the navigation epoch	
10	I1	leapS	-	s	GPS leap seconds (GPS-UTC)	
11	X1	valid	-	-	Validity Flags	
	bit 0	U:1	towValid	-	-	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in the integration manual for details)
	bit 1	U:1	weekValid	-	-	1 = Valid GPS week number (see section Time validity in the integration manual for details)
	bit 2	U:1	leapSValid	-	-	1 = Valid GPS leap seconds
12	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.16.19 UBX-NAV2-TIMELS (0x29 0x26)

#### 3.16.19.1 Leap second event information

<b>Message</b>	<b>UBX-NAV2-TIMELS</b>					
	<b>Leap second event information</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	Information about the upcoming leap second event if one is scheduled.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x26	24	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1[3]	reserved0	-	-	<a href="#">Reserved</a>	
8	U1	srcOfCurrLs	-	-	Information source for the current number of leap seconds. <ul style="list-style-type: none"> <li>• 0 = Default (hardcoded in the firmware, can be outdated)</li> <li>• 1 = Derived from time difference between GPS and GLONASS time</li> <li>• 2 = GPS</li> <li>• 3 = SBAS</li> <li>• 4 = BeiDou</li> <li>• 5 = Galileo</li> <li>• 6 = Aided data</li> <li>• 7 = Configured</li> <li>• 8 = NavIC</li> <li>• 255 = Unknown</li> </ul>	
9	I1	currLs	-	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.	

10	U1	srcOfLsChange	-	-	Information source for the future leap second event. <ul style="list-style-type: none"> <li>0 = No source</li> <li>2 = GPS</li> <li>3 = SBAS</li> <li>4 = BeiDou</li> <li>5 = Galileo</li> <li>6 = GLONASS</li> <li>7 = NavIC</li> </ul>	
11	I1	lsChange	-	s	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available. If the value is 0, then the amount of leap seconds did not change and the event should be ignored.	
12	I4	timeToLsEvent	-	s	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.	
16	U2	dateOfLsGps Wn	-	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.	
18	U2	dateOfLsGps Dn	-	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)	
20	U1[3]	reserved1	-	-	<a href="#">Reserved</a>	
23	X1	valid	-	-	Validity flags	
	bit 0	U:1	validCurrLs	-	-	1 = Valid current number of leap seconds value.
	bit 1	U:1	validTimeToLs Event	-	-	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.

### 3.16.20 UBX-NAV2-TIMEQZSS (0x29 0x27)

#### 3.16.20.1 QZSS time solution

<b>Message</b>	<b>UBX-NAV2-TIMEQZSS</b>					
	<b>QZSS time solution</b>					
<b>Type</b>	Periodic/polled					
<b>Comment</b>	This message reports the precise QZSS time of the most recent navigation solution including validity flags and an accuracy estimate. See the Clocks and time section in the integration manual for details.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x27	20	see below	CK_A CK_B
<b>Payload description:</b>						
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch.	
4	U4	qzssTow	-	s	QZSS time of week (rounded to seconds)	

8	I4	fQzssTow	-	ns	Fractional part of QZSS time of week (range: +/-500000000). The precise QZSS time of week in seconds is: $qzssTow + (fQzssTow * 1e-9)$	
12	I2	qzssWno	-	-	QZSS week number of the navigation epoch	
14	I1	leapS	-	s	QZSS leap seconds (QZSS-UTC)	
15	X1	valid	-	-	Validity Flags	
	bit 0	U:1	qzssTowValid	-	-	1 = Valid QZSS time of week (qzssTow and fQzssTow)
	bit 1	U:1	qzssWnoValid	-	-	1 = Valid QZSS week number
	bit 2	U:1	leapSValid	-	-	1 = Valid QZSS leap seconds
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.16.21 UBX-NAV2-TIMEUTC (0x29 0x21)

#### 3.16.21.1 UTC time solution

<b>Message</b>	<b>UBX-NAV2-TIMEUTC</b>					
	<b>UTC time solution</b>					
Type	Periodic/polled					
Comment	Note that during a leap second there may be more or less than 60 seconds in a minute. See the description of leap seconds in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x21	20	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U4	tAcc	-	ns	Time accuracy estimate (UTC)	
8	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
12	U2	year	-	y	Year, range 1999..2099 (UTC)	
14	U1	month	-	month	Month, range 1..12 (UTC)	
15	U1	day	-	d	Day of month, range 1..31 (UTC)	
16	U1	hour	-	h	Hour of day, range 0..23 (UTC)	
17	U1	min	-	min	Minute of hour, range 0..59 (UTC)	
18	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)	
19	X1	valid	-	-	Validity Flags	
	bit 0	U:1	validTOW	-	-	1 = Valid Time of Week (see section Time validity in the integration manual for details)
	bit 1	U:1	validWKN	-	-	1 = Valid Week Number (see section Time validity in the integration manual for details)
	bit 2	U:1	validUTC	-	-	1 = Valid UTC Time
	bit 3	U:1	authStatus	-	-	Indicates if the parameters used to convert GNSS time into UTC time have been authenticated. <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Authenticated</li> </ul>

Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message which means that data can only be authenticated for EU UTC standard.

bits 7...4	U:4	utcStandard	-	-	UTC standard identifier. (Not supported for protocol versions less than 15.00)
					<ul style="list-style-type: none"> <li>• 0 = Information not available</li> <li>• 1 = Communications Research Laboratory (CRL), Tokyo, Japan</li> <li>• 2 = National Institute of Standards and Technology (NIST)</li> <li>• 3 = U.S. Naval Observatory (USNO)</li> <li>• 4 = International Bureau of Weights and Measures (BIPM)</li> <li>• 5 = European laboratories</li> <li>• 6 = Former Soviet Union (SU)</li> <li>• 7 = National Time Service Center (NTSC), China</li> <li>• 8 = National Physics Laboratory India (NPLI)</li> <li>• 15 = Unknown</li> </ul>

### 3.16.22 UBX-NAV2-VELECEF (0x29 0x11)

#### 3.16.22.1 Velocity solution in ECEF

<b>Message</b>	<b>UBX-NAV2-VELECEF</b>					
	<b>Velocity solution in ECEF</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x11	20	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	ecefVX	-	cm/s	ECEF X velocity	
8	I4	ecefVY	-	cm/s	ECEF Y velocity	
12	I4	ecefVZ	-	cm/s	ECEF Z velocity	
16	U4	sAcc	-	cm/s	Speed accuracy estimate	

### 3.16.23 UBX-NAV2-VELNED (0x29 0x12)

#### 3.16.23.1 Velocity solution in NED frame

<b>Message</b>	<b>UBX-NAV2-VELNED</b>					
	<b>Velocity solution in NED frame</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x29	0x12	36	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	velN	-	cm/s	North velocity component
8	I4	velE	-	cm/s	East velocity component
12	I4	velD	-	cm/s	Down velocity component
16	U4	speed	-	cm/s	Speed (3-D)
20	U4	gSpeed	-	cm/s	Ground speed (2-D)
24	I4	heading	1e-5	deg	Heading of motion 2-D
28	U4	sAcc	-	cm/s	Speed accuracy Estimate
32	U4	cAcc	1e-5	deg	Course / Heading accuracy estimate

### 3.17 UBX-RXM (0x02)

The messages in the UBX-RXM class are used to output status and result data from the receiver manager as well as sending commands to the receiver manager.

#### 3.17.1 UBX-RXM-COR (0x02 0x34)

##### 3.17.1.1 Differential correction input status

Message	UBX-RXM-COR					
	Differential correction input status					
Type	Output					
Comment	This message shows information on received differential correction input messages. It is output upon successful parsing of a differential correction input message, irrespective of whether the parsed message is supported/used by the receiver.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x34	12	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1	ebno	2 <sup>-3</sup>	dB	Energy per bit to noise power spectral density ratio (Eb/N0). 0: unknown. Reported only for protocol UBX-RXM-PMP (SPARTN) to monitor signal quality.	
2	U1[2]	reserved0	-	-	Reserved	
4	X4	statusInfo	-	-	Message input status information	
bits 4...0	U:5	protocol	-	-	Input correction data protocol: <ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: RTCM3</li> <li>2: SPARTN (Secure Position Augmentation for Real Time Navigation)</li> <li>29: UBX-RXM-PMP (SPARTN)</li> <li>30: UBX-RXM-QZSSL6</li> </ul>	
bits 6...5	U:2	errStatus	-	-	Error status of the received correction message content based on possibly available error codes or checksums: <ul style="list-style-type: none"> <li>0: Unknown</li> </ul>	

					<ul style="list-style-type: none"> <li>1: Error-free</li> <li>2: Erroneous</li> </ul>
bits 8...7	U:2	msgUsed	-	-	Status of receiver using the input message: <ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: Not used</li> <li>2: Used</li> </ul>
bits 24...9	U:16	correctionId	-	-	Identifier for the correction stream: <ul style="list-style-type: none"> <li>For RTCM 3: Reference station ID (DF003) of the received RTCM input message. Valid range 0-4095. Reported only for the standard RTCM messages that include the DF003 field and for the u-blox proprietary RTCM messages 4072.x. For all other messages, reports 0xFFFF.</li> <li>For other correction protocols 0xFFFF.</li> </ul>
bit 25	U:1	msgTypeValid	-	-	Validity of the msgType field. Set to False e.g. if the protocol does not define msgType.
bit 26	U:1	msgSubTypeValid	-	-	Validity of the msgSubType field. Set to False e.g. if the protocol does not define subtype for the msgType.
bit 27	U:1	msgInputHandle	-	-	Input handling support of the input message: <ul style="list-style-type: none"> <li>0: Receiver does not have input handling support for this message</li> <li>1: Receiver has input handling support for this message. Input handling support does not necessarily mean that message is supported/used by the receiver.</li> </ul>
bits 29...28	U:2	msgEncrypted	-	-	Encryption status of the input message: <ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: Not encrypted</li> <li>2: Encrypted</li> </ul>
bits 31...30	U:2	msgDecrypted	-	-	Decryption status of the input message: <ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: Not decrypted</li> <li>2: Decrypted</li> </ul>
8	U2	msgType	-	-	Message type
10	U2	msgSubType	-	-	Message subtype

### 3.17.2 UBX-RXM-MEASX (0x02 0x14)

#### 3.17.2.1 Satellite measurements for RRLP

<b>Message</b>	<b>UBX-RXM-MEASX</b>					
	<b>Satellite measurements for RRLP</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	The message payload data is, where possible and appropriate, according to the Radio Resource LCS (Location Services) Protocol (RRLP) [1]. One exception is the satellite and GNSS IDs, which here are given according to the <a href="#">Satellite Numbering</a> scheme. The correct satellites have to be selected and their satellite ID translated accordingly [1, tab. A.10.14] for use in a RRLP Measure Position Response Component. Similarly, the measurement reference time of week has to be forwarded correctly (modulo 14400000 for the 24 LSB GPS measurements variant, modulo 3600000 for the 22 LSB Galileo and Additional Navigation Satellite Systems (GANSS) measurements variant) of the RRLP measure position response to the SMLC.  Reference: [1] ETSI TS 144 031 V11.0.0 (2012-10), Digital cellular telecommunications system (Phase 2+), Location Services (LCS), Mobile Station (MS) - Serving Mobile Location Centre (SMLC), Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11).					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x02	0x14	44 + numSV*24	see below	CK_A CK_B



*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version, currently 0x01
1	U1[3]	reserved0	-	-	Reserved
4	U4	gpsTOW	-	ms	GPS measurement reference time
8	U4	gloTOW	-	ms	GLONASS measurement reference time
12	U4	bdsTOW	-	ms	BeiDou measurement reference time
16	U1[4]	reserved1	-	-	Reserved
20	U4	qzssTOW	-	ms	QZSS measurement reference time
24	U2	gpsTOWacc	2 <sup>-4</sup>	ms	GPS measurement reference time accuracy (0xffff = > 4s)
26	U2	gloTOWacc	2 <sup>-4</sup>	ms	GLONASS measurement reference time accuracy (0xffff = > 4s)
28	U2	bdsTOWacc	2 <sup>-4</sup>	ms	BeiDou measurement reference time accuracy (0xffff = > 4s)
30	U1[2]	reserved2	-	-	Reserved
32	U2	qzssTOWacc	2 <sup>-4</sup>	ms	QZSS measurement reference time accuracy (0xffff = > 4s)
34	U1	numSV	-	-	Number of satellites in repeated block
35	U1	flags	-	-	Flags
	bits 1...0	U:2			TOW set (0 = no, 1 or 2 = yes)
36	U1[8]	reserved3	-	-	Reserved
<i>Start of repeated group (numSV times)</i>					
44 + n·24	U1	gnssId	-	-	GNSS ID (see <a href="#">Satellite Numbering</a> )
45 + n·24	U1	svId	-	-	Satellite ID (see <a href="#">Satellite Numbering</a> )
46 + n·24	U1	cNo	-	-	carrier noise ratio (0..63)
47 + n·24	U1	mpathIndic	-	-	multipath index (according to [1]) (0 = not measured, 1 = low, 2 = medium, 3 = high)
48 + n·24	I4	dopplerMS	0.04	m/s	Doppler measurement
52 + n·24	I4	dopplerHz	0.2	Hz	Doppler measurement
56 + n·24	U2	wholeChips	-	-	whole value of the code phase measurement (0..1022 for GPS)
58 + n·24	U2	fracChips	-	-	fractional value of the code phase measurement (0..1023)
60 + n·24	U4	codePhase	2 <sup>-21</sup>	ms	Code phase
64 + n·24	U1	intCodePhase	-	ms	Integer (part of the) code phase
65 + n·24	U1	pseuRangeRMS Err	-	-	pseudorange RMS error index (according to [1]) (0..63)
66 + n·24	U1[2]	reserved4	-	-	Reserved
<i>End of repeated group (numSV times)</i>					

### 3.17.3 UBX-RXM-PMP (0x02 0x72)

### 3.17.3.1 PMP (LBAND) message

<b>Message</b>		<b>UBX-RXM-PMP PMP (LBAND) message</b>				
Type	Input					
Comment	Point to Multipoint (LBAND) input message					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x72	24 + [0..n]	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1	reserved0	-	-	Reserved	
2	U2	numBytesUserData	-	-	Number of bytes the userData block has in this frame (0...504)	
4	U4	timeTag	-	ms	Time since startup when frame started - if max value of type is reached the counter will be reset	
8	U4[2]	uniqueWord	-	-	Received unique words	
16	U2	serviceIdentifier	-	-	Received service identifier	
18	U1	spare	-	-	Received spare data	
19	U1	uniqueWordBitErrors	-	-	Number of bit errors in both unique words	
20	U2	fecBits	-	-	Number of bits corrected by FEC (forward error correction)	
22	U1	ebno	2 <sup>-3</sup>	dB	Energy per bit to noise power spectral density ratio	
23	U1	reserved1	-	-	Reserved	
<i>Start of repeated group (N times)</i>						
24 + n	U1	userData	-	-	Received user data, which is variable (=numBytesUserData)	
<i>End of repeated group (N times)</i>						

### 3.17.4 UBX-RXM-PMREQ (0x02 0x41)

#### 3.17.4.1 Power management request

<b>Message</b>		<b>UBX-RXM-PMREQ Power management request</b>				
Type	Command					
Comment	This message requests a power management related task of the receiver.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x41	8	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	duration	-	ms	Duration of the requested task. The maximum supported value is 12 days. Set to 0 to wait for a wakeup signal on a pin	
4	X4	flags	-	-	task flags	

bit 1	U:1	backup	-	-	The receiver goes into backup mode for a time period defined by duration, provided that it is not connected to USB
-------	-----	--------	---	---	--------------------------------------------------------------------------------------------------------------------

### 3.17.4.2 Power management request

<b>Message</b>	<b>UBX-RXM-PMREQ</b>					
	<b>Power management request</b>					
Type	Command					
Comment	This message requests a power management related task of the receiver.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x41	16	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1[3]	reserved0	-	-	Reserved	
4	U4	duration	-	ms	Duration of the requested task. The maximum supported value is 12 days. Set to 0 to wait for a wakeup signal on a pin	
8	X4	flags	-	-	task flags	
	bit 1	U:1	backup	-	-	The receiver goes into backup mode for a time period defined by duration, provided that it is not connected to USB
	bit 2	U:1	force	-	-	Force receiver backup while USB is connected. USB interface will be disabled.
12	X4	wakeupSources	-	-	Configure pins to wake up the receiver. The receiver wakes up if there is either a falling or a rising edge on one of the configured pins.	
	bit 3	U:1	uartrx	-	-	Wake up the receiver if there is an edge on the UART RX pin
	bit 5	U:1	extint0	-	-	Wake up the receiver if there is an edge on the EXTINT0 pin
	bit 6	U:1	extint1	-	-	Wake up the receiver if there is an edge on the EXTINT1 pin
	bit 7	U:1	spics	-	-	Wake up the receiver if there is an edge on the SPI CS pin

### 3.17.5 UBX-RXM-QZSSL6 (0x02 0x73)

#### 3.17.5.1 QZSS L6 message

<b>Message</b>	<b>UBX-RXM-QZSSL6</b>					
	<b>QZSS L6 message</b>					
Type	Input					
Comment	QZSS L6 message input, as defined in 'Quasi Zenith Satellite System Interface Specification Centimeter Level Augmentation Service (IS-QZSS-L6-001)'.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x73	264	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	

1	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )
2	U2	cno	2 <sup>^</sup> -8	dBHz	Mean C/N0
4	U4	timeTag	-	ms	Local time tag corresponding to the beginning of a received QZSS L6 message
8	U1	groupDelay	-	ns	L6 group delay w.r.t. L2 on channel
9	U1	bitErrCorr	-	-	Number of bit errors corrected by Reed-Solomon decoder
10	X2	chInfo	-	-	Information about receiver channel associated with a received QZSS L6 message
	bits 9...8	U:2	chn	-	Receiver channel (0, 1)
	bit 10	U:1	msgName	-	Message name, 0=L6D, 1=L6E
	bits 13...12	U:2	errStatus	-	Error status of the received QZSS L6 message: 0=unknown, 1=error-free, 2=erroneous
	bits 15...14	U:2	chName	-	Channel name, 0=channel A, 1=channel B
12	U1[2]	reserved0	-	-	<a href="#">Reserved</a>
14	U1[250]	msgBytes	-	-	Bytes in a QZSS L6 message

### 3.17.6 UBX-RXM-RAWX (0x02 0x15)

#### 3.17.6.1 Multi-GNSS raw measurements

<b>Message</b>	<b>UBX-RXM-RAWX</b>					
	<b>Multi-GNSS raw measurements</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	<p>This message contains the information needed to be able to generate a RINEX 3 multi-GNSS observation file (see <a href="ftp://ftp.igs.org/pub/data/format/">ftp://ftp.igs.org/pub/data/format/</a>).</p> <p>This message contains pseudorange, Doppler, carrier phase, phase lock and signal quality information for GNSS satellites once signals have been synchronized. This message supports all active GNSS.</p>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x02	0x15	16 + numMeas*32	see below	CK_A CK_B
<b>Payload description:</b>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	R8	rcvTow	-	s	<p>Measurement time of week in receiver local time approximately aligned to the GPS time system.</p> <p>The receiver local time of week, week number and leap second information can be used to translate the time to other time systems. More information about the difference in time systems can be found in the RINEX 3 format documentation. For a receiver operating in GLONASS only mode, UTC time can be determined by subtracting the leapS field from GPS time regardless of whether the GPS leap seconds are valid.</p>	
8	U2	week	-	weeks	GPS week number in receiver local time.	
10	I1	leapS	-	s	GPS leap seconds (GPS-UTC). This field represents the receiver's best knowledge of the leap seconds offset. A flag is given in the recStat bitfield to indicate if the leap seconds are known.	
11	U1	numMeas	-	-	Number of measurements to follow	
12	X1	recStat	-	-	Receiver tracking status bitfield	
	bit 0	U:1	leapSec	-	Leap seconds have been determined	

	bit 1	U:1	clkReset	-	-	Clock reset applied. Typically the receiver clock is changed in increments of integer milliseconds.
13		U1	version	-	-	Message version (0x01 for this version)
14		U1[2]	reserved0	-	-	<a href="#">Reserved</a>
<i>Start of repeated group (numMeas times)</i>						
16 + n·32		R8	prMes	-	m	Pseudorange measurement [m]. GLONASS inter frequency channel delays are compensated with an internal calibration table.
24 + n·32		R8	cpMes	-	cycles	Carrier phase measurement [cycles]. The carrier phase initial ambiguity is initialized using an approximate value to make the magnitude of the phase close to the pseudorange measurement. Clock resets are applied to both phase and code measurements in accordance with the RINEX specification.
32 + n·32		R4	doMes	-	Hz	Doppler measurement (positive sign for approaching satellites) [Hz]
36 + n·32		U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> for a list of identifiers)
37 + n·32		U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )
38 + n·32		U1	sigId	-	-	New style signal identifier (see <a href="#">Signal Identifiers</a> ). (not supported for protocol versions less than 27.00)
39 + n·32		U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
40 + n·32		U2	locktime	-	ms	Carrier phase locktime counter (maximum 64500ms)
42 + n·32		U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength) [dB-Hz]
43 + n·32		X1	prStdev	0.01*2 <sup>n</sup>	m	Estimated pseudorange measurement standard deviation
	bits 3...0	U:4	prStd	-	-	Estimated pseudorange standard deviation
44 + n·32		X1	cpStdev	0.004	cycles	Estimated carrier phase measurement standard deviation (note a raw value of 0x0F indicates the value is invalid)
	bits 3...0	U:4	cpStd	-	-	Estimated carrier phase standard deviation
45 + n·32		X1	doStdev	0.002*2 <sup>n</sup>	Hz	Estimated Doppler measurement standard deviation.
	bits 3...0	U:4	doStd	-	-	Estimated Doppler standard deviation
46 + n·32		X1	trkStat	-	-	Tracking status bitfield
	bit 0	U:1	prValid	-	-	Pseudorange valid
	bit 1	U:1	cpValid	-	-	Carrier phase valid
	bit 2	U:1	halfCyc	-	-	Half cycle valid
	bit 3	U:1	subHalfCyc	-	-	Half cycle subtracted from phase
47 + n·32		U1	reserved1	-	-	<a href="#">Reserved</a>
<i>End of repeated group (numMeas times)</i>						

### 3.17.7 UBX-RXM-RLM (0x02 0x59)

### 3.17.7.1 Galileo SAR short-RLM report

<b>Message</b>	<b>UBX-RXM-RLM</b>					
	<b>Galileo SAR short-RLM report</b>					
<b>Type</b>	Output					
<b>Comment</b>	This message contains the contents of any Galileo Search and Rescue (SAR) Short Return Link Message detected by the receiver.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x02	0x59	16	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	type	-	-	Message type (0x01 for Short-RLM)	
2	U1	svId	-	-	Identifier of transmitting satellite (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0	-	-	Reserved	
4	U1[8]	beacon	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.	
12	U1	message	-	-	Message code (4 bits)	
13	U1[2]	params	-	-	Parameters (16 bits), with bytes ordered by earliest transmitted (most significant) first.	
15	U1	reserved1	-	-	Reserved	

### 3.17.7.2 Galileo SAR long-RLM report

<b>Message</b>	<b>UBX-RXM-RLM</b>					
	<b>Galileo SAR long-RLM report</b>					
<b>Type</b>	Output					
<b>Comment</b>	This message contains the contents of any Galileo Search and Rescue (SAR) Long Return Link Message detected by the receiver.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x02	0x59	28	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	type	-	-	Message type (0x02 for Long-RLM)	
2	U1	svId	-	-	Identifier of transmitting satellite (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0	-	-	Reserved	
4	U1[8]	beacon	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.	
12	U1	message	-	-	Message code (4 bits)	
13	U1[12]	params	-	-	Parameters (96 bits), with bytes ordered by earliest transmitted (most significant) first.	
25	U1[3]	reserved1	-	-	Reserved	

### 3.17.8 UBX-RXM-RTCM (0x02 0x32)

### 3.17.8.1 RTCM input status

<b>Message</b>		<b>UBX-RXM-RTCM RTCM input status</b>				
<i>Type</i>	Output					
<i>Comment</i>	This message shows info on a received RTCM input message. It is output upon successful parsing of an RTCM input message, irrespective of whether the RTCM message is supported or not by the receiver.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x02	0x32	8	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x02 for this version)	
1	X1	flags	-	-	RTCM input status flags	
	bit 0	U <sub>1</sub>	crcFailed	-	-	0 when RTCM message received and passed CRC check, 1 when failed, in which case refStation and msgType might be corrupted and misleading
	bits 2...1	U <sub>2</sub>	msgUsed	-	-	2 = RTCM message used successfully by the receiver, 1 = not used, 0 = do not know
2	U2	subType	-	-	Message subtype, only applicable to u-blox proprietary RTCM message 4072 (not available on all products)	
4	U2	refStation	-	-	Reference station ID: <ul style="list-style-type: none"> <li>For RTCM 2.3: Reference station ID of the received RTCM 2 input message. Valid range 0-1023.</li> <li>For RTCM 3.3: Reference station ID (DF003) of the received RTCM input message. Valid range 0-4095. Reported only for the standard RTCM messages that include the DF003 field and for the u-blox proprietary RTCM messages 4072.x. For all other messages, reports 0xFFFF.</li> </ul>	
6	U2	msgType	-	-	Message type	

### 3.17.9 UBX-RXM-SPARTN (0x02 0x33)

#### 3.17.9.1 SPARTN input status

<b>Message</b>		<b>UBX-RXM-SPARTN SPARTN input status</b>				
<i>Type</i>	Output					
<i>Comment</i>	This message shows info on a received SPARTN input message. It is output upon successful parsing of a SPARTN input message, irrespective of whether the SPARTN message is supported or not by the receiver.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x02	0x33	8	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x01 for this version)	
1	X1	flags	-	-	SPARTN input status flags	
	bits 2...1	U <sub>2</sub>	msgUsed	-	-	2 = SPARTN message used successfully by the receiver, 1 = not used, 0 = do not know
2	U2	subType	-	-	Message subtype	
4	U1[2]	reserved0	-	-	Reserved	

6	U2	msgType	-	-	Message type
---	----	---------	---	---	--------------

### 3.17.10 UBX-RXM-SPARTNKEY (0x02 0x36)

#### 3.17.10.1 Poll installed keys

<b>Message</b>	<b>UBX-RXM-SPARTNKEY</b>				
	<b>Poll installed keys</b>				
<b>Type</b>	Poll request				
<b>Comment</b>	Depending on the number of active keys, the receiver shall send a UBX-RXM-SPARTNKEY message describing the keys. If there are no active keys then a UBX-RXM-SPARTNKEY shall be sent, with field numKeys set to zero.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5 0x62	0x02	0x36	0	see below
<b>Checksum</b>	CK_A CK_B				
<b>Payload</b>	This message has no payload.				

#### 3.17.10.2 Transfer dynamic SPARTN keys

<b>Message</b>	<b>UBX-RXM-SPARTNKEY</b>				
	<b>Transfer dynamic SPARTN keys</b>				
<b>Type</b>	Input/output				
<b>Comment</b>	<p>This message is used to load keys to the receiver.</p> <p>The receiver has provision to store up to two (2) keys. By definition, the one currently used is named 'current' and the one that shall be used as soon as 'current' expires is named 'next'.</p> <p>Depending on how many active keys the receiver has at the time of receiving the message, one of the following shall occur:</p> <ul style="list-style-type: none"> <li>• If the receiver has no active keys, then the first key transferred shall become 'current'. If the message contains a second key, this shall become 'next'.</li> <li>• If the receiver has one (1) active key (current), the transferred key shall be stored as 'current'. If the message contains a second key, that key shall be stored as 'next'.</li> <li>• If the receiver has two (2) active keys (current and next), the transferred key(s) shall be stored as 'current' and 'next'.</li> </ul> <p>To query the receiver's keys state (including the keys themselves), send a UBX-RXM-SPARTNKEY poll request.</p>				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5 0x62	0x02	0x36	4 + numKeys·8 + [0..n]	see below
<b>Checksum</b>	CK_A CK_B				
<b>Payload description:</b>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	numKeys	-	-	Number of keys the message contains (can be 0, 1 or 2). In case of 0 the remaining fields will not be transmitted.
2	U1[2]	reserved0	-	-	Reserved
<b>Start of repeated group (numKeys times)</b>					
4 + n·8	U1	reserved1	-	-	Reserved
5 + n·8	U1	keyLengthBytes	-	-	Key length in bytes
6 + n·8	U2	validFromWno	-	week	GPS week number the key is valid from
8 + n·8	U4	validFromTow	-	sec	GPS time of week the key is valid from
<b>End of repeated group (numKeys times)</b>					
<b>Start of repeated group (N times)</b>					



4 + numKeys-8 + n	U1	key	-	-	Key(s) payload. This is a concatenation of all keys as raw bytes. The number of keys is defined in 'numKeys' field. Each key length is defined in its 'keyLengthBytes' field.
-------------------------	----	-----	---	---	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

End of repeated group (N times)

## 3.18 UBX-SEC (0x27)

The messages in the UBX-SEC class are used for security features of the receiver.

### 3.18.1 UBX-SEC-SIG (0x27 0x09)

#### 3.18.1.1 Signal security information

<b>Message</b>		<b>UBX-SEC-SIG</b>				
		<b>Signal security information</b>				
Type	Periodic/polled					
Comment	Information related to the security, i.e. availability and integrity, of the signals.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x27	0x09	12	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1[3]	reserved0	-	-	Reserved	
4	X1	jamFlags	-	-	Information related to jamming/interference	
	bit 0	U:1	jamDetEnabled	-	-	Flag indicates whether jamming/interference detection is enabled
	bits 2...1	U:2	jammingState	-	-	Jamming/interference state <ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: No jamming indicated</li> <li>2: Warning; jamming indicated but fix OK</li> <li>3: Critical; jamming indicated and no fix</li> </ul>
5	U1[3]	reserved1	-	-	Reserved	
8	X1	spfFlags	-	-	Information related to GNSS spoofing	
	bit 0	U:1	spfDetEnabled	-	-	Flag indicates whether spoofing detection is enabled
	bits 3...1	U:3	spoofingState	-	-	Spoofing state <ul style="list-style-type: none"> <li>0: Unknown</li> <li>1: No spoofing indicated</li> <li>2: Spoofing indicated</li> <li>3: Spoofing affirmed</li> </ul> Note that the spoofing state value only reflects the detector state for the current navigation epoch. I.e. a value of 1: <i>No spoofing indicated</i> does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.
9	U1[3]	reserved2	-	-	Reserved	

### 3.18.2 UBX-SEC-SIGLOG (0x27 0x10)

### 3.18.2.1 Signal security log

<b>Message</b>	<b>UBX-SEC-SIGLOG</b>					
	<b>Signal security log</b>					
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	<p>This message provides a log of past signal security related events, that is, events related to jamming and spoofing. Each event is a combination of a detection type and a event type, where the event type 'indication started' and 'indication stopped' and also the event type 'indication triggered' and 'indication timed-out' form a pair. A maximum of 16 events are logged; after the log is filled, recent events take precedence over past events in the log. Power cycles and restarts of the receiver reset the log, deleting its content.</p> <p>Note: It is advised not to restart the receiver while it's indicating spoofing.</p>					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x27	0x10	8 + numEvents*8	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	numEvents	-	-	Number of events	
2	U1[6]	reserved0	-	-	Reserved	
<i>Start of repeated group (numEvents times)</i>						
8 + n*8	U4	timeElapsed	-	s	Seconds elapsed since this event Special value 0xFFFFFFFF: more than 45 days	
12 + n*8	U1	detectionType	-	-	Type of the spoofing or jamming detection: <ul style="list-style-type: none"> <li>• 0 = simulated signal</li> <li>• 1 = abnormal signal</li> <li>• 2 = INS/GNSS mismatch</li> <li>• 3 = abrupt changes in GNSS signal</li> <li>• 4 = broadband jamming/interference (deprecated)</li> <li>• 5 = narrowband jamming/interference (deprecated)</li> </ul>	
13 + n*8	U1	eventType	-	-	Type of the event: <ul style="list-style-type: none"> <li>• 0 = indication started</li> <li>• 1 = indication stopped</li> <li>• 2 = indication triggered</li> <li>• 3 = indication timed-out</li> </ul> <p>Note: Single epoch events, caused by abrupt changes due to switching from the real to the spoofing signal or vice versa, are handled as time-out events. This means that the time-out event is reported after a certain cool off period which is not related to any observations in the signal. The other detection types will make use of 'start' and 'stop'. event types.</p>	
14 + n*8	U1[2]	reserved1	-	-	Reserved	
<i>End of repeated group (numEvents times)</i>						

### 3.18.3 UBX-SEC-UNIQID (0x27 0x03)

#### 3.18.3.1 Unique chip ID

<b>Message</b>	<b>UBX-SEC-UNIQID</b>	
	<b>Unique chip ID</b>	
<b>Type</b>	Output	
<b>Comment</b>	This message is used to retrieve a unique chip identifier (40 bits, 5 bytes).	

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x27	0x03	9	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U1[5]	uniqueId	-	-	Unique chip ID

## 3.19 UBX-TIM (0x0d)

The messages in the UBX-TIM class are used to output timing information from the receiver, such as time pulse and time mark measurements.

### 3.19.1 UBX-TIM-TM2 (0x0d 0x03)

#### 3.19.1.1 Time mark data

Message	UBX-TIM-TM2 Time mark data					
Type	Periodic/polled					
Comment	This message contains information for high precision time stamping / pulse counting. The delay figures and timebase given in <a href="#">CFG-TP Configuration Items</a> are also applied to the time results output in this message.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0d	0x03	28	see below	CK_A CK_B
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	ch	-	-	Channel (i.e. EXTINT) upon which the pulse was measured	
1	X1	flags	-	-	Bitmask	
bit 0	U:1	mode	-	-	<ul style="list-style-type: none"> <li>0=single</li> <li>1=running</li> </ul>	
bit 1	U:1	run	-	-	<ul style="list-style-type: none"> <li>0=armed</li> <li>1=stopped</li> </ul>	
bit 2	U:1	newFallingEdge	-	-	New falling edge detected	
bits 4...3	U:2	timeBase	-	-	<ul style="list-style-type: none"> <li>0=Time base is Receiver time</li> <li>1=Time base is GNSS time (the system according to the configuration in <a href="#">CFG-TP Configuration Items</a> for tpldx=0)</li> <li>2=Time base is UTC (the variant according to the configuration in <a href="#">CFG-NAVSPG-* configuration items</a>)</li> </ul>	
bit 5	U:1	utc	-	-	<ul style="list-style-type: none"> <li>0=UTC not available</li> <li>1=UTC available</li> </ul>	
bit 6	U:1	time	-	-	<ul style="list-style-type: none"> <li>0=Time is not valid</li> <li>1=Time is valid (Valid GNSS fix)</li> </ul>	
bit 7	U:1	newRisingEdge	-	-	New rising edge detected	
2	U2	count	-	-	Rising edge counter	
4	U2	wnR	-	-	Week number of last rising edge	
6	U2	wnF	-	-	Week number of last falling edge	

8	U4	towMsR	-	ms	Tow of rising edge
12	U4	towSubMsR	-	ns	Millisecond fraction of tow of rising edge in nanoseconds
16	U4	towMsF	-	ms	Tow of falling edge
20	U4	towSubMsF	-	ns	Millisecond fraction of tow of falling edge in nanoseconds
24	U4	accEst	-	ns	Accuracy estimate

### 3.19.2 UBX-TIM-TP (0x0d 0x01)

#### 3.19.2.1 Time pulse time data

<b>Message</b>	<b>UBX-TIM-TP</b>					
	<b>Time pulse time data</b>					
<i>Type</i>	Periodic/pollled					
<i>Comment</i>	This message contains information on the timing of the next pulse at the TIMEPULSE0 output. The recommended configuration when using this message is to set both the measurement rate ( <b>CFG-RATE</b> ) and the timepulse frequency ( <b>CFG-TP</b> ) to 1 Hz.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x0d	0x01	16	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U4	towMS	-	ms	Time pulse time of week according to time base	
4	U4	towSubMS	2 <sup>-32</sup>	ms	Submillisecond part of towMS	
8	I4	qErr	-	ps	Quantization error of time pulse	
12	U2	week	-	weeks	Time pulse week number according to time base	
14	X1	flags	-	-	Flags	
	bit 0	U:1	timeBase	-	-	<ul style="list-style-type: none"> <li>0 = Time base is GNSS</li> <li>1 = Time base is UTC</li> </ul>
	bit 1	U:1	utc	-	-	<ul style="list-style-type: none"> <li>0 = UTC not available</li> <li>1 = UTC available</li> </ul>
	bits 3...2	U:2	raim	-	-	(T)RAIM information <ul style="list-style-type: none"> <li>0 = Information not available</li> <li>1 = Not active</li> <li>2 = Active</li> </ul>
	bit 4	U:1	qErrInvalid	-	-	<ul style="list-style-type: none"> <li>0 = Quantization error valid</li> <li>1 = Quantization error invalid</li> </ul>
	bit 5	U:1	TpNotLocked	-	-	<ul style="list-style-type: none"> <li>0 = Next TP is locked to GNSS</li> <li>1 = Next TP is based on local time and not locked to GNSS - week/tow may be invalid</li> </ul>
15	X1	refInfo	-	-	Time reference information	
	bits 3...0	U:4	timeRefGnss	-	-	GNSS reference information. Only valid if time base is GNSS (timeBase=0). <ul style="list-style-type: none"> <li>0 = GPS</li> <li>1 = GLONASS</li> <li>2 = BeiDou</li> <li>3 = Galileo</li> <li>4 = NavIC</li> <li>15 = Unknown</li> </ul>

bits 7...4	U:4	utcStandard	-	-	UTC standard identifier. Only valid if time base is UTC (timeBase=1).
					<ul style="list-style-type: none"> <li>• 0 = Information not available</li> <li>• 1 = Communications Research Laboratory (CRL), Tokyo, Japan</li> <li>• 2 = National Institute of Standards and Technology (NIST)</li> <li>• 3 = U.S. Naval Observatory (USNO)</li> <li>• 4 = International Bureau of Weights and Measures (BIPM)</li> <li>• 5 = European laboratories</li> <li>• 6 = Former Soviet Union (SU)</li> <li>• 7 = National Time Service Center (NTSC), China</li> <li>• 8 = National Physics Laboratory India (NPLI)</li> <li>• 15 = Unknown</li> </ul>

### 3.19.3 UBX-TIM-VERFY (0x0d 0x06)

#### 3.19.3.1 Sourced time verification

<b>Message</b>	<b>UBX-TIM-VERFY</b>				
	<b>Sourced time verification</b>				
Type	Periodic/pollled				
Comment	This message contains verification information about previous time received via assistance data or from RTC.				
Message structure	Header	Class	ID	Length (Bytes)	Checksum
	0xb5 0x62	0x0d	0x06	20	CK_A CK_B
Payload description:					
Byte offset	Type	Name	Scale	Unit	Description
0	I4	itow	-	ms	integer millisecond tow received by source
4	I4	frac	-	ns	sub-millisecond part of tow
8	I4	deltaMs	-	ms	integer milliseconds of delta time (current time minus sourced time)
12	I4	deltaNs	-	ns	Sub-millisecond part of delta time
16	U2	wno	-	week	Week number
18	X1	flags	-	-	Flags
	bits 2...0	U:3	src	-	Aiding time source <ul style="list-style-type: none"> <li>• 0 = no time aiding done</li> <li>• 2 = source was RTC</li> <li>• 3 = source was assistance data</li> </ul>
19	U1	reserved0	-	-	Reserved

### 3.20 UBX-UPD (0x09)

The messages in the UBX-UPD class are used to download a firmware to the receiver and to update the firmware on the flash.

#### 3.20.1 UBX-UPD-SOS (0x09 0x14)

### 3.20.1.1 Poll backup restore status

<b>Message</b>	<b>UBX-UPD-SOS</b>					
	<b>Poll backup restore status</b>					
<b>Type</b>	Poll request					
<b>Comment</b>	Sending this (empty) message to the receiver results in the receiver returning a <i>System restored from backup</i> message as defined below.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x09	0x14	0	see below	CK_A CK_B
<b>Payload</b>	This message has no payload.					

### 3.20.1.2 Create backup in flash

<b>Message</b>	<b>UBX-UPD-SOS</b>					
	<b>Create backup in flash</b>					
<b>Type</b>	Command					
<b>Comment</b>	The host can send this message in order to save part of the battery-backed memory (BBR) in a file in the flash file system. The feature is designed in order to emulate the presence of the backup battery even if it is not present; the host can issue the save on shutdown command before switching off the device supply. It is recommended to issue a GNSS stop command using UBX-CFG-RST before in order to keep the BBR memory content consistent.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x09	0x14	4	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	cmd	-	-	Command (must be 0)	
1	U1[3]	reserved0	-	-	Reserved	

### 3.20.1.3 Clear backup in flash

<b>Message</b>	<b>UBX-UPD-SOS</b>					
	<b>Clear backup in flash</b>					
<b>Type</b>	Command					
<b>Comment</b>	The host can send this message in order to erase the backup file present in flash. It is recommended that the clear operation is issued after the host has received the notification that the memory has been restored after a reset. Alternatively the host can parse the startup string <i>Restored data saved on shutdown</i> or poll the UBX-UPD-SOS message for obtaining the status.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x09	0x14	4	see below	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	cmd	-	-	Command (must be 1)	
1	U1[3]	reserved0	-	-	Reserved	

### 3.20.1.4 Backup creation acknowledge

<b>Message</b>	<b>UBX-UPD-SOS</b>					
	<b>Backup creation acknowledge</b>					
<b>Type</b>	Output					
<b>Comment</b>	The message is sent from the device as confirmation of creation of a backup file in flash. The host can safely shut down the device after having received this message.					

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x09	0x14	8	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	cmd	-	-	Command (must be 2)
1	U1[3]	reserved0	-	-	Reserved
4	U1	response	-	-	<ul style="list-style-type: none"> <li>0 = Not acknowledged</li> <li>1 = Acknowledged</li> </ul>
5	U1[3]	reserved1	-	-	Reserved

### 3.20.1.5 System restored from backup

Message	UBX-UPD-SOS
	System restored from backup

Type	Output
------	--------

**Comment** The message is sent from the device to notify the host the BBR has been restored from a backup file in the flash file system. The host should clear the backup file after receiving this message. If the UBX-UPD-SOS message is polled, this message will be resent.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x09	0x14	8	see below	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	cmd	-	-	Command (must be 3)
1	U1[3]	reserved0	-	-	Reserved
4	U1	response	-	-	<ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Failed restoring from backup</li> <li>2 = Restored from backup</li> <li>3 = Not restored (no backup)</li> </ul>
5	U1[3]	reserved1	-	-	Reserved

## 4 RTCM protocol

### 4.1 RTCM introduction

The RTCM (Radio Technical Commission for Maritime Services) protocols are used to supply the GNSS receiver with real-time differential correction data. The RTCM protocol specifications are available from <http://www.rtcmm.org>.

The RTCM 3.x support is implemented according to *RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3*.

### 4.2 RTCM 3.x configuration

The configuration of RTCM 3.x input or RTCM 3.x output (if available) is further detailed in the integration manual for typical applications.

The RTCM 3.x protocol can be disabled/enabled on communication interfaces using the [Configuration interface](#), for example configuration item [CFG-UART1INPROT-RTCM3X](#).

### 4.3 RTCM messages overview

Message	Class/ID	Description (Type)
<b>RTCM-3X – RTCM 3.3 messages</b>		
<a href="#">RTCM-3X-TYPE1001</a>	0xf5 0x01	Message type 1001 <ul style="list-style-type: none"> <li>L1-only GPS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1002</a>	0xf5 0x02	Message type 1002 <ul style="list-style-type: none"> <li>Extended L1-only GPS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1003</a>	0xf5 0x03	Message type 1003 <ul style="list-style-type: none"> <li>L1/L2 GPS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1004</a>	0xf5 0x04	Message type 1004 <ul style="list-style-type: none"> <li>Extended L1/L2 GPS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1005</a>	0xf5 0x05	Message type 1005 <ul style="list-style-type: none"> <li>Stationary RTK reference station ARP (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1006</a>	0xf5 0x06	Message type 1006 <ul style="list-style-type: none"> <li>Stationary RTK reference station ARP with antenna height (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1007</a>	0xf5 0x07	Message type 1007 <ul style="list-style-type: none"> <li>Antenna descriptor (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1009</a>	0xf5 0x09	Message type 1009 <ul style="list-style-type: none"> <li>L1-only GLONASS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1010</a>	0xf5 0x0a	Message type 1010 <ul style="list-style-type: none"> <li>Extended L1-Only GLONASS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1011</a>	0xf5 0xa1	Message type 1011 <ul style="list-style-type: none"> <li>L1&amp;L2 GLONASS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1012</a>	0xf5 0xa2	Message type 1012 <ul style="list-style-type: none"> <li>Extended L1&amp;L2 GLONASS RTK observables (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1033</a>	0xf5 0x21	Message type 1033 <ul style="list-style-type: none"> <li>Receiver and antenna descriptors (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1074</a>	0xf5 0x4a	Message type 1074 <ul style="list-style-type: none"> <li>GPS MSM4 (Input)</li> </ul>
<a href="#">RTCM-3X-TYPE1075</a>	0xf5 0x4b	Message type 1075 <ul style="list-style-type: none"> <li>GPS MSM5 (Input)</li> </ul>



Message	Class/ID	Description (Type)
RTCM-3X-TYPE1077	0xf5 0x4d	Message type 1077 <ul style="list-style-type: none"> <li>GPS MSM7 (Input)</li> </ul>
RTCM-3X-TYPE1084	0xf5 0x54	Message type 1084 <ul style="list-style-type: none"> <li>GLONASS MSM4 (Input)</li> </ul>
RTCM-3X-TYPE1085	0xf5 0x55	Message type 1085 <ul style="list-style-type: none"> <li>GLONASS MSM5 (Input)</li> </ul>
RTCM-3X-TYPE1087	0xf5 0x57	Message type 1087 <ul style="list-style-type: none"> <li>GLONASS MSM7 (Input)</li> </ul>
RTCM-3X-TYPE1094	0xf5 0x5e	Message type 1094 <ul style="list-style-type: none"> <li>Galileo MSM4 (Input)</li> </ul>
RTCM-3X-TYPE1095	0xf5 0x5f	Message type 1095 <ul style="list-style-type: none"> <li>Galileo MSM5 (Input)</li> </ul>
RTCM-3X-TYPE1097	0xf5 0x61	Message type 1097 <ul style="list-style-type: none"> <li>Galileo MSM7 (Input)</li> </ul>
RTCM-3X-TYPE1124	0xf5 0x7c	Message type 1124 <ul style="list-style-type: none"> <li>BeiDou MSM4 (Input)</li> </ul>
RTCM-3X-TYPE1125	0xf5 0x7d	Message type 1125 <ul style="list-style-type: none"> <li>BeiDou MSM5 (Input)</li> </ul>
RTCM-3X-TYPE1127	0xf5 0x7f	Message type 1127 <ul style="list-style-type: none"> <li>BeiDou MSM7 (Input)</li> </ul>
RTCM-3X-TYPE1230	0xf5 0xe6	Message type 1230 <ul style="list-style-type: none"> <li>GLONASS L1 and L2 code-phase biases (Input)</li> </ul>

## 4.4 RTCM 3.3 messages

For details see [RTCM protocol](#) and the RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 available from <http://www.rtc.org>.

### 4.4.1 Message type 1001

#### 4.4.1.1 L1-only GPS RTK observables

Message	RTCM-3X-TYPE1001 L1-only GPS RTK observables				
Type	Input				
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x01, Message Type: 1001 (0x3e9), Message Size: 6 + nData				
Payload description:					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)

*Start of repeated group (nData times)*

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	-----------------------------------------------------------------------------------------------------------

*End of repeated group (nData times)*

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.2 Message type 1002

### 4.4.2.1 Extended L1-only GPS RTK observables

<b>Message</b>	<b>RTCM-3X-TYPE1002 Extended L1-only GPS RTK observables</b>				
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x02, Message Type: 1002 (0x3ea), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.3 Message type 1003

### 4.4.3.1 L1/L2 GPS RTK observables

<b>Message</b>	<b>RTCM-3X-TYPE1003 L1/L2 GPS RTK observables</b>				
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x03, Message Type: 1003 (0x3eb), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1

	bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>						
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>						
3 + nData		U1[3]	crc	-	-	Checksum

## 4.4.4 Message type 1004

### 4.4.4.1 Extended L1/L2 GPS RTK observables

<b>Message</b>	<b>RTCM-3X-TYPE1004</b> <b>Extended L1/L2 GPS RTK observables</b>					
Type	Input					
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.					
Information	Class/ID: 0xf5 0x04, Message Type: 1004 (0x3ec), Message Size: 6 + nData					
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	X1	rtcmByte0	-	-	RTCM frame byte 0	
	bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1	
	bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2	
	bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>						
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>						
3 + nData		U1[3]	crc	-	-	Checksum

## 4.4.5 Message type 1005

### 4.4.5.1 Stationary RTK reference station ARP

<b>Message</b>	<b>RTCM-3X-TYPE1005</b> <b>Stationary RTK reference station ARP</b>					
Type	Input					
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.					
Information	Class/ID: 0xf5 0x05, Message Type: 1005 (0x3ed), Message Size: 6 + nData					
<i>Payload description:</i>						

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.6 Message type 1006

### 4.4.6.1 Stationary RTK reference station ARP with antenna height

Message	RTCM-3X-TYPE1006 Stationary RTK reference station ARP with antenna height				
Type	Input				
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x06, Message Type: 1006 (0x3ee), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.7 Message type 1007

#### 4.4.7.1 Antenna descriptor

<b>Message</b>	<b>RTCM-3X-TYPE1007</b> <b>Antenna descriptor</b>				
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x07, Message Type: 1007 (0x3ef), Message Size: 6 + nData				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 7...0 U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 1...0 U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2 U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 7...0 U:8	nData	-	-	Payload length (8 LSB)
<b>Start of repeated group (nData times)</b>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<b>End of repeated group (nData times)</b>					
3 + nData	U1[3]	crc	-	-	Checksum

### 4.4.8 Message type 1009

#### 4.4.8.1 L1-only GLONASS RTK observables

<b>Message</b>	<b>RTCM-3X-TYPE1009</b> <b>L1-only GLONASS RTK observables</b>				
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x09, Message Type: 1009 (0x3f1), Message Size: 6 + nData				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 7...0 U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 1...0 U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2 U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 7...0 U:8	nData	-	-	Payload length (8 LSB)
<b>Start of repeated group (nData times)</b>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.

End of repeated group (*nData* times)

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.9 Message type 1010

### 4.4.9.1 Extended L1-Only GLONASS RTK observables

<b>Message</b>		<b>RTCM-3X-TYPE1010</b>				
		<b>Extended L1-Only GLONASS RTK observables</b>				
Type	Input					
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.					
Information	Class/ID: 0xf5 0x0a, Message Type: 1010 (0x3f2), Message Size: 6 + nData					
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	X1	rtcmByte0	-	-	RTCM frame byte 0	
	bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1	
	bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2	
	bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
Start of repeated group ( <i>nData</i> times)						
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.	
End of repeated group ( <i>nData</i> times)						
3 + nData	U1[3]	crc	-	-	Checksum	

## 4.4.10 Message type 1011

### 4.4.10.1 L1&L2 GLONASS RTK observables

<b>Message</b>		<b>RTCM-3X-TYPE1011</b>				
		<b>L1&amp;L2 GLONASS RTK observables</b>				
Type	Input					
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.					
Information	Class/ID: 0xf5 0xa1, Message Type: 1011 (0x3f3), Message Size: 6 + nData					
Payload description:						
Byte offset	Type	Name	Scale	Unit	Description	
0	X1	rtcmByte0	-	-	RTCM frame byte 0	
	bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1	
	bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2	

bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.11 Message type 1012

### 4.4.11.1 Extended L1&L2 GLONASS RTK observables

<b>Message</b>	<b>RTCM-3X-TYPE1012</b> <b>Extended L1&amp;L2 GLONASS RTK observables</b>				
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0xa2, Message Type: 1012 (0x3f4), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.12 Message type 1033

### 4.4.12.1 Receiver and antenna descriptors

<b>Message</b>	<b>RTCM-3X-TYPE1033</b> <b>Receiver and antenna descriptors</b>				
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x21, Message Type: 1033 (0x409), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)

1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.13 Message type 1074

### 4.4.13.1 GPS MSM4

<b>Message</b>	<b>RTCM-3X-TYPE1074 GPS MSM4</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full GPS Pseudoranges and PhaseRanges plus CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x4a, Message Type: 1074 (0x432), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.14 Message type 1075

### 4.4.14.1 GPS MSM5

<b>Message</b>	<b>RTCM-3X-TYPE1075 GPS MSM5</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full GPS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR				



See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.

**Information** Class/ID: 0xf5 0x4b, Message Type: 1075 (0x433), Message Size: 6 + nData

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<b>Start of repeated group (nData times)</b>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<b>End of repeated group (nData times)</b>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.15 Message type 1077

### 4.4.15.1 GPS MSM7

Message	RTCM-3X-TYPE1077 GPS MSM7				
Type	Input				
Comment	Full GPS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x4d, Message Type: 1077 (0x435), Message Size: 6 + nData				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<b>Start of repeated group (nData times)</b>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<b>End of repeated group (nData times)</b>					

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.16 Message type 1084

### 4.4.16.1 GLONASS MSM4

<b>Message</b>	<b>RTCM-3X-TYPE1084 GLONASS MSM4</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full GLONASS Pseudoranges and PhaseRanges plus CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x54, Message Type: 1084 (0x43c), Message Size: 6 + nData				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<b>Start of repeated group (nData times)</b>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<b>End of repeated group (nData times)</b>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.17 Message type 1085

### 4.4.17.1 GLONASS MSM5

<b>Message</b>	<b>RTCM-3X-TYPE1085 GLONASS MSM5</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full GLONASS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x55, Message Type: 1085 (0x43d), Message Size: 6 + nData				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero

2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.18 Message type 1087

### 4.4.18.1 GLONASS MSM7

<b>Message</b>	<b>RTCM-3X-TYPE 1087 GLONASS MSM7</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full GLONASS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x57, Message Type: 1087 (0x43f), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.19 Message type 1094

### 4.4.19.1 Galileo MSM4

<b>Message</b>	<b>RTCM-3X-TYPE 1094 Galileo MSM4</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full Galileo Pseudoranges and PhaseRanges plus CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x5e, Message Type: 1094 (0x446), Message Size: 6 + nData				
<i>Payload description:</i>					

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.20 Message type 1095

### 4.4.20.1 Galileo MSM5

<b>Message</b>	<b>RTCM-3X-TYPE1095 Galileo MSM5</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full Galileo Pseudoranges, PhaseRanges, PhaseRangeRate and CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x5f, Message Type: 1095 (0x447), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

### 4.4.21 Message type 1097

#### 4.4.21.1 Galileo MSM7

<b>Message</b>	<b>RTCM-3X-TYPE1097</b> <b>Galileo MSM7</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full Galileo Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x61, Message Type: 1097 (0x449), Message Size: 6 + nData				
<b>Payload description:</b>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<b>Start of repeated group (nData times)</b>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<b>End of repeated group (nData times)</b>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.22 Message type 1124

##### 4.4.22.1 BeiDou MSM4

<b>Message</b>	<b>RTCM-3X-TYPE1124</b> <b>BeiDou MSM4</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full BeiDou Pseudoranges and PhaseRanges plus CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x7c, Message Type: 1124 (0x464), Message Size: 6 + nData				
<b>Payload description:</b>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<b>Start of repeated group (nData times)</b>					

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	-----------------------------------------------------------------------------------------------------------

End of repeated group (*nData* times)

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.23 Message type 1125

### 4.4.23.1 BeiDou MSM5

<b>Message</b>	<b>RTCM-3X-TYPE1125 BeiDou MSM5</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full BeiDou Pseudoranges, PhaseRanges, PhaseRangeRate and CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x7d, Message Type: 1125 (0x465), Message Size: 6 + nData				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 7...0	U:8	preamble	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 1...0	U:2	nDataMSB	-	Payload length (2 MSB)
	bits 7...2	U:6	res1	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 7...0	U:8	nData	-	Payload length (8 LSB)
<b>Start of repeated group (<i>nData</i> times)</b>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<b>End of repeated group (<i>nData</i> times)</b>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.24 Message type 1127

### 4.4.24.1 BeiDou MSM7

<b>Message</b>	<b>RTCM-3X-TYPE1127 BeiDou MSM7</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full BeiDou pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x7f, Message Type: 1127 (0x467), Message Size: 6 + nData				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 7...0	U:8	preamble	-	Preamble (0xd3)

1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.25 Message type 1230

### 4.4.25.1 GLONASS L1 and L2 code-phase biases

<b>Message</b>	<b>RTCM-3X-TYPE1230 GLONASS L1 and L2 code-phase biases</b>				
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	<i>Class/ID: 0xf5 0xe6, Message Type: 1230 (0x4ce), Message Size: 6 + nData</i>				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 5 SPARTN protocol

### 5.1 SPARTN introduction

The SPARTN (Secure Position Augmentation for Real-Time Navigation) protocol are used to supply the GNSS receiver with real-time correction data. The SPARTN protocol specifications are available in [spartnformat.org](http://spartnformat.org).

The SPARTN 2.0 support is implemented according to *Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021*.

### 5.2 SPARTN configuration

The configuration of SPARTN input is further detailed in the integration manual for typical applications.

The SPARTN protocol can be disabled/enabled on communication interfaces using the [Configuration interface](#), for example configuration item [CFG-UART1INPROT-SPARTN](#).

### 5.3 SPARTN messages overview

Message	Class/ID	Description (Type)
<b>SPARTN-1X – SPARTN messages</b>		
<a href="#">SPARTN-1X-OCB_GPS</a>	0xf6 0x01	Message type 0, sub-type 0 <ul style="list-style-type: none"> <li>GPS orbit, clock, bias (OCB) (Input)</li> </ul>
<a href="#">SPARTN-1X-OCB_GLO</a>	0xf6 0x02	Message type 0, sub-type 1 <ul style="list-style-type: none"> <li>GLONASS orbit, clock, bias (OCB) (Input)</li> </ul>
<a href="#">SPARTN-1X-OCB_GAL</a>	0xf6 0x03	Message type 0, sub-type 2 <ul style="list-style-type: none"> <li>Galileo orbit, clock, bias (OCB) (Input)</li> </ul>
<a href="#">SPARTN-1X-OCB_BDS</a>	0xf6 0x04	Message type 0, sub-type 3 <ul style="list-style-type: none"> <li>BeiDou orbit, clock, bias (OCB) (Input)</li> </ul>
<a href="#">SPARTN-1X-OCB_QZSS</a>	0xf6 0x05	Message type 0, sub-type 4 <ul style="list-style-type: none"> <li>QZSS orbit, clock, bias (OCB) (Input)</li> </ul>
<a href="#">SPARTN-1X-HPAC_GPS</a>	0xf6 0x0a	Message type 1, sub-type 0 <ul style="list-style-type: none"> <li>GPS high-precision atmosphere correction (HPAC) (Input)</li> </ul>
<a href="#">SPARTN-1X-HPAC_GLO</a>	0xf6 0x0b	Message type 1, sub-type 1 <ul style="list-style-type: none"> <li>GLONASS high-precision atmosphere correction (HPAC) (Input)</li> </ul>
<a href="#">SPARTN-1X-HPAC_GAL</a>	0xf6 0x0c	Message type 1, sub-type 2 <ul style="list-style-type: none"> <li>Galileo high-precision atmosphere correction (HPAC) (Input)</li> </ul>
<a href="#">SPARTN-1X-HPAC_BDS</a>	0xf6 0x0d	Message type 1, sub-type 3 <ul style="list-style-type: none"> <li>BeiDou high-precision atmosphere correction (HPAC) (Input)</li> </ul>
<a href="#">SPARTN-1X-HPAC_QZSS</a>	0xf6 0x0e	Message type 1, sub-type 4 <ul style="list-style-type: none"> <li>QZSS high-precision atmosphere correction (HPAC) (Input)</li> </ul>
<a href="#">SPARTN-1X-GAD</a>	0xf6 0x13	Message type 2, sub-type 0 <ul style="list-style-type: none"> <li>Geographic area definition (GAD) (Input)</li> </ul>
<a href="#">SPARTN-1X-BPAC</a>	0xf6 0x1c	Message type 3, sub-type 0 <ul style="list-style-type: none"> <li>Basic-precision atmosphere correction (BPAC) (Input)</li> </ul>



## 5.4 SPARTN messages

For details see [SPARTN protocol](#) and the Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 available from <https://www.spartnformat.org>.

### 5.4.1 Message type 0, sub-type 0

#### 5.4.1.1 GPS orbit, clock, bias (OCB)

<b>Message</b>	<b>SPARTN-1X-OCB_GPS GPS orbit, clock, bias (OCB)</b>				
<i>Type</i>	Input				
<i>Comment</i>	This message carries the data for GPS satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<i>Information</i>	<i>Class/ID: 0xf6 0x01, Message Type: 0 (0x00), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType</i>				
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

### 5.4.2 Message type 0, sub-type 1

### 5.4.2.1 GLONASS orbit, clock, bias (OCB)

<b>Message</b>		<b>SPARTN-1X-OCB_GLO</b>				
		<b>GLONASS orbit, clock, bias (OCB)</b>				
<i>Type</i>	Input					
<i>Comment</i>	This message carries the data for GLONASS satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.					
<i>Information</i>	Class/ID: 0xf6 0x02, Message Type: 0 (0x00), Sub-type: 1 (0x1), Message Size: 5 + nData + crcType					
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	X1	spartnByte0	-	-	SPARTN frame byte 0	
	bits 7...0	U:8	preamble	-	Preamble (0x73, 's')	
1	X1	spartnByte1	-	-	SPARTN frame byte 1	
	bit 0	U:1	nDataMSB	-	Payload length (MSB)	
	bits 7...1	U:7	msgType	-	Message type	
2	X1	spartnByte2	-	-	SPARTN frame byte 2	
	bits 7...0	U:8	nData	-	Payload length (middle 8 bits)	
3	X1	spartnByte3	-	-	SPARTN frame byte 3	
	bits 3...0	U:4	frameCrc	-	Frame CRC	
	bits 5...4	U:2	crcType	-	Message CRC type	
	bit 6	U:1	eaf	-	Encryption and/or authentication flag	
	bit 7	U:1	nDataLSB	-	Payload length (LSB)	
<i>Start of repeated group (nData times)</i>						
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.	
<i>End of repeated group (nData times)</i>						
4 + nData	U1	crc0	-	-	Message CRC 1st byte	
<i>Start of repeated group (crcType times)</i>						
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes	
<i>End of repeated group (crcType times)</i>						

### 5.4.3 Message type 0, sub-type 2

#### 5.4.3.1 Galileo orbit, clock, bias (OCB)

<b>Message</b>		<b>SPARTN-1X-OCB_GAL</b>				
		<b>Galileo orbit, clock, bias (OCB)</b>				
<i>Type</i>	Input					
<i>Comment</i>	This message carries the data for Galileo satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.					
<i>Information</i>	Class/ID: 0xf6 0x03, Message Type: 0 (0x00), Sub-type: 2 (0x2), Message Size: 5 + nData + crcType					
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	

0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.4 Message type 0, sub-type 3

### 5.4.4.1 BeiDou orbit, clock, bias (OCB)

<b>Message</b>	<b>SPARTN-1X-OCB_BDS</b> <b>BeiDou orbit, clock, bias (OCB)</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message carries the data for BeiDou satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<b>Information</b>	<i>Class/ID: 0xf6 0x04, Message Type: 0 (0x00), Sub-type: 3 (0x3), Message Size: 5 + nData + crcType</i>				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC

bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.5 Message type 0, sub-type 4

### 5.4.5.1 QZSS orbit, clock, bias (OCB)

<b>Message</b>	<b>SPARTN-1X-OCB_QZSS QZSS orbit, clock, bias (OCB)</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message carries the data for QZSS satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf6 0x05, Message Type: 0 (0x00), Sub-type: 4 (0x4), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					

5 + nData + n U1      crcN                      -                      -                      Message CRC additional bytes

*End of repeated group (crcType times)*

## 5.4.6 Message type 1, sub-type 0

### 5.4.6.1 GPS high-precision atmosphere correction (HPAC)

<b>Message</b>	<b>SPARTN-1X-HPAC_GPS</b> <b>GPS high-precision atmosphere correction (HPAC)</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message contains high-precision atmosphere data for GPS, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message.  See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<b>Information</b>	<i>Class/ID: 0xf6 0x0a, Message Type: 1 (0x01), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType</i>				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.7 Message type 1, sub-type 1

### 5.4.7.1 GLONASS high-precision atmosphere correction (HPAC)

<b>Message</b>	<b>SPARTN-1X-HPAC_GLO</b> <b>GLONASS high-precision atmosphere correction (HPAC)</b>				
<b>Type</b>	Input				

**Comment** This message contains high-precision atmosphere data for GLONASS, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message.  
See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.

**Information** *Class/ID: 0xf6 0x0b, Message Type: 1 (0x01), Sub-type: 1 (0x1), Message Size: 5 + nData + crcType*

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<b>Start of repeated group (nData times)</b>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<b>End of repeated group (nData times)</b>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<b>Start of repeated group (crcType times)</b>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<b>End of repeated group (crcType times)</b>					

## 5.4.8 Message type 1, sub-type 2

### 5.4.8.1 Galileo high-precision atmosphere correction (HPAC)

<b>Message</b>	<b>SPARTN-1X-HPAC_GAL</b> <b>Galileo high-precision atmosphere correction (HPAC)</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message contains high-precision atmosphere data for Galileo, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<b>Information</b>	<i>Class/ID: 0xf6 0x0c, Message Type: 1 (0x01), Sub-type: 2 (0x2), Message Size: 5 + nData + crcType</i>				
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')

1	X1	spartnByte1	-	-	SPARTN frame byte 1
	bit 0	U:1	nDataMSB	-	Payload length (MSB)
	bits 7...1	U:7	msgType	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
	bits 7...0	U:8	nData	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
	bits 3...0	U:4	frameCrc	-	Frame CRC
	bits 5...4	U:2	crcType	-	Message CRC type
	bit 6	U:1	eaf	-	Encryption and/or authentication flag
	bit 7	U:1	nDataLSB	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.9 Message type 1, sub-type 3

### 5.4.9.1 BeiDou high-precision atmosphere correction (HPAC)

<b>Message</b>	<b>SPARTN-1X-HPAC_BDS</b> <b>BeiDou high-precision atmosphere correction (HPAC)</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message contains high-precision atmosphere data for BeiDou, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<b>Information</b>	<i>Class/ID: 0xf6 0x0d, Message Type: 1 (0x01), Sub-type: 3 (0x3), Message Size: 5 + nData + crcType</i>				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	spartnByte0	-	-	SPARTN frame byte 0
	bits 7...0	U:8	preamble	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
	bit 0	U:1	nDataMSB	-	Payload length (MSB)
	bits 7...1	U:7	msgType	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
	bits 7...0	U:8	nData	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
	bits 3...0	U:4	frameCrc	-	Frame CRC
	bits 5...4	U:2	crcType	-	Message CRC type
	bit 6	U:1	eaf	-	Encryption and/or authentication flag

bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.10 Message type 1, sub-type 4

### 5.4.10.1 QZSS high-precision atmosphere correction (HPAC)

<b>Message</b>	<b>SPARTN-1X-HPAC_QZSS</b> <b>QZSS high-precision atmosphere correction (HPAC)</b>				
<b>Type</b>	Input				
<b>Comment</b>	This message contains high-precision atmosphere data for QZSS, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message.  See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf6 0x0e, Message Type: 1 (0x01), Sub-type: 4 (0x4), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes



End of repeated group (*crcType* times)

## 5.4.11 Message type 2, sub-type 0

### 5.4.11.1 Geographic area definition (GAD)

<b>Message</b>		<b>SPARTN-1X-GAD</b>			
		<b>Geographic area definition (GAD)</b>			
<i>Type</i>	Input				
<i>Comment</i>	<p>This message is used to define geographic areas of data usage. The use of this message can serve different purposes, including atmospheric data availability and other types of geographical/geometrical aspects of usage of data.</p> <p>See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.</p>				
<i>Information</i>	Class/ID: 0xf6 0x13, Message Type: 2 (0x02), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.12 Message type 3, sub-type 0

### 5.4.12.1 Basic-precision atmosphere correction (BPAC)

<b>Message</b>		<b>SPARTN-1X-BPAC</b>			
		<b>Basic-precision atmosphere correction (BPAC)</b>			
<i>Type</i>	Input				

**Comment** This message contains basic-precision atmosphere correction information for ionosphere and troposphere delay estimations.

See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.

**Information** *Class/ID: 0xf6 0x1c, Message Type: 3 (0x03), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType*

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<b>Start of repeated group (nData times)</b>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<b>End of repeated group (nData times)</b>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<b>Start of repeated group (crcType times)</b>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<b>End of repeated group (crcType times)</b>					

## 6 Configuration interface


This chapter describes the receiver configuration interface.

### 6.1 Configuration database

The configuration database in the receiver's RAM holds the current configuration, which is used by the receiver at run-time. It is constructed on startup of the receiver from several sources of configuration. These sources are called *Configuration Layers*. The current configuration is called the *RAM Layer*. Any configuration in any layer is organized as *Configuration Items*, where each Configuration Item is referenced to by a unique *Configuration Key ID* and holds a single *Configuration Value*.

### 6.2 Configuration items

The following figure shows the structure of a *Configuration Item*, which consists of a (*Configuration*) *Key ID* and its (*Configuration*) *Value*:

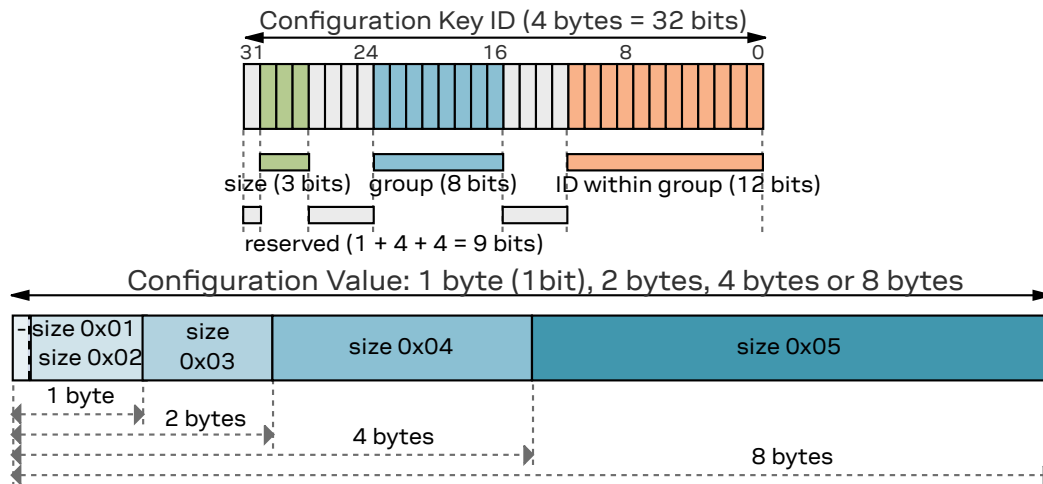

A Configuration Key ID is a 32-bit integer value, which is split into the following parts:

- Bit 31: Currently unused. Reserved for future use.
- Bits 30...28: Three bits that indicate the storage size of a Configuration Value (range 0x01-0x05, see below)
- Bits 27...24: Currently unused. Reserved for future use.
- Bits 23...16: Eight bits that define a unique group ID (range 0x01-0xfe)
- Bits 15...12: Currently unused. Reserved for future use.
- Bits 11...0: Twelve bits that define a unique item ID within a group (range 0x001-0xffe)

The entire 32-bit value is the unique Key ID, which uniquely identifies a particular item. The numeric representation of the Key ID uses the lower-case hexadecimal format, such as `0x20c400a1`. An easier, more readable text representation uses the form `CFG-GROUP-ITEM`. This is also referred to as the (*Configuration*) *Key Name*.

Supported storage size identifiers (bits 30...28 of the Key ID) are:

- 0x01: one bit (the actual storage used is one byte, but only the least significant bit is used)
- 0x02: one byte
- 0x03: two bytes
- 0x04: four bytes

- 0x05: eight bytes

Each Configuration Item is of a certain type, which defines the interpretation of the raw binary data (see also [UBX data types](#)):

- U1, U2, U4, U8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths
- I1, I2, I4, I8: signed little-endian, two's complement integers of 8-, 16-, 32- and 64-bit widths
- R4, R8: IEEE 754 single (32-bit) and double (64-bit) precision floats
- E1, E2, E4: unsigned little-endian enumeration of 8-, 16-, and 32-bit widths
- X1, X2, X4, X8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths for bitfields and other binary data, such as strings
- L: single-bit boolean (true = 1, false = 0), stored as U1


## 6.3 Configuration layers

Several *Configuration Layers* exist. They are separate sources of Configuration Items. Some of the layers are read-only and others are modifiable. Layers are organized in terms of priority. Values in a high-priority layer will replace values stored in low-priority layer. On startup of the receiver all configuration layers are read and the items within each layer are stacked up in order to create the *Current Configuration*, which is used by the receiver at run-time.

The following configuration layers are available (in order of priority, highest priority first):

- **RAM:** This layer contains items stored in volatile RAM. This is the Current Configuration. The value of any item can be set by the user at run-time (see [UBX protocol interface](#)) and it will become effective immediately.
- **BBR:** This layer contains items stored in the battery-backed RAM. The contents in this layer are preserved as long as a battery backup supply is provided during off periods. The value of any item can be set by the user at run-time (see [UBX protocol interface](#)) and it will become effective upon a restart of the receiver.
- **Flash:** This layer contains items stored permanently in the external flash memory. This layer is only available if there is a usable external flash memory. The value of any item can be set by the user at run-time (see [UBX protocol interface](#)) and it will become effective upon a restart of the receiver.
- **Default:** This layer contains all items known to the running receiver software and their hard-coded default values. Data in this layer is not writable.

The stacking of the configuration items from the different layers (sources) in order to construct the Current Configuration in the RAM Layer is depicted in the following figure. For each defined item, i.e. for each item in the Default Layer, the receiver software goes through the layers above and stacks all the found items on top. Some items may not be present in every layer. The result is the RAM Layer filled with all configuration items given Configuration Values coming from the highest priority layer the corresponding item was present. In the example figure below bold text indicates the source of the value in the Current Configuration (the RAM Layer). Empty boxes mean that the layer can hold the item but that it is not currently stored there. Boxes with text mean that an item is currently stored in the layer.

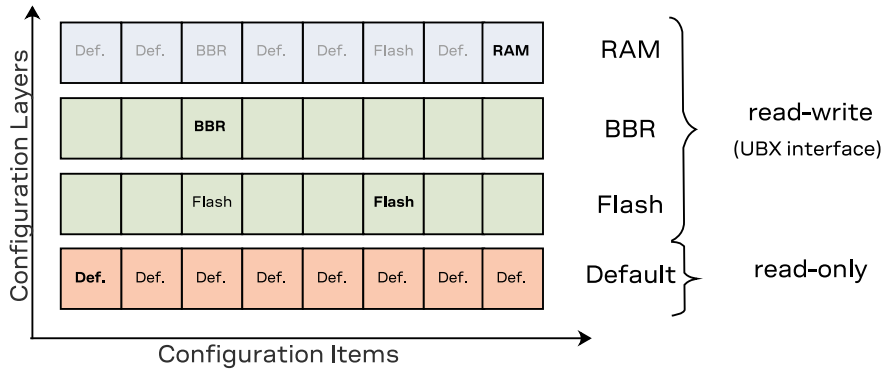

In the example figure above several items (e.g. the first item) are only set in the Default Layer and hence the default value ends up in Current Configuration in the RAM Layer. The third item is present in the Default, Flash and BBR Layers. The value from the BBR Layer has the highest priority and therefore it ends up in the RAM Layer. On the other hand, the default value of the sixth item is changed by the value in the Flash Layer. The value of the last item is changed in the RAM Layer only, i.e. upon startup the value in the RAM Layer was the value from the Default Layer, but the user has changed the value in the RAM Layer at run-time.

## 6.4 Configuration interface access

The following sections describe the existing interfaces to access the Configuration Database.

### 6.4.1 UBX protocol interface


The following [UBX protocol](#) messages are available to access the Configuration Database:

- [UBX-CFG-VALGET](#) to read configuration items from the database
- [UBX-CFG-VALSET](#) to set configuration items in the database
- [UBX-CFG-VALDEL](#) to delete configuration items from the database

## 6.5 Configuration data

Configuration data is the binary representation of a list of Key ID and Value pairs. It is formed by concatenating keys (U4 values) and values (variable type) without any padding. This format is used in the [UBX-CFG-VALSET](#) and [UBX-CFG-VALGET](#) messages.

The figure below shows an example. The four Items (Key ID - Value pairs) on the left use the four fundamental storage sizes: one byte (L, U1, I1, E1 and X1 types), 2 bytes (U2, I2, E2 and X2 types), four byte (U4, I4, E4, X4 and R4 types) and eight bytes (U8, I8, X8 and R8 types). When concatenated (right) the Key IDs and Values are not aligned and there is no padding.

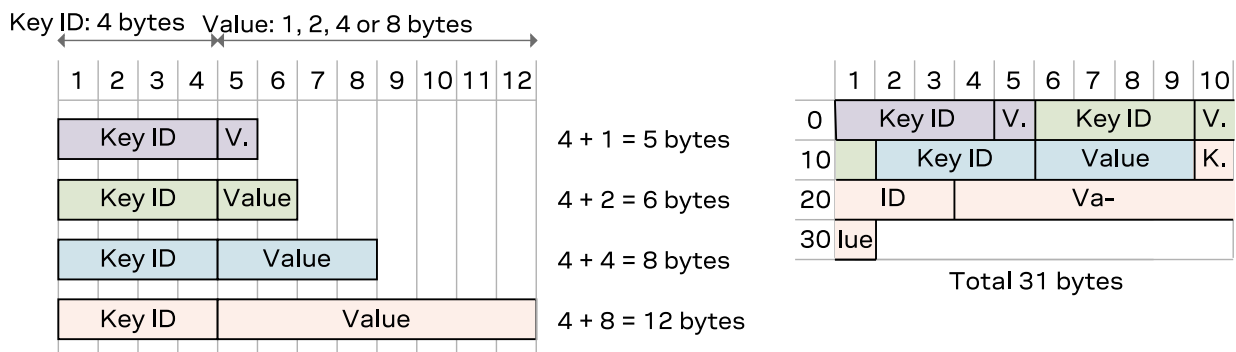


Note that this is an arbitrary example and any number of items of any value storage size can be concatenated the same way.

## 6.6 Configuration transactions

The configuration interface supports two mechanisms of configuration: the first is a transactionless mechanism where sent configuration changes are applied immediately to the configuration layer(s) requested. The second mechanism is a configuration transaction.

A transaction offers a way of queuing multiple configuration changes. It is particularly useful where different configuration keys depend on each other in such a way that sending one before the other can cause the configuration to be rejected. The queued configuration change requests are stored then checked collectively before being applied to the receiver.

A transaction can have the following states described in the figure below.

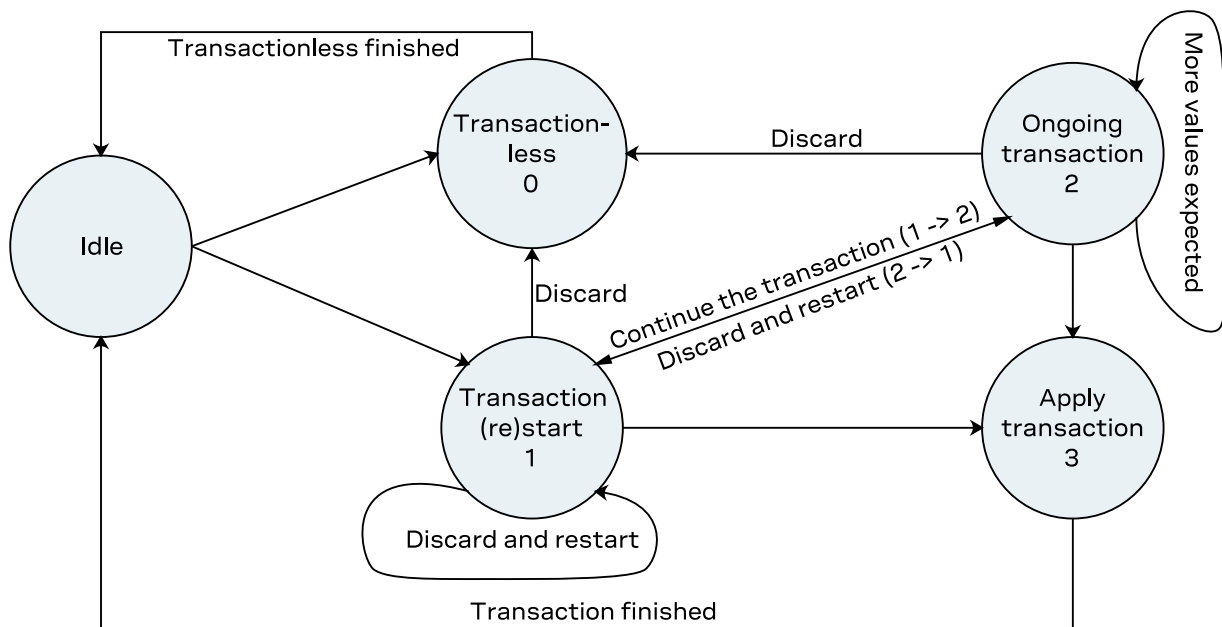

When starting a transaction, the user must specify the layer(s) the changes will be applied to. This list of configuration layer(s) must be observed throughout the transaction states. Modifying the configuration layer(s) mid-transaction will cause the transaction to be aborted and no queued changes will be applied.

In the start transaction state, the receiver will lock the configuration database so that changes from another entity or message cannot be applied. It is possible to send a configuration key-value pairs with the start transaction state. These will be queued waiting to be applied.

In the ongoing state, a configuration key and value must be sent. The receiver will abort the transaction and not apply any changes if this condition is violated. Key-value pairs sent in the ongoing state will be queued waiting to be applied.

In the apply state, the queued changes will be collectively checked and applied to the requested configuration layer(s). Note that any additional key-value pairs sent within the apply state will be ignored.

Note that a transaction can only come from a single source, a [UBX-CFG-VALSET](#) message or a [UBX-CFG-VALDEL](#) message. This means that in any given transaction it is not possible to mix a delete

and a save request. Starting a transaction from a different source will abort the current transaction and no queued changes would be applied.

Refer to [UBX-CFG-VALSET](#) and [UBX-CFG-VALDEL](#) messages for a detailed description of how to set up a configuration transaction, its limitations and conditions that would cause the transaction to be rejected.

## 6.7 Configuration reset behavior

The RAM layer is always rebuilt from the layers below when the chip's processor comes out from reset. When using [UBX-CFG-RST](#) the processor goes through a reset cycle with these reset types (`resetMode` field):

- 0x00 hardware reset (watchdog) immediately
- 0x01 controlled software reset
- 0x04 hardware reset (watchdog) after shutdown

See section Forcing a receiver reset in the integration manual.

## 6.8 Configuration overview

Group	Description
<a href="#">CFG-BDS</a>	BeiDou system configuration
<a href="#">CFG-GEOFENCE</a>	Geofencing configuration
<a href="#">CFG-HW</a>	Hardware configuration
<a href="#">CFG-I2C</a>	Configuration of the I2C interface
<a href="#">CFG-I2CINPROT</a>	Input protocol configuration of the I2C interface
<a href="#">CFG-I2COUTPROT</a>	Output protocol configuration of the I2C interface
<a href="#">CFG-INFMSG</a>	Information message configuration
<a href="#">CFG-MOT</a>	Motion detector configuration
<a href="#">CFG-MSGOUT</a>	Message output configuration
<a href="#">CFG-NAV2</a>	Secondary output configuration
<a href="#">CFG-NAVHPG</a>	High precision navigation configuration
<a href="#">CFG-NAVSPG</a>	Standard precision navigation configuration
<a href="#">CFG-NMEA</a>	NMEA protocol configuration
<a href="#">CFG-QZSS</a>	QZSS system configuration
<a href="#">CFG-RATE</a>	Navigation and measurement rate configuration
<a href="#">CFG-RINV</a>	Remote inventory
<a href="#">CFG-RTCM</a>	RTCM protocol configuration
<a href="#">CFG-SBAS</a>	SBAS configuration
<a href="#">CFG-SEC</a>	Security configuration
<a href="#">CFG-SFCORE</a>	Sensor fusion (SF) core configuration
<a href="#">CFG-SFIMU</a>	Sensor fusion (SF) inertial measurement unit (IMU) configuration
<a href="#">CFG-SFODO</a>	Sensor fusion (SF) odometer configuration
<a href="#">CFG-SIGNAL</a>	Satellite systems (GNSS) signal configuration
<a href="#">CFG-SPARTN</a>	SPARTN configuration
<a href="#">CFG-SPI</a>	Configuration of the SPI interface

Group	Description
<a href="#">CFG-SPIINPROT</a>	Input protocol configuration of the SPI interface
<a href="#">CFG-SPIOUTPROT</a>	Output protocol configuration of the SPI interface
<a href="#">CFG-TP</a>	Time pulse configuration
<a href="#">CFG-TXREADY</a>	TX ready configuration
<a href="#">CFG-UART1</a>	Configuration of the UART1 interface
<a href="#">CFG-UART1INPROT</a>	Input protocol configuration of the UART1 interface
<a href="#">CFG-UART1OUTPROT</a>	Output protocol configuration of the UART1 interface
<a href="#">CFG-UART2</a>	Configuration of the UART2 interface
<a href="#">CFG-UART2INPROT</a>	Input protocol configuration of the UART2 interface
<a href="#">CFG-UART2OUTPROT</a>	Output protocol configuration of the UART2 interface
<a href="#">CFG-USB</a>	Configuration of the USB interface
<a href="#">CFG-USBINPROT</a>	Input protocol configuration of the USB interface
<a href="#">CFG-USBOUTPROT</a>	Output protocol configuration of the USB interface

## 6.9 Configuration reference

### 6.9.1 CFG-BDS: BeiDou system configuration

Note that enabling and disabling of individual GNSS is done via the [CFG-SIGNAL](#) configuration group.

Configuration item	Key ID	Type	Scale	Unit	Description
<a href="#">CFG-BDS-USE_GEO_PRN</a>	0x10340014	L	-	-	Use BeiDou geostationary satellites (PRN 1-5 and 59-63)

Table 5: CFG-BDS configuration items

### 6.9.2 CFG-GEOFENCE: Geofencing configuration

Configuration for the geofencing feature. See section Geofencing in the integration manual for feature details.

If the receiver is sent a valid new configuration, it will respond with a [UBX-ACK-ACK](#) message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a [UBX-ACK-NAK](#) and continuing operation with the previous configuration.

Note that the acknowledge message does not indicate whether the PIO configuration has been successfully applied (pin assigned), it only indicates the successful configuration of the feature. The configured PIO must be previously unoccupied for successful assignment.

Configuration item	Key ID	Type	Scale	Unit	Description
<a href="#">CFG-GEOFENCE-CONFLVL</a>	0x20240011	E1	-	-	Required confidence level for state evaluation This value times the position's standard deviation (sigma) defines the confidence band. See <a href="#">Table 7</a> below for a list of possible constants for this item.
<a href="#">CFG-GEOFENCE-USE_PIO</a>	0x10240012	L	-	-	Use PIO combined fence state output
<a href="#">CFG-GEOFENCE-PINPOL</a>	0x20240013	E1	-	-	PIO pin polarity See <a href="#">Table 8</a> below for a list of possible constants for this item.
<a href="#">CFG-GEOFENCE-PIN</a>	0x20240014	U1	-	-	PIO pin number
<a href="#">CFG-GEOFENCE-USE_FENCE1</a>	0x10240020	L	-	-	Use first geofence



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-GEOFENCE-FENCE1_LAT	0x40240021	I4	1e-7	deg	Latitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_LON	0x40240022	I4	1e-7	deg	Longitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_RAD	0x40240023	U4	0.01	m	Radius of the first geofence circle
CFG-GEOFENCE-USE_FENCE2	0x10240030	L	-	-	Use second geofence
CFG-GEOFENCE-FENCE2_LAT	0x40240031	I4	1e-7	deg	Latitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_LON	0x40240032	I4	1e-7	deg	Longitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_RAD	0x40240033	U4	0.01	m	Radius of the second geofence circle
CFG-GEOFENCE-USE_FENCE3	0x10240040	L	-	-	Use third geofence
CFG-GEOFENCE-FENCE3_LAT	0x40240041	I4	1e-7	deg	Latitude of the third geofence circle center
CFG-GEOFENCE-FENCE3_LON	0x40240042	I4	1e-7	deg	Longitude of the third geofence circle center
CFG-GEOFENCE-FENCE3_RAD	0x40240043	U4	0.01	m	Radius of the third geofence circle
CFG-GEOFENCE-USE_FENCE4	0x10240050	L	-	-	Use fourth geofence
CFG-GEOFENCE-FENCE4_LAT	0x40240051	I4	1e-7	deg	Latitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_LON	0x40240052	I4	1e-7	deg	Longitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_RAD	0x40240053	U4	0.01	m	Radius of the fourth geofence circle

**Table 6: CFG-GEOFENCE configuration items**

Constant	Value	Description
L000	0	No confidence
L680	1	68%
L950	2	95%
L997	3	99.7%
L9999	4	99.99%
L999999	5	99.9999%

**Table 7: Constants for CFG-GEOFENCE-CONFLVL**

Constant	Value	Description
LOW_IN	0	PIO low means inside geofence
LOW_OUT	1	PIO low means outside geofence

**Table 8: Constants for CFG-GEOFENCE-PINPOL**

### 6.9.3 CFG-HW: Hardware configuration

Hardware configuration settings.

Note that not all settings are available for all products. See the applicable data sheet for supported features.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	Active antenna voltage control flag Enable active antenna voltage control flag. Used by EXT and MADDC engines.
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	Short antenna detection flag Enable short antenna detection flag. Used by EXT and MADDC engines.
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	Short antenna detection polarity Set to true if polarity of the antenna short detection is active low. Used by EXT engine.
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	Open antenna detection flag

Configuration item	Key ID	Type	Scale	Unit	Description
Enable open antenna detection flag. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	Open antenna detection polarity
Set to true if polarity of the antenna open detection is active low. Used by EXT engine.					
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	Power down antenna flag
Enable power down antenna logic in the event of antenna short circuit. CFG-HW-ANT_CFG_SHORTDET must be enabled to use this feature. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	Power down antenna logic polarity
Set to true if polarity of the antenna power down logic is active high. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	Automatic recovery from short state flag
Enable automatic recovery from short state. Used by EXT and MADC engines.					
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	ANT1 PIO number
Antenna Switch (ANT1) PIO number. Used by EXT and MADC engines.					
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	ANT0 PIO number
Antenna Short (ANT0) PIO number. Used by EXT engine.					
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	ANT2 PIO number
Antenna Switch (ANT2) PIO number. Used by EXT engine.					
CFG-HW-ANT_ON_SHORT_US	0x30a3003c	U2	-	-	ANT on->short timeout[us]
Timeout in micro seconds from Antenna switch on to short being deactivated before antenna is switched off.					
CFG-HW-SENS_WOM_MODE	0x20a30063	E1	-	-	Select Wake-On-Motion mode
See <a href="#">Table 10</a> below for a list of possible constants for this item.					
CFG-HW-SENS_WOM_THLD	0x20a30064	U1	-	-	Wake-On-Motion threshold
Required acceleration on single accelerometer axis for triggering wake up, from 0 to 1 g, where g = 9.81 m/s <sup>2</sup> . Value range is [1-255], with 1 step = 1/255 * g. For example, for 0.5 g threshold the configured value should be 128.					
CFG-HW-ANT_SUP_ENGINE	0x20a30054	E1	-	-	Antenna supervisor engine selection
Select the engine used to evaluate antenna state.					
The EXT engine uses an external comparator for current measurement. The MADC engine uses built-in measurement ADC and requires only a shunt resistor for current measurement. The MADC engine is available in u-blox generation 9 receivers.					
See <a href="#">Table 11</a> below for a list of possible constants for this item.					
CFG-HW-ANT_SUP_SHORT_THR	0x20a30055	U1	-	mV	Antenna supervisor MADC engine short detection threshold
Threshold above which antenna short is detected. Used by MADC engine.					
CFG-HW-ANT_SUP_OPEN_THR	0x20a30056	U1	-	mV	Antenna supervisor MADC engine open detection threshold
Threshold below which antenna open/disconnected is detected. Used by MADC engine.					

**Table 9: CFG-HW configuration items**

Constant	Value	Description
DISABLED	0	Disable Wake-On-Motion feature.
HOST	1	Enable Wake-On-Motion feature on the host CPU.
RECEIVER	2	Enable Wake-On-Motion feature on the receiver.
BOTH	3	Enable Wake-On-Motion feature on both host CPU and receiver.

**Table 10: Constants for CFG-HW-SENS\_WOM\_MODE**

Constant	Value	Description
EXT	0	Use the EXT engine.

Constant	Value	Description
<i>MADC</i>	1	Use the MADC engine.

**Table 11: Constants for CFG-HW-ANT\_SUP\_ENGINE**

### 6.9.4 CFG-I2C: Configuration of the I2C interface

Settings needed to configure the I2C communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-I2C-ADDRESS</i>	0x20510001	U1	-	-	I2C address of the receiver (7 bits)
<i>CFG-I2C-EXTENDEDTIMEOUT</i>	0x10510002	L	-	-	Flag to disable timeouting the interface after 1.5 s
<i>CFG-I2C-ENABLED</i>	0x10510003	L	-	-	Flag to indicate if the I2C interface should be enabled

**Table 12: CFG-I2C configuration items**

### 6.9.5 CFG-I2CINPROT: Input protocol configuration of the I2C interface

Input protocol enable flags of the I2C interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-I2CINPROT-UBX</i>	0x10710001	L	-	-	Flag to indicate if UBX should be an input protocol on I2C
<i>CFG-I2CINPROT-NMEA</i>	0x10710002	L	-	-	Flag to indicate if NMEA should be an input protocol on I2C
<i>CFG-I2CINPROT-RTCM3X</i>	0x10710004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on I2C
<i>CFG-I2CINPROT-SPARTN</i>	0x10710005	L	-	-	Flag to indicate if SPARTN should be an input protocol on I2C

**Table 13: CFG-I2CINPROT configuration items**

### 6.9.6 CFG-I2COUTPROT: Output protocol configuration of the I2C interface

Output protocol enable flags of the I2C interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-I2COUTPROT-UBX</i>	0x10720001	L	-	-	Flag to indicate if UBX should be an output protocol on I2C
<i>CFG-I2COUTPROT-NMEA</i>	0x10720002	L	-	-	Flag to indicate if NMEA should be an output protocol on I2C

**Table 14: CFG-I2COUTPROT configuration items**

### 6.9.7 CFG-INFMSG: Information message configuration

Information message configuration for the NMEA and UBX protocols.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-INFMSG-UBX_I2C</i>	0x20920001	X1	-	-	Information message enable flags for the UBX protocol on the I2C interface

See [Table 16](#) below for a list of possible constants for this item.

<i>CFG-INFMSG-UBX_UART1</i>	0x20920002	X1	-	-	Information message enable flags for the UBX protocol on the UART1 interface
-----------------------------	------------	----	---	---	------------------------------------------------------------------------------

See [Table 16](#) below for a list of possible constants for this item.

<i>CFG-INFMSG-UBX_UART2</i>	0x20920003	X1	-	-	Information message enable flags for the UBX protocol on the UART2 interface
-----------------------------	------------	----	---	---	------------------------------------------------------------------------------

See [Table 16](#) below for a list of possible constants for this item.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-INFMSG-UBX_USB</i>	0x20920004	X1	-	-	Information message enable flags for the UBX protocol on the USB interface
See <a href="#">Table 16</a> below for a list of possible constants for this item.					
<i>CFG-INFMSG-UBX_SPI</i>	0x20920005	X1	-	-	Information message enable flags for the UBX protocol on the SPI interface
See <a href="#">Table 16</a> below for a list of possible constants for this item.					
<i>CFG-INFMSG-NMEA_I2C</i>	0x20920006	X1	-	-	Information message enable flags for the NMEA protocol on the I2C interface
See <a href="#">Table 16</a> below for a list of possible constants for this item.					
<i>CFG-INFMSG-NMEA_UART1</i>	0x20920007	X1	-	-	Information message enable flags for the NMEA protocol on the UART1 interface
See <a href="#">Table 16</a> below for a list of possible constants for this item.					
<i>CFG-INFMSG-NMEA_UART2</i>	0x20920008	X1	-	-	Information message enable flags for the NMEA protocol on the UART2 interface
See <a href="#">Table 16</a> below for a list of possible constants for this item.					
<i>CFG-INFMSG-NMEA_USB</i>	0x20920009	X1	-	-	Information message enable flags for the NMEA protocol on the USB interface
See <a href="#">Table 16</a> below for a list of possible constants for this item.					
<i>CFG-INFMSG-NMEA_SPI</i>	0x2092000a	X1	-	-	Information message enable flags for the NMEA protocol on the SPI interface
See <a href="#">Table 16</a> below for a list of possible constants for this item.					

**Table 15: CFG-INFMSG configuration items**

Constant	Value	Description
<i>ERROR</i>	0x01	Enable ERROR information messages
<i>WARNING</i>	0x02	Enable WARNING information messages
<i>NOTICE</i>	0x04	Enable NOTICE information messages
<i>TEST</i>	0x08	Enable TEST information messages
<i>DEBUG</i>	0x10	Enable DEBUG information messages

**Table 16: Constants for CFG-INFMSG-UBX\_I2C, CFG-INFMSG-UBX\_UART1, CFG-INFMSG-UBX\_UART2, CFG-INFMSG-UBX\_USB, CFG-INFMSG-UBX\_SPI, CFG-INFMSG-NMEA\_I2C, CFG-INFMSG-NMEA\_UART1, CFG-INFMSG-NMEA\_UART2, CFG-INFMSG-NMEA\_USB, CFG-INFMSG-NMEA\_SPI**

## 6.9.8 CFG-MOT: Motion detector configuration

The items in this group specify the parameters used for the internal receiver motion detector. The platform motion is assessed by combining the detected motion of different detectors looking at specific data types (i.e. GNSS, gyroscopes, accelerometers, wheel ticks). The decision thresholds of the internal detectors can be specified using the configuration items in this group.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MOT-GNSSSPEED_THRS</i>	0x20250038	U1	0.01	m/s	GNSS speed threshold below which platform is considered as stationary (a.k.a. static hold threshold)
Set this parameter to 0 for firmware default value or behavior.					
<i>CFG-MOT-GNSSDIST_THRS</i>	0x3025003b	U2	-	-	Distance above which GNSS-based stationary motion is exit (a.k.a. static hold distance threshold)

Configuration item	Key ID	Type	Scale	Unit	Description
Set this parameter to 0 for firmware default value or behavior.					

**Table 17: CFG-MOT configuration items**

### 6.9.9 CFG-MSGOUT: Message output configuration

For each message and port a separate output rate (per second, per epoch) can be configured.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-NMEA_ID_DTM_I2C</i>	0x209100a6	U1	-	-	Output rate of the NMEA-GX-DTM message on port I2C
<i>CFG-MSGOUT-NMEA_ID_DTM_SPI</i>	0x209100aa	U1	-	-	Output rate of the NMEA-GX-DTM message on port SPI
<i>CFG-MSGOUT-NMEA_ID_DTM_UART1</i>	0x209100a7	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART1
<i>CFG-MSGOUT-NMEA_ID_DTM_UART2</i>	0x209100a8	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART2
<i>CFG-MSGOUT-NMEA_ID_DTM_USB</i>	0x209100a9	U1	-	-	Output rate of the NMEA-GX-DTM message on port USB
<i>CFG-MSGOUT-NMEA_ID_GBS_I2C</i>	0x209100dd	U1	-	-	Output rate of the NMEA-GX-GBS message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GBS_SPI</i>	0x209100e1	U1	-	-	Output rate of the NMEA-GX-GBS message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GBS_UART1</i>	0x209100de	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GBS_UART2</i>	0x209100df	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GBS_USB</i>	0x209100e0	U1	-	-	Output rate of the NMEA-GX-GBS message on port USB
<i>CFG-MSGOUT-NMEA_ID_GGA_I2C</i>	0x209100ba	U1	-	-	Output rate of the NMEA-GX-GGA message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GGA_SPI</i>	0x209100be	U1	-	-	Output rate of the NMEA-GX-GGA message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GGA_UART1</i>	0x209100bb	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GGA_UART2</i>	0x209100bc	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GGA_USB</i>	0x209100bd	U1	-	-	Output rate of the NMEA-GX-GGA message on port USB
<i>CFG-MSGOUT-NMEA_ID_GLL_I2C</i>	0x209100c9	U1	-	-	Output rate of the NMEA-GX-GLL message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GLL_SPI</i>	0x209100cd	U1	-	-	Output rate of the NMEA-GX-GLL message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GLL_UART1</i>	0x209100ca	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GLL_UART2</i>	0x209100cb	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GLL_USB</i>	0x209100cc	U1	-	-	Output rate of the NMEA-GX-GLL message on port USB
<i>CFG-MSGOUT-NMEA_ID_GNS_I2C</i>	0x209100b5	U1	-	-	Output rate of the NMEA-GX-GNS message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GNS_SPI</i>	0x209100b9	U1	-	-	Output rate of the NMEA-GX-GNS message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-NMEA_ID_GNS_UART1</i>	0x209100b6	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GNS_UART2</i>	0x209100b7	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GNS_USB</i>	0x209100b8	U1	-	-	Output rate of the NMEA-GX-GNS message on port USB
<i>CFG-MSGOUT-NMEA_ID_GRS_I2C</i>	0x209100ce	U1	-	-	Output rate of the NMEA-GX-GRS message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GRS_SPI</i>	0x209100d2	U1	-	-	Output rate of the NMEA-GX-GRS message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GRS_UART1</i>	0x209100cf	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GRS_UART2</i>	0x209100d0	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GRS_USB</i>	0x209100d1	U1	-	-	Output rate of the NMEA-GX-GRS message on port USB
<i>CFG-MSGOUT-NMEA_ID_GSA_I2C</i>	0x209100bf	U1	-	-	Output rate of the NMEA-GX-GSA message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GSA_SPI</i>	0x209100c3	U1	-	-	Output rate of the NMEA-GX-GSA message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GSA_UART1</i>	0x209100c0	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GSA_UART2</i>	0x209100c1	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GSA_USB</i>	0x209100c2	U1	-	-	Output rate of the NMEA-GX-GSA message on port USB
<i>CFG-MSGOUT-NMEA_ID_GST_I2C</i>	0x209100d3	U1	-	-	Output rate of the NMEA-GX-GST message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GST_SPI</i>	0x209100d7	U1	-	-	Output rate of the NMEA-GX-GST message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GST_UART1</i>	0x209100d4	U1	-	-	Output rate of the NMEA-GX-GST message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GST_UART2</i>	0x209100d5	U1	-	-	Output rate of the NMEA-GX-GST message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GST_USB</i>	0x209100d6	U1	-	-	Output rate of the NMEA-GX-GST message on port USB
<i>CFG-MSGOUT-NMEA_ID_GSV_I2C</i>	0x209100c4	U1	-	-	Output rate of the NMEA-GX-GSV message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GSV_SPI</i>	0x209100c8	U1	-	-	Output rate of the NMEA-GX-GSV message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GSV_UART1</i>	0x209100c5	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GSV_UART2</i>	0x209100c6	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GSV_USB</i>	0x209100c7	U1	-	-	Output rate of the NMEA-GX-GSV message on port USB
<i>CFG-MSGOUT-NMEA_ID_RLM_I2C</i>	0x20910400	U1	-	-	Output rate of the NMEA-GX-RLM message on port I2C
<i>CFG-MSGOUT-NMEA_ID_RLM_SPI</i>	0x20910404	U1	-	-	Output rate of the NMEA-GX-RLM message on port SPI
<i>CFG-MSGOUT-NMEA_ID_RLM_UART1</i>	0x20910401	U1	-	-	Output rate of the NMEA-GX-RLM message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-NMEA_ID_RLM_UART2</i>	0x20910402	U1	-	-	Output rate of the NMEA-GX-RLM message on port UART2
<i>CFG-MSGOUT-NMEA_ID_RLM_USB</i>	0x20910403	U1	-	-	Output rate of the NMEA-GX-RLM message on port USB
<i>CFG-MSGOUT-NMEA_ID_RMC_I2C</i>	0x209100ab	U1	-	-	Output rate of the NMEA-GX-RMC message on port I2C
<i>CFG-MSGOUT-NMEA_ID_RMC_SPI</i>	0x209100af	U1	-	-	Output rate of the NMEA-GX-RMC message on port SPI
<i>CFG-MSGOUT-NMEA_ID_RMC_UART1</i>	0x209100ac	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART1
<i>CFG-MSGOUT-NMEA_ID_RMC_UART2</i>	0x209100ad	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART2
<i>CFG-MSGOUT-NMEA_ID_RMC_USB</i>	0x209100ae	U1	-	-	Output rate of the NMEA-GX-RMC message on port USB
<i>CFG-MSGOUT-NMEA_ID_THS_I2C</i>	0x209100e2	U1	-	-	Output rate of the NMEA-GX-THS message on port I2C
<i>CFG-MSGOUT-NMEA_ID_THS_SPI</i>	0x209100e6	U1	-	-	Output rate of the NMEA-GX-THS message on port SPI
<i>CFG-MSGOUT-NMEA_ID_THS_UART1</i>	0x209100e3	U1	-	-	Output rate of the NMEA-GX-THS message on port UART1
<i>CFG-MSGOUT-NMEA_ID_THS_UART2</i>	0x209100e4	U1	-	-	Output rate of the NMEA-GX-THS message on port UART2
<i>CFG-MSGOUT-NMEA_ID_THS_USB</i>	0x209100e5	U1	-	-	Output rate of the NMEA-GX-THS message on port USB
<i>CFG-MSGOUT-NMEA_ID_VTG_I2C</i>	0x209100b0	U1	-	-	Output rate of the NMEA-GX-VTG message on port I2C
<i>CFG-MSGOUT-NMEA_ID_VTG_SPI</i>	0x209100b4	U1	-	-	Output rate of the NMEA-GX-VTG message on port SPI
<i>CFG-MSGOUT-NMEA_ID_VTG_UART1</i>	0x209100b1	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART1
<i>CFG-MSGOUT-NMEA_ID_VTG_UART2</i>	0x209100b2	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART2
<i>CFG-MSGOUT-NMEA_ID_VTG_USB</i>	0x209100b3	U1	-	-	Output rate of the NMEA-GX-VTG message on port USB
<i>CFG-MSGOUT-NMEA_ID_ZDA_I2C</i>	0x209100d8	U1	-	-	Output rate of the NMEA-GX-ZDA message on port I2C
<i>CFG-MSGOUT-NMEA_ID_ZDA_SPI</i>	0x209100dc	U1	-	-	Output rate of the NMEA-GX-ZDA message on port SPI
<i>CFG-MSGOUT-NMEA_ID_ZDA_UART1</i>	0x209100d9	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART1
<i>CFG-MSGOUT-NMEA_ID_ZDA_UART2</i>	0x209100da	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART2
<i>CFG-MSGOUT-NMEA_ID_ZDA_USB</i>	0x209100db	U1	-	-	Output rate of the NMEA-GX-ZDA message on port USB
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_I2C</i>	0x20910661	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port I2C
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_SPI</i>	0x20910665	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port SPI
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART1</i>	0x20910662	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port UART1
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART2</i>	0x20910663	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port UART2



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGGOUT-NMEA_NAV2_ID_GGA_USB	0x20910664	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port USB
CFG-MSGGOUT-NMEA_NAV2_ID_GLL_I2C	0x20910670	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port I2C
CFG-MSGGOUT-NMEA_NAV2_ID_GLL_SPI	0x20910674	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port SPI
CFG-MSGGOUT-NMEA_NAV2_ID_GLL_UART1	0x20910671	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port UART1
CFG-MSGGOUT-NMEA_NAV2_ID_GLL_UART2	0x20910672	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port UART2
CFG-MSGGOUT-NMEA_NAV2_ID_GLL_USB	0x20910673	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port USB
CFG-MSGGOUT-NMEA_NAV2_ID_GNS_I2C	0x2091065c	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port I2C
CFG-MSGGOUT-NMEA_NAV2_ID_GNS_SPI	0x20910660	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port SPI
CFG-MSGGOUT-NMEA_NAV2_ID_GNS_UART1	0x2091065d	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port UART1
CFG-MSGGOUT-NMEA_NAV2_ID_GNS_UART2	0x2091065e	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port UART2
CFG-MSGGOUT-NMEA_NAV2_ID_GNS_USB	0x2091065f	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port USB
CFG-MSGGOUT-NMEA_NAV2_ID_GSA_I2C	0x20910666	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port I2C
CFG-MSGGOUT-NMEA_NAV2_ID_GSA_SPI	0x2091066a	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port SPI
CFG-MSGGOUT-NMEA_NAV2_ID_GSA_UART1	0x20910667	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port UART1
CFG-MSGGOUT-NMEA_NAV2_ID_GSA_UART2	0x20910668	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port UART2
CFG-MSGGOUT-NMEA_NAV2_ID_GSA_USB	0x20910669	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port USB
CFG-MSGGOUT-NMEA_NAV2_ID_RMC_I2C	0x20910652	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port I2C
CFG-MSGGOUT-NMEA_NAV2_ID_RMC_SPI	0x20910656	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port SPI
CFG-MSGGOUT-NMEA_NAV2_ID_RMC_UART1	0x20910653	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port UART1
CFG-MSGGOUT-NMEA_NAV2_ID_RMC_UART2	0x20910654	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port UART2
CFG-MSGGOUT-NMEA_NAV2_ID_RMC_USB	0x20910655	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port USB
CFG-MSGGOUT-NMEA_NAV2_ID_VTG_I2C	0x20910657	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port I2C
CFG-MSGGOUT-NMEA_NAV2_ID_VTG_SPI	0x2091065b	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port SPI
CFG-MSGGOUT-NMEA_NAV2_ID_VTG_UART1	0x20910658	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port UART1
CFG-MSGGOUT-NMEA_NAV2_ID_VTG_UART2	0x20910659	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port UART2
CFG-MSGGOUT-NMEA_NAV2_ID_VTG_USB	0x2091065a	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port USB



Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGGOUT-NMEA_NAV2_ID_ZDA_I2C</i>	0x2091067f	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port I2C
<i>CFG-MSGGOUT-NMEA_NAV2_ID_ZDA_SPI</i>	0x20910683	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port SPI
<i>CFG-MSGGOUT-NMEA_NAV2_ID_ZDA_UART1</i>	0x20910680	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port UART1
<i>CFG-MSGGOUT-NMEA_NAV2_ID_ZDA_UART2</i>	0x20910681	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port UART2
<i>CFG-MSGGOUT-NMEA_NAV2_ID_ZDA_USB</i>	0x20910682	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port USB
<i>CFG-MSGGOUT-PUBX_ID_POLYP_I2C</i>	0x209100ec	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port I2C
<i>CFG-MSGGOUT-PUBX_ID_POLYP_SPI</i>	0x209100f0	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port SPI
<i>CFG-MSGGOUT-PUBX_ID_POLYP_UART1</i>	0x209100ed	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART1
<i>CFG-MSGGOUT-PUBX_ID_POLYP_UART2</i>	0x209100ee	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART2
<i>CFG-MSGGOUT-PUBX_ID_POLYP_USB</i>	0x209100ef	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port USB
<i>CFG-MSGGOUT-PUBX_ID_POLYS_I2C</i>	0x209100f1	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port I2C
<i>CFG-MSGGOUT-PUBX_ID_POLYS_SPI</i>	0x209100f5	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port SPI
<i>CFG-MSGGOUT-PUBX_ID_POLYS_UART1</i>	0x209100f2	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART1
<i>CFG-MSGGOUT-PUBX_ID_POLYS_UART2</i>	0x209100f3	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART2
<i>CFG-MSGGOUT-PUBX_ID_POLYS_USB</i>	0x209100f4	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port USB
<i>CFG-MSGGOUT-PUBX_ID_POLYT_I2C</i>	0x209100f6	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port I2C
<i>CFG-MSGGOUT-PUBX_ID_POLYT_SPI</i>	0x209100fa	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port SPI
<i>CFG-MSGGOUT-PUBX_ID_POLYT_UART1</i>	0x209100f7	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART1
<i>CFG-MSGGOUT-PUBX_ID_POLYT_UART2</i>	0x209100f8	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART2
<i>CFG-MSGGOUT-PUBX_ID_POLYT_USB</i>	0x209100f9	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port USB
<i>CFG-MSGGOUT-UBX_ESF_ALG_I2C</i>	0x2091010f	U1	-	-	Output rate of the UBX-ESF-ALG message on port I2C
<i>CFG-MSGGOUT-UBX_ESF_ALG_SPI</i>	0x20910113	U1	-	-	Output rate of the UBX-ESF-ALG message on port SPI
<i>CFG-MSGGOUT-UBX_ESF_ALG_UART1</i>	0x20910110	U1	-	-	Output rate of the UBX-ESF-ALG message on port UART1
<i>CFG-MSGGOUT-UBX_ESF_ALG_UART2</i>	0x20910111	U1	-	-	Output rate of the UBX-ESF-ALG message on port UART2
<i>CFG-MSGGOUT-UBX_ESF_ALG_USB</i>	0x20910112	U1	-	-	Output rate of the UBX-ESF-ALG message on port USB
<i>CFG-MSGGOUT-UBX_ESF_INS_I2C</i>	0x20910114	U1	-	-	Output rate of the UBX-ESF-INS message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_ESF_INS_SPI</i>	0x20910118	U1	-	-	Output rate of the UBX-ESF-INS message on port SPI
<i>CFG-MSGOUT-UBX_ESF_INS_UART1</i>	0x20910115	U1	-	-	Output rate of the UBX-ESF-INS message on port UART1
<i>CFG-MSGOUT-UBX_ESF_INS_UART2</i>	0x20910116	U1	-	-	Output rate of the UBX-ESF-INS message on port UART2
<i>CFG-MSGOUT-UBX_ESF_INS_USB</i>	0x20910117	U1	-	-	Output rate of the UBX-ESF-INS message on port USB
<i>CFG-MSGOUT-UBX_ESF_MEAS_I2C</i>	0x20910277	U1	-	-	Output rate of the UBX-ESF-MEAS message on port I2C
<i>CFG-MSGOUT-UBX_ESF_MEAS_SPI</i>	0x2091027b	U1	-	-	Output rate of the UBX-ESF-MEAS message on port SPI
<i>CFG-MSGOUT-UBX_ESF_MEAS_UART1</i>	0x20910278	U1	-	-	Output rate of the UBX-ESF-MEAS message on port UART1
<i>CFG-MSGOUT-UBX_ESF_MEAS_UART2</i>	0x20910279	U1	-	-	Output rate of the UBX-ESF-MEAS message on port UART2
<i>CFG-MSGOUT-UBX_ESF_MEAS_USB</i>	0x2091027a	U1	-	-	Output rate of the UBX-ESF-MEAS message on port USB
<i>CFG-MSGOUT-UBX_ESF_RAW_I2C</i>	0x2091029f	U1	-	-	Output rate of the UBX-ESF-RAW message on port I2C
<i>CFG-MSGOUT-UBX_ESF_RAW_SPI</i>	0x209102a3	U1	-	-	Output rate of the UBX-ESF-RAW message on port SPI
<i>CFG-MSGOUT-UBX_ESF_RAW_UART1</i>	0x209102a0	U1	-	-	Output rate of the UBX-ESF-RAW message on port UART1
<i>CFG-MSGOUT-UBX_ESF_RAW_UART2</i>	0x209102a1	U1	-	-	Output rate of the UBX-ESF-RAW message on port UART2
<i>CFG-MSGOUT-UBX_ESF_RAW_USB</i>	0x209102a2	U1	-	-	Output rate of the UBX-ESF-RAW message on port USB
<i>CFG-MSGOUT-UBX_ESF_STATUS_I2C</i>	0x20910105	U1	-	-	Output rate of the UBX-ESF-STATUS message on port I2C
<i>CFG-MSGOUT-UBX_ESF_STATUS_SPI</i>	0x20910109	U1	-	-	Output rate of the UBX-ESF-STATUS message on port SPI
<i>CFG-MSGOUT-UBX_ESF_STATUS_UART1</i>	0x20910106	U1	-	-	Output rate of the UBX-ESF-STATUS message on port UART1
<i>CFG-MSGOUT-UBX_ESF_STATUS_UART2</i>	0x20910107	U1	-	-	Output rate of the UBX-ESF-STATUS message on port UART2
<i>CFG-MSGOUT-UBX_ESF_STATUS_USB</i>	0x20910108	U1	-	-	Output rate of the UBX-ESF-STATUS message on port USB
<i>CFG-MSGOUT-UBX_MON_COMMS_I2C</i>	0x2091034f	U1	-	-	Output rate of the UBX-MON-COMMS message on port I2C
<i>CFG-MSGOUT-UBX_MON_COMMS_SPI</i>	0x20910353	U1	-	-	Output rate of the UBX-MON-COMMS message on port SPI
<i>CFG-MSGOUT-UBX_MON_COMMS_UART1</i>	0x20910350	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART1
<i>CFG-MSGOUT-UBX_MON_COMMS_UART2</i>	0x20910351	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART2
<i>CFG-MSGOUT-UBX_MON_COMMS_USB</i>	0x20910352	U1	-	-	Output rate of the UBX-MON-COMMS message on port USB
<i>CFG-MSGOUT-UBX_MON_HW2_I2C</i>	0x209101b9	U1	-	-	Output rate of the UBX-MON-HW2 message on port I2C
<i>CFG-MSGOUT-UBX_MON_HW2_SPI</i>	0x209101bd	U1	-	-	Output rate of the UBX-MON-HW2 message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_MON_HW2_UART1</i>	0x209101ba	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART1
<i>CFG-MSGOUT-UBX_MON_HW2_UART2</i>	0x209101bb	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART2
<i>CFG-MSGOUT-UBX_MON_HW2_USB</i>	0x209101bc	U1	-	-	Output rate of the UBX-MON-HW2 message on port USB
<i>CFG-MSGOUT-UBX_MON_HW3_I2C</i>	0x20910354	U1	-	-	Output rate of the UBX-MON-HW3 message on port I2C
<i>CFG-MSGOUT-UBX_MON_HW3_SPI</i>	0x20910358	U1	-	-	Output rate of the UBX-MON-HW3 message on port SPI
<i>CFG-MSGOUT-UBX_MON_HW3_UART1</i>	0x20910355	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART1
<i>CFG-MSGOUT-UBX_MON_HW3_UART2</i>	0x20910356	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART2
<i>CFG-MSGOUT-UBX_MON_HW3_USB</i>	0x20910357	U1	-	-	Output rate of the UBX-MON-HW3 message on port USB
<i>CFG-MSGOUT-UBX_MON_HW_I2C</i>	0x209101b4	U1	-	-	Output rate of the UBX-MON-HW message on port I2C
<i>CFG-MSGOUT-UBX_MON_HW_SPI</i>	0x209101b8	U1	-	-	Output rate of the UBX-MON-HW message on port SPI
<i>CFG-MSGOUT-UBX_MON_HW_UART1</i>	0x209101b5	U1	-	-	Output rate of the UBX-MON-HW message on port UART1
<i>CFG-MSGOUT-UBX_MON_HW_UART2</i>	0x209101b6	U1	-	-	Output rate of the UBX-MON-HW message on port UART2
<i>CFG-MSGOUT-UBX_MON_HW_USB</i>	0x209101b7	U1	-	-	Output rate of the UBX-MON-HW message on port USB
<i>CFG-MSGOUT-UBX_MON_IO_I2C</i>	0x209101a5	U1	-	-	Output rate of the UBX-MON-IO message on port I2C
<i>CFG-MSGOUT-UBX_MON_IO_SPI</i>	0x209101a9	U1	-	-	Output rate of the UBX-MON-IO message on port SPI
<i>CFG-MSGOUT-UBX_MON_IO_UART1</i>	0x209101a6	U1	-	-	Output rate of the UBX-MON-IO message on port UART1
<i>CFG-MSGOUT-UBX_MON_IO_UART2</i>	0x209101a7	U1	-	-	Output rate of the UBX-MON-IO message on port UART2
<i>CFG-MSGOUT-UBX_MON_IO_USB</i>	0x209101a8	U1	-	-	Output rate of the UBX-MON-IO message on port USB
<i>CFG-MSGOUT-UBX_MON_MSGPP_I2C</i>	0x20910196	U1	-	-	Output rate of the UBX-MON-MSGPP message on port I2C
<i>CFG-MSGOUT-UBX_MON_MSGPP_SPI</i>	0x2091019a	U1	-	-	Output rate of the UBX-MON-MSGPP message on port SPI
<i>CFG-MSGOUT-UBX_MON_MSGPP_UART1</i>	0x20910197	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART1
<i>CFG-MSGOUT-UBX_MON_MSGPP_UART2</i>	0x20910198	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART2
<i>CFG-MSGOUT-UBX_MON_MSGPP_USB</i>	0x20910199	U1	-	-	Output rate of the UBX-MON-MSGPP message on port USB
<i>CFG-MSGOUT-UBX_MON_RF_I2C</i>	0x20910359	U1	-	-	Output rate of the UBX-MON-RF message on port I2C
<i>CFG-MSGOUT-UBX_MON_RF_SPI</i>	0x2091035d	U1	-	-	Output rate of the UBX-MON-RF message on port SPI
<i>CFG-MSGOUT-UBX_MON_RF_UART1</i>	0x2091035a	U1	-	-	Output rate of the UBX-MON-RF message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_MON_RF_UART2</i>	0x2091035b	U1	-	-	Output rate of the UBX-MON-RF message on port UART2
<i>CFG-MSGOUT-UBX_MON_RF_USB</i>	0x2091035c	U1	-	-	Output rate of the UBX-MON-RF message on port USB
<i>CFG-MSGOUT-UBX_MON_RXBUF_I2C</i>	0x209101a0	U1	-	-	Output rate of the UBX-MON-RXBUF message on port I2C
<i>CFG-MSGOUT-UBX_MON_RXBUF_SPI</i>	0x209101a4	U1	-	-	Output rate of the UBX-MON-RXBUF message on port SPI
<i>CFG-MSGOUT-UBX_MON_RXBUF_UART1</i>	0x209101a1	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART1
<i>CFG-MSGOUT-UBX_MON_RXBUF_UART2</i>	0x209101a2	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART2
<i>CFG-MSGOUT-UBX_MON_RXBUF_USB</i>	0x209101a3	U1	-	-	Output rate of the UBX-MON-RXBUF message on port USB
<i>CFG-MSGOUT-UBX_MON_RXR_I2C</i>	0x20910187	U1	-	-	Output rate of the UBX-MON-RXR message on port I2C
<i>CFG-MSGOUT-UBX_MON_RXR_SPI</i>	0x2091018b	U1	-	-	Output rate of the UBX-MON-RXR message on port SPI
<i>CFG-MSGOUT-UBX_MON_RXR_UART1</i>	0x20910188	U1	-	-	Output rate of the UBX-MON-RXR message on port UART1
<i>CFG-MSGOUT-UBX_MON_RXR_UART2</i>	0x20910189	U1	-	-	Output rate of the UBX-MON-RXR message on port UART2
<i>CFG-MSGOUT-UBX_MON_RXR_USB</i>	0x2091018a	U1	-	-	Output rate of the UBX-MON-RXR message on port USB
<i>CFG-MSGOUT-UBX_MON_SPAN_I2C</i>	0x2091038b	U1	-	-	Output rate of the UBX-MON-SPAN message on port I2C
<i>CFG-MSGOUT-UBX_MON_SPAN_SPI</i>	0x2091038f	U1	-	-	Output rate of the UBX-MON-SPAN message on port SPI
<i>CFG-MSGOUT-UBX_MON_SPAN_UART1</i>	0x2091038c	U1	-	-	Output rate of the UBX-MON-SPAN message on port UART1
<i>CFG-MSGOUT-UBX_MON_SPAN_UART2</i>	0x2091038d	U1	-	-	Output rate of the UBX-MON-SPAN message on port UART2
<i>CFG-MSGOUT-UBX_MON_SPAN_USB</i>	0x2091038e	U1	-	-	Output rate of the UBX-MON-SPAN message on port USB
<i>CFG-MSGOUT-UBX_MON_SYS_I2C</i>	0x2091069d	U1	-	-	Output rate of the UBX-MON-SYS message on port I2C
<i>CFG-MSGOUT-UBX_MON_SYS_SPI</i>	0x209106a1	U1	-	-	Output rate of the UBX-MON-SYS message on port SPI
<i>CFG-MSGOUT-UBX_MON_SYS_UART1</i>	0x2091069e	U1	-	-	Output rate of the UBX-MON-SYS message on port UART1
<i>CFG-MSGOUT-UBX_MON_SYS_UART2</i>	0x2091069f	U1	-	-	Output rate of the UBX-MON-SYS message on port UART2
<i>CFG-MSGOUT-UBX_MON_SYS_USB</i>	0x209106a0	U1	-	-	Output rate of the UBX-MON-SYS message on port USB
<i>CFG-MSGOUT-UBX_MON_TXBUF_I2C</i>	0x2091019b	U1	-	-	Output rate of the UBX-MON-TXBUF message on port I2C
<i>CFG-MSGOUT-UBX_MON_TXBUF_SPI</i>	0x2091019f	U1	-	-	Output rate of the UBX-MON-TXBUF message on port SPI
<i>CFG-MSGOUT-UBX_MON_TXBUF_UART1</i>	0x2091019c	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART1
<i>CFG-MSGOUT-UBX_MON_TXBUF_UART2</i>	0x2091019d	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGGOUT-UBX_MON_TXBUF_USB</i>	0x2091019e	U1	-	-	Output rate of the UBX-MON-TXBUF message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_CLOCK_I2C</i>	0x20910430	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_CLOCK_SPI</i>	0x20910434	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_CLOCK_UART1</i>	0x20910431	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_CLOCK_UART2</i>	0x20910432	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_CLOCK_USB</i>	0x20910433	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_COV_I2C</i>	0x20910435	U1	-	-	Output rate of the UBX-NAV2-COV message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_COV_SPI</i>	0x20910439	U1	-	-	Output rate of the UBX-NAV2-COV message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_COV_UART1</i>	0x20910436	U1	-	-	Output rate of the UBX-NAV2-COV message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_COV_UART2</i>	0x20910437	U1	-	-	Output rate of the UBX-NAV2-COV message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_COV_USB</i>	0x20910438	U1	-	-	Output rate of the UBX-NAV2-COV message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_DOP_I2C</i>	0x20910465	U1	-	-	Output rate of the UBX-NAV2-DOP message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_DOP_SPI</i>	0x20910469	U1	-	-	Output rate of the UBX-NAV2-DOP message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_DOP_UART1</i>	0x20910466	U1	-	-	Output rate of the UBX-NAV2-DOP message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_DOP_UART2</i>	0x20910467	U1	-	-	Output rate of the UBX-NAV2-DOP message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_DOP_USB</i>	0x20910468	U1	-	-	Output rate of the UBX-NAV2-DOP message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_EELL_I2C</i>	0x20910470	U1	-	-	Output rate of the UBX-NAV2-EELL message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_EELL_SPI</i>	0x20910474	U1	-	-	Output rate of the UBX-NAV2-EELL message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_EELL_UART1</i>	0x20910471	U1	-	-	Output rate of the UBX-NAV2-EELL message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_EELL_UART2</i>	0x20910472	U1	-	-	Output rate of the UBX-NAV2-EELL message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_EELL_USB</i>	0x20910473	U1	-	-	Output rate of the UBX-NAV2-EELL message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_EOE_I2C</i>	0x20910565	U1	-	-	Output rate of the UBX-NAV2-EOE message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_EOE_SPI</i>	0x20910569	U1	-	-	Output rate of the UBX-NAV2-EOE message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_EOE_UART1</i>	0x20910566	U1	-	-	Output rate of the UBX-NAV2-EOE message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_EOE_UART2</i>	0x20910567	U1	-	-	Output rate of the UBX-NAV2-EOE message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_EOE_USB</i>	0x20910568	U1	-	-	Output rate of the UBX-NAV2-EOE message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGGOUT-UBX_NAV2_POSECEF_I2C</i>	0x20910480	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_POSECEF_SPI</i>	0x20910484	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_POSECEF_UART1</i>	0x20910481	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_POSECEF_UART2</i>	0x20910482	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_POSECEF_USB</i>	0x20910483	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_POSLLH_I2C</i>	0x20910485	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_POSLLH_SPI</i>	0x20910489	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_POSLLH_UART1</i>	0x20910486	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_POSLLH_UART2</i>	0x20910487	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_POSLLH_USB</i>	0x20910488	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_PVAT_I2C</i>	0x2091062f	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_PVAT_SPI</i>	0x20910633	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_PVAT_UART1</i>	0x20910630	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_PVAT_UART2</i>	0x20910631	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_PVAT_USB</i>	0x20910632	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_PVT_I2C</i>	0x20910490	U1	-	-	Output rate of the UBX-NAV2-PVT message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_PVT_SPI</i>	0x20910494	U1	-	-	Output rate of the UBX-NAV2-PVT message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_PVT_UART1</i>	0x20910491	U1	-	-	Output rate of the UBX-NAV2-PVT message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_PVT_UART2</i>	0x20910492	U1	-	-	Output rate of the UBX-NAV2-PVT message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_PVT_USB</i>	0x20910493	U1	-	-	Output rate of the UBX-NAV2-PVT message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_SAT_I2C</i>	0x20910495	U1	-	-	Output rate of the UBX-NAV2-SAT message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_SAT_SPI</i>	0x20910499	U1	-	-	Output rate of the UBX-NAV2-SAT message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_SAT_UART1</i>	0x20910496	U1	-	-	Output rate of the UBX-NAV2-SAT message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_SAT_UART2</i>	0x20910497	U1	-	-	Output rate of the UBX-NAV2-SAT message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_SAT_USB</i>	0x20910498	U1	-	-	Output rate of the UBX-NAV2-SAT message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_SBAS_I2C</i>	0x20910500	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port I2C



Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV2_SBAS_SPI</i>	0x20910504	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SBAS_UART1</i>	0x20910501	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SBAS_UART2</i>	0x20910502	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SBAS_USB</i>	0x20910503	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_SIG_I2C</i>	0x20910505	U1	-	-	Output rate of the UBX-NAV2-SIG message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_SIG_SPI</i>	0x20910509	U1	-	-	Output rate of the UBX-NAV2-SIG message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SIG_UART1</i>	0x20910506	U1	-	-	Output rate of the UBX-NAV2-SIG message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SIG_UART2</i>	0x20910507	U1	-	-	Output rate of the UBX-NAV2-SIG message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SIG_USB</i>	0x20910508	U1	-	-	Output rate of the UBX-NAV2-SIG message on port USB
<i>CFG-MSGOUT-UBX_NAV2_SLAS_I2C</i>	0x20910510	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_SLAS_SPI</i>	0x20910514	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SLAS_UART1</i>	0x20910511	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SLAS_UART2</i>	0x20910512	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SLAS_USB</i>	0x20910513	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_STATUS_I2C</i>	0x20910515	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_STATUS_SPI</i>	0x20910519	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_STATUS_UART1</i>	0x20910516	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_STATUS_UART2</i>	0x20910517	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_STATUS_USB</i>	0x20910518	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_I2C</i>	0x20910525	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_SPI</i>	0x20910529	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART1</i>	0x20910526	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART2</i>	0x20910527	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_USB</i>	0x20910528	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEGAL_I2C</i>	0x20910530	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMEGAL_SPI</i>	0x20910534	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGAL_UART1</i>	0x20910531	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGAL_UART2</i>	0x20910532	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGAL_USB</i>	0x20910533	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGLO_I2C</i>	0x20910535	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGLO_SPI</i>	0x20910539	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGLO_UART1</i>	0x20910536	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGLO_UART2</i>	0x20910537	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGLO_USB</i>	0x20910538	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGPS_I2C</i>	0x20910540	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGPS_SPI</i>	0x20910544	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGPS_UART1</i>	0x20910541	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGPS_UART2</i>	0x20910542	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_TIMEGPS_USB</i>	0x20910543	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_TIMELS_I2C</i>	0x20910545	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_TIMELS_SPI</i>	0x20910549	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_TIMELS_UART1</i>	0x20910546	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_TIMELS_UART2</i>	0x20910547	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_TIMELS_USB</i>	0x20910548	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_TIMEQZSS_I2C</i>	0x20910575	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_TIMEQZSS_SPI</i>	0x20910579	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_TIMEQZSS_UART1</i>	0x20910576	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_TIMEQZSS_UART2</i>	0x20910577	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_TIMEQZSS_USB</i>	0x20910578	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_TIMEUTC_I2C</i>	0x20910550	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_TIMEUTC_SPI</i>	0x20910554	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_TIMEUTC_UART1</i>	0x20910551	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port UART1



Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGGOUT-UBX_NAV2_TIMEUTC_UART2</i>	0x20910552	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_TIMEUTC_USB</i>	0x20910553	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_VELECEF_I2C</i>	0x20910555	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_VELECEF_SPI</i>	0x20910559	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_VELECEF_UART1</i>	0x20910556	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_VELECEF_UART2</i>	0x20910557	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_VELECEF_USB</i>	0x20910558	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port USB
<i>CFG-MSGGOUT-UBX_NAV2_VELNED_I2C</i>	0x20910560	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port I2C
<i>CFG-MSGGOUT-UBX_NAV2_VELNED_SPI</i>	0x20910564	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port SPI
<i>CFG-MSGGOUT-UBX_NAV2_VELNED_UART1</i>	0x20910561	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port UART1
<i>CFG-MSGGOUT-UBX_NAV2_VELNED_UART2</i>	0x20910562	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port UART2
<i>CFG-MSGGOUT-UBX_NAV2_VELNED_USB</i>	0x20910563	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port USB
<i>CFG-MSGGOUT-UBX_NAV_ATT_I2C</i>	0x2091001f	U1	-	-	Output rate of the UBX-NAV-ATT message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_ATT_SPI</i>	0x20910023	U1	-	-	Output rate of the UBX-NAV-ATT message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_ATT_UART1</i>	0x20910020	U1	-	-	Output rate of the UBX-NAV-ATT message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_ATT_UART2</i>	0x20910021	U1	-	-	Output rate of the UBX-NAV-ATT message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_ATT_USB</i>	0x20910022	U1	-	-	Output rate of the UBX-NAV-ATT message on port USB
<i>CFG-MSGGOUT-UBX_NAV_CLOCK_I2C</i>	0x20910065	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_CLOCK_SPI</i>	0x20910069	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_CLOCK_UART1</i>	0x20910066	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_CLOCK_UART2</i>	0x20910067	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_CLOCK_USB</i>	0x20910068	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port USB
<i>CFG-MSGGOUT-UBX_NAV_COV_I2C</i>	0x20910083	U1	-	-	Output rate of the UBX-NAV-COV message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_COV_SPI</i>	0x20910087	U1	-	-	Output rate of the UBX-NAV-COV message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_COV_UART1</i>	0x20910084	U1	-	-	Output rate of the UBX-NAV-COV message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_COV_UART2</i>	0x20910085	U1	-	-	Output rate of the UBX-NAV-COV message on port UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_COV_USB</i>	0x20910086	U1	-	-	Output rate of the UBX-NAV-COV message on port USB
<i>CFG-MSGOUT-UBX_NAV_DOP_I2C</i>	0x20910038	U1	-	-	Output rate of the UBX-NAV-DOP message on port I2C
<i>CFG-MSGOUT-UBX_NAV_DOP_SPI</i>	0x2091003c	U1	-	-	Output rate of the UBX-NAV-DOP message on port SPI
<i>CFG-MSGOUT-UBX_NAV_DOP_UART1</i>	0x20910039	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART1
<i>CFG-MSGOUT-UBX_NAV_DOP_UART2</i>	0x2091003a	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART2
<i>CFG-MSGOUT-UBX_NAV_DOP_USB</i>	0x2091003b	U1	-	-	Output rate of the UBX-NAV-DOP message on port USB
<i>CFG-MSGOUT-UBX_NAV_EELL_I2C</i>	0x20910313	U1	-	-	Output rate of the UBX-NAV-EELL message on port I2C
<i>CFG-MSGOUT-UBX_NAV_EELL_SPI</i>	0x20910317	U1	-	-	Output rate of the UBX-NAV-EELL message on port SPI
<i>CFG-MSGOUT-UBX_NAV_EELL_UART1</i>	0x20910314	U1	-	-	Output rate of the UBX-NAV-EELL message on port UART1
<i>CFG-MSGOUT-UBX_NAV_EELL_UART2</i>	0x20910315	U1	-	-	Output rate of the UBX-NAV-EELL message on port UART2
<i>CFG-MSGOUT-UBX_NAV_EELL_USB</i>	0x20910316	U1	-	-	Output rate of the UBX-NAV-EELL message on port USB
<i>CFG-MSGOUT-UBX_NAV_EOE_I2C</i>	0x2091015f	U1	-	-	Output rate of the UBX-NAV-EOE message on port I2C
<i>CFG-MSGOUT-UBX_NAV_EOE_SPI</i>	0x20910163	U1	-	-	Output rate of the UBX-NAV-EOE message on port SPI
<i>CFG-MSGOUT-UBX_NAV_EOE_UART1</i>	0x20910160	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART1
<i>CFG-MSGOUT-UBX_NAV_EOE_UART2</i>	0x20910161	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART2
<i>CFG-MSGOUT-UBX_NAV_EOE_USB</i>	0x20910162	U1	-	-	Output rate of the UBX-NAV-EOE message on port USB
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C</i>	0x209100a1	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port I2C
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI</i>	0x209100a5	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port SPI
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1</i>	0x209100a2	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART1
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2</i>	0x209100a3	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART2
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_USB</i>	0x209100a4	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port USB
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_I2C</i>	0x2091002e	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port I2C
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_SPI</i>	0x20910032	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port SPI
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_UART1</i>	0x2091002f	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port UART1
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_UART2</i>	0x20910030	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port UART2
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_USB</i>	0x20910031	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_HPPOSLLH_I2C</i>	0x20910033	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port I2C
<i>CFG-MSGOUT-UBX_NAV_HPPOSLLH_SPI</i>	0x20910037	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port SPI
<i>CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART1</i>	0x20910034	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port UART1
<i>CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART2</i>	0x20910035	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port UART2
<i>CFG-MSGOUT-UBX_NAV_HPPOSLLH_USB</i>	0x20910036	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port USB
<i>CFG-MSGOUT-UBX_NAV_ORB_I2C</i>	0x20910010	U1	-	-	Output rate of the UBX-NAV-ORB message on port I2C
<i>CFG-MSGOUT-UBX_NAV_ORB_SPI</i>	0x20910014	U1	-	-	Output rate of the UBX-NAV-ORB message on port SPI
<i>CFG-MSGOUT-UBX_NAV_ORB_UART1</i>	0x20910011	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART1
<i>CFG-MSGOUT-UBX_NAV_ORB_UART2</i>	0x20910012	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART2
<i>CFG-MSGOUT-UBX_NAV_ORB_USB</i>	0x20910013	U1	-	-	Output rate of the UBX-NAV-ORB message on port USB
<i>CFG-MSGOUT-UBX_NAV_PL_I2C</i>	0x20910415	U1	-	-	Output rate of the UBX-NAV-PL message on port I2C
<i>CFG-MSGOUT-UBX_NAV_PL_SPI</i>	0x20910419	U1	-	-	Output rate of the UBX-NAV-PL message on port SPI
<i>CFG-MSGOUT-UBX_NAV_PL_UART1</i>	0x20910416	U1	-	-	Output rate of the UBX-NAV-PL message on port UART1
<i>CFG-MSGOUT-UBX_NAV_PL_UART2</i>	0x20910417	U1	-	-	Output rate of the UBX-NAV-PL message on port UART2
<i>CFG-MSGOUT-UBX_NAV_PL_USB</i>	0x20910418	U1	-	-	Output rate of the UBX-NAV-PL message on port USB
<i>CFG-MSGOUT-UBX_NAV_POSECEF_I2C</i>	0x20910024	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port I2C
<i>CFG-MSGOUT-UBX_NAV_POSECEF_SPI</i>	0x20910028	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port SPI
<i>CFG-MSGOUT-UBX_NAV_POSECEF_UART1</i>	0x20910025	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART1
<i>CFG-MSGOUT-UBX_NAV_POSECEF_UART2</i>	0x20910026	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART2
<i>CFG-MSGOUT-UBX_NAV_POSECEF_USB</i>	0x20910027	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port USB
<i>CFG-MSGOUT-UBX_NAV_POSLLH_I2C</i>	0x20910029	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port I2C
<i>CFG-MSGOUT-UBX_NAV_POSLLH_SPI</i>	0x2091002d	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port SPI
<i>CFG-MSGOUT-UBX_NAV_POSLLH_UART1</i>	0x2091002a	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART1
<i>CFG-MSGOUT-UBX_NAV_POSLLH_UART2</i>	0x2091002b	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART2
<i>CFG-MSGOUT-UBX_NAV_POSLLH_USB</i>	0x2091002c	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port USB
<i>CFG-MSGOUT-UBX_NAV_PVAT_I2C</i>	0x2091062a	U1	-	-	Output rate of the UBX-NAV-PVAT message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_PVAT_SPI</i>	0x2091062e	U1	-	-	Output rate of the UBX-NAV-PVAT message on port SPI
<i>CFG-MSGOUT-UBX_NAV_PVAT_UART1</i>	0x2091062b	U1	-	-	Output rate of the UBX-NAV-PVAT message on port UART1
<i>CFG-MSGOUT-UBX_NAV_PVAT_UART2</i>	0x2091062c	U1	-	-	Output rate of the UBX-NAV-PVAT message on port UART2
<i>CFG-MSGOUT-UBX_NAV_PVAT_USB</i>	0x2091062d	U1	-	-	Output rate of the UBX-NAV-PVAT message on port USB
<i>CFG-MSGOUT-UBX_NAV_PVT_I2C</i>	0x20910006	U1	-	-	Output rate of the UBX-NAV-PVT message on port I2C
<i>CFG-MSGOUT-UBX_NAV_PVT_SPI</i>	0x2091000a	U1	-	-	Output rate of the UBX-NAV-PVT message on port SPI
<i>CFG-MSGOUT-UBX_NAV_PVT_UART1</i>	0x20910007	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART1
<i>CFG-MSGOUT-UBX_NAV_PVT_UART2</i>	0x20910008	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART2
<i>CFG-MSGOUT-UBX_NAV_PVT_USB</i>	0x20910009	U1	-	-	Output rate of the UBX-NAV-PVT message on port USB
<i>CFG-MSGOUT-UBX_NAV_RELPOSSED_I2C</i>	0x2091008d	U1	-	-	Output rate of the UBX-NAV-RELPOSSED message on port I2C
<i>CFG-MSGOUT-UBX_NAV_RELPOSSED_SPI</i>	0x20910091	U1	-	-	Output rate of the UBX-NAV-RELPOSSED message on port SPI
<i>CFG-MSGOUT-UBX_NAV_RELPOSSED_UART1</i>	0x2091008e	U1	-	-	Output rate of the UBX-NAV-RELPOSSED message on port UART1
<i>CFG-MSGOUT-UBX_NAV_RELPOSSED_UART2</i>	0x2091008f	U1	-	-	Output rate of the UBX-NAV-RELPOSSED message on port UART2
<i>CFG-MSGOUT-UBX_NAV_RELPOSSED_USB</i>	0x20910090	U1	-	-	Output rate of the UBX-NAV-RELPOSSED message on port USB
<i>CFG-MSGOUT-UBX_NAV_SAT_I2C</i>	0x20910015	U1	-	-	Output rate of the UBX-NAV-SAT message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SAT_SPI</i>	0x20910019	U1	-	-	Output rate of the UBX-NAV-SAT message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SAT_UART1</i>	0x20910016	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SAT_UART2</i>	0x20910017	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SAT_USB</i>	0x20910018	U1	-	-	Output rate of the UBX-NAV-SAT message on port USB
<i>CFG-MSGOUT-UBX_NAV_SBAS_I2C</i>	0x2091006a	U1	-	-	Output rate of the UBX-NAV-SBAS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SBAS_SPI</i>	0x2091006e	U1	-	-	Output rate of the UBX-NAV-SBAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SBAS_UART1</i>	0x2091006b	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SBAS_UART2</i>	0x2091006c	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SBAS_USB</i>	0x2091006d	U1	-	-	Output rate of the UBX-NAV-SBAS message on port USB
<i>CFG-MSGOUT-UBX_NAV_SIG_I2C</i>	0x20910345	U1	-	-	Output rate of the UBX-NAV-SIG message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SIG_SPI</i>	0x20910349	U1	-	-	Output rate of the UBX-NAV-SIG message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_SIG_UART1</i>	0x20910346	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SIG_UART2</i>	0x20910347	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SIG_USB</i>	0x20910348	U1	-	-	Output rate of the UBX-NAV-SIG message on port USB
<i>CFG-MSGOUT-UBX_NAV_SLAS_I2C</i>	0x20910336	U1	-	-	Output rate of the UBX-NAV-SLAS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SLAS_SPI</i>	0x2091033a	U1	-	-	Output rate of the UBX-NAV-SLAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SLAS_UART1</i>	0x20910337	U1	-	-	Output rate of the UBX-NAV-SLAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SLAS_UART2</i>	0x20910338	U1	-	-	Output rate of the UBX-NAV-SLAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SLAS_USB</i>	0x20910339	U1	-	-	Output rate of the UBX-NAV-SLAS message on port USB
<i>CFG-MSGOUT-UBX_NAV_STATUS_I2C</i>	0x2091001a	U1	-	-	Output rate of the UBX-NAV-STATUS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_STATUS_SPI</i>	0x2091001e	U1	-	-	Output rate of the UBX-NAV-STATUS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_STATUS_UART1</i>	0x2091001b	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_STATUS_UART2</i>	0x2091001c	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_STATUS_USB</i>	0x2091001d	U1	-	-	Output rate of the UBX-NAV-STATUS message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C</i>	0x20910051	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI</i>	0x20910055	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1</i>	0x20910052	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2</i>	0x20910053	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_USB</i>	0x20910054	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C</i>	0x20910056	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI</i>	0x2091005a	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1</i>	0x20910057	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2</i>	0x20910058	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_USB</i>	0x20910059	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C</i>	0x2091004c	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI</i>	0x20910050	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1</i>	0x2091004d	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGGOUT-UBX_NAV_TIMEGLO_UART2</i>	0x2091004e	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_TIMEGLO_USB</i>	0x2091004f	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port USB
<i>CFG-MSGGOUT-UBX_NAV_TIMEGPS_I2C</i>	0x20910047	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_TIMEGPS_SPI</i>	0x2091004b	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_TIMEGPS_UART1</i>	0x20910048	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_TIMEGPS_UART2</i>	0x20910049	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_TIMEGPS_USB</i>	0x2091004a	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port USB
<i>CFG-MSGGOUT-UBX_NAV_TIMEELS_I2C</i>	0x20910060	U1	-	-	Output rate of the UBX-NAV-TIMEELS message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_TIMEELS_SPI</i>	0x20910064	U1	-	-	Output rate of the UBX-NAV-TIMEELS message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_TIMEELS_UART1</i>	0x20910061	U1	-	-	Output rate of the UBX-NAV-TIMEELS message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_TIMEELS_UART2</i>	0x20910062	U1	-	-	Output rate of the UBX-NAV-TIMEELS message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_TIMEELS_USB</i>	0x20910063	U1	-	-	Output rate of the UBX-NAV-TIMEELS message on port USB
<i>CFG-MSGGOUT-UBX_NAV_TIMEQZSS_I2C</i>	0x20910386	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_TIMEQZSS_SPI</i>	0x2091038a	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_TIMEQZSS_UART1</i>	0x20910387	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_TIMEQZSS_UART2</i>	0x20910388	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_TIMEQZSS_USB</i>	0x20910389	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port USB
<i>CFG-MSGGOUT-UBX_NAV_TIMEUTC_I2C</i>	0x2091005b	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_TIMEUTC_SPI</i>	0x2091005f	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_TIMEUTC_UART1</i>	0x2091005c	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_TIMEUTC_UART2</i>	0x2091005d	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_TIMEUTC_USB</i>	0x2091005e	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port USB
<i>CFG-MSGGOUT-UBX_NAV_VELECEF_I2C</i>	0x2091003d	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_VELECEF_SPI</i>	0x20910041	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_VELECEF_UART1</i>	0x2091003e	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_VELECEF_UART2</i>	0x2091003f	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART2



Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGGOUT-UBX_NAV_VELECEF_USB</i>	0x20910040	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port USB
<i>CFG-MSGGOUT-UBX_NAV_VELNED_I2C</i>	0x20910042	U1	-	-	Output rate of the UBX-NAV-VELNED message on port I2C
<i>CFG-MSGGOUT-UBX_NAV_VELNED_SPI</i>	0x20910046	U1	-	-	Output rate of the UBX-NAV-VELNED message on port SPI
<i>CFG-MSGGOUT-UBX_NAV_VELNED_UART1</i>	0x20910043	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART1
<i>CFG-MSGGOUT-UBX_NAV_VELNED_UART2</i>	0x20910044	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART2
<i>CFG-MSGGOUT-UBX_NAV_VELNED_USB</i>	0x20910045	U1	-	-	Output rate of the UBX-NAV-VELNED message on port USB
<i>CFG-MSGGOUT-UBX_RXM_COR_I2C</i>	0x209106b6	U1	-	-	Output rate of the UBX-RXM-COR message on port I2C
<i>CFG-MSGGOUT-UBX_RXM_COR_SPI</i>	0x209106ba	U1	-	-	Output rate of the UBX-RXM-COR message on port SPI
<i>CFG-MSGGOUT-UBX_RXM_COR_UART1</i>	0x209106b7	U1	-	-	Output rate of the UBX-RXM-COR message on port UART1
<i>CFG-MSGGOUT-UBX_RXM_COR_UART2</i>	0x209106b8	U1	-	-	Output rate of the UBX-RXM-COR message on port UART2
<i>CFG-MSGGOUT-UBX_RXM_COR_USB</i>	0x209106b9	U1	-	-	Output rate of the UBX-RXM-COR message on port USB
<i>CFG-MSGGOUT-UBX_RXM_MEASX_I2C</i>	0x20910204	U1	-	-	Output rate of the UBX-RXM-MEASX message on port I2C
<i>CFG-MSGGOUT-UBX_RXM_MEASX_SPI</i>	0x20910208	U1	-	-	Output rate of the UBX-RXM-MEASX message on port SPI
<i>CFG-MSGGOUT-UBX_RXM_MEASX_UART1</i>	0x20910205	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART1
<i>CFG-MSGGOUT-UBX_RXM_MEASX_UART2</i>	0x20910206	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART2
<i>CFG-MSGGOUT-UBX_RXM_MEASX_USB</i>	0x20910207	U1	-	-	Output rate of the UBX-RXM-MEASX message on port USB
<i>CFG-MSGGOUT-UBX_RXM_RAWX_I2C</i>	0x209102a4	U1	-	-	Output rate of the UBX-RXM-RAWX message on port I2C
<i>CFG-MSGGOUT-UBX_RXM_RAWX_SPI</i>	0x209102a8	U1	-	-	Output rate of the UBX-RXM-RAWX message on port SPI
<i>CFG-MSGGOUT-UBX_RXM_RAWX_UART1</i>	0x209102a5	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART1
<i>CFG-MSGGOUT-UBX_RXM_RAWX_UART2</i>	0x209102a6	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART2
<i>CFG-MSGGOUT-UBX_RXM_RAWX_USB</i>	0x209102a7	U1	-	-	Output rate of the UBX-RXM-RAWX message on port USB
<i>CFG-MSGGOUT-UBX_RXM_RLM_I2C</i>	0x2091025e	U1	-	-	Output rate of the UBX-RXM-RLM message on port I2C
<i>CFG-MSGGOUT-UBX_RXM_RLM_SPI</i>	0x20910262	U1	-	-	Output rate of the UBX-RXM-RLM message on port SPI
<i>CFG-MSGGOUT-UBX_RXM_RLM_UART1</i>	0x2091025f	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART1
<i>CFG-MSGGOUT-UBX_RXM_RLM_UART2</i>	0x20910260	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART2
<i>CFG-MSGGOUT-UBX_RXM_RLM_USB</i>	0x20910261	U1	-	-	Output rate of the UBX-RXM-RLM message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_RXM_RTCM_I2C</i>	0x20910268	U1	-	-	Output rate of the UBX-RXM-RTCM message on port I2C
<i>CFG-MSGOUT-UBX_RXM_RTCM_SPI</i>	0x2091026c	U1	-	-	Output rate of the UBX-RXM-RTCM message on port SPI
<i>CFG-MSGOUT-UBX_RXM_RTCM_UART1</i>	0x20910269	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART1
<i>CFG-MSGOUT-UBX_RXM_RTCM_UART2</i>	0x2091026a	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART2
<i>CFG-MSGOUT-UBX_RXM_RTCM_USB</i>	0x2091026b	U1	-	-	Output rate of the UBX-RXM-RTCM message on port USB
<i>CFG-MSGOUT-UBX_RXM_SFRBX_I2C</i>	0x20910231	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port I2C
<i>CFG-MSGOUT-UBX_RXM_SFRBX_SPI</i>	0x20910235	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port SPI
<i>CFG-MSGOUT-UBX_RXM_SFRBX_UART1</i>	0x20910232	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART1
<i>CFG-MSGOUT-UBX_RXM_SFRBX_UART2</i>	0x20910233	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART2
<i>CFG-MSGOUT-UBX_RXM_SFRBX_USB</i>	0x20910234	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port USB
<i>CFG-MSGOUT-UBX_RXM_SPARTN_I2C</i>	0x20910605	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port I2C
<i>CFG-MSGOUT-UBX_RXM_SPARTN_SPI</i>	0x20910609	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port SPI
<i>CFG-MSGOUT-UBX_RXM_SPARTN_UART1</i>	0x20910606	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port UART1
<i>CFG-MSGOUT-UBX_RXM_SPARTN_UART2</i>	0x20910607	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port UART2
<i>CFG-MSGOUT-UBX_RXM_SPARTN_USB</i>	0x20910608	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port USB
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_I2C</i>	0x20910689	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port I2C
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_SPI</i>	0x2091068d	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port SPI
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_UART1</i>	0x2091068a	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port UART1
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_UART2</i>	0x2091068b	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port UART2
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_USB</i>	0x2091068c	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port USB
<i>CFG-MSGOUT-UBX_SEC_SIG_I2C</i>	0x20910634	U1	-	-	Output rate of the UBX-DBG-SKYMAP message on port I2C
<i>CFG-MSGOUT-UBX_SEC_SIG_SPI</i>	0x20910638	U1	-	-	Output rate of the UBX-SEC-SIG message on port SPI
<i>CFG-MSGOUT-UBX_SEC_SIG_UART1</i>	0x20910635	U1	-	-	Output rate of the UBX-SEC-SIG message on port UART1
<i>CFG-MSGOUT-UBX_SEC_SIG_UART2</i>	0x20910636	U1	-	-	Output rate of the UBX-SEC-SIG message on port UART2
<i>CFG-MSGOUT-UBX_SEC_SIG_USB</i>	0x20910637	U1	-	-	Output rate of the UBX-SEC-SIG message on port USB
<i>CFG-MSGOUT-UBX_TIM_TM2_I2C</i>	0x20910178	U1	-	-	Output rate of the UBX-TIM-TM2 message on port I2C



Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_TIM_TM2_SPI</i>	0x2091017c	U1	-	-	Output rate of the UBX-TIM-TM2 message on port SPI
<i>CFG-MSGOUT-UBX_TIM_TM2_UART1</i>	0x20910179	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART1
<i>CFG-MSGOUT-UBX_TIM_TM2_UART2</i>	0x2091017a	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART2
<i>CFG-MSGOUT-UBX_TIM_TM2_USB</i>	0x2091017b	U1	-	-	Output rate of the UBX-TIM-TM2 message on port USB
<i>CFG-MSGOUT-UBX_TIM_TP_I2C</i>	0x2091017d	U1	-	-	Output rate of the UBX-TIM-TP message on port I2C
<i>CFG-MSGOUT-UBX_TIM_TP_SPI</i>	0x20910181	U1	-	-	Output rate of the UBX-TIM-TP message on port SPI
<i>CFG-MSGOUT-UBX_TIM_TP_UART1</i>	0x2091017e	U1	-	-	Output rate of the UBX-TIM-TP message on port UART1
<i>CFG-MSGOUT-UBX_TIM_TP_UART2</i>	0x2091017f	U1	-	-	Output rate of the UBX-TIM-TP message on port UART2
<i>CFG-MSGOUT-UBX_TIM_TP_USB</i>	0x20910180	U1	-	-	Output rate of the UBX-TIM-TP message on port USB
<i>CFG-MSGOUT-UBX_TIM_VRFY_I2C</i>	0x20910092	U1	-	-	Output rate of the UBX-TIM-VRFY message on port I2C
<i>CFG-MSGOUT-UBX_TIM_VRFY_SPI</i>	0x20910096	U1	-	-	Output rate of the UBX-TIM-VRFY message on port SPI
<i>CFG-MSGOUT-UBX_TIM_VRFY_UART1</i>	0x20910093	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART1
<i>CFG-MSGOUT-UBX_TIM_VRFY_UART2</i>	0x20910094	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART2
<i>CFG-MSGOUT-UBX_TIM_VRFY_USB</i>	0x20910095	U1	-	-	Output rate of the UBX-TIM-VRFY message on port USB

**Table 18: CFG-MSGOUT configuration items**

### 6.9.10 CFG-NAV2: Secondary output configuration

This group contains configuration items related to the secondary (NAV2) output.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NAV2-OUT_ENABLED</i>	0x10170001	L	-	-	Enable secondary (NAV2) output Enables the secondary output (GNSS standalone output). It can be used simultaneously with the available primary output (high precision, sensor fusion or time mode output).
<i>CFG-NAV2-SBAS_USE_INTEGRITY</i>	0x10170002	L	-	-	Use SBAS integrity information in the secondary output If enabled, the receiver will only use GPS satellites for which integrity information is available. This configuration item allows configuring the SBAS integrity feature differently for the primary output and the secondary output. For configuring the primary output, see CFG-SBAS-USE_INTEGRITY.

**Table 19: CFG-NAV2 configuration items**

### 6.9.11 CFG-NAVHPG: High precision navigation configuration

This group configures items related to the operation of the receiver in high precision, for example Differential correction and other related features.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NAVHPG-DGNSSMODE</i>	0x20140011	E1	-	-	Differential corrections mode See <a href="#">Table 21</a> below for a list of possible constants for this item.

**Table 20: CFG-NAVHPG configuration items**

Constant	Value	Description
<i>RTK_FLOAT</i>	2	No attempts made to fix ambiguities
<i>RTK_FIXED</i>	3	Ambiguities are fixed whenever possible

**Table 21: Constants for CFG-NAVHPG-DGNSSMODE**

### 6.9.12 CFG-NAVSPG: Standard precision navigation configuration

This group contains configuration items related to the operation of the receiver at standard precision, including configuring position fix mode, ionospheric model selection and other related items.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NAVSPG-FIXMODE</i>	0x20110011	E1	-	-	Position fix mode
See <a href="#">Table 23</a> below for a list of possible constants for this item.					
<i>CFG-NAVSPG-INIFIX3D</i>	0x10110013	L	-	-	Initial fix must be a 3D fix
<i>CFG-NAVSPG-WKNROLLOVER</i>	0x30110017	U2	-	-	GPS week rollover number
GPS week numbers will be set correctly from this week up to 1024 weeks after this week. Range is from 1 to 4096.					
<i>CFG-NAVSPG-UTCSTANDARD</i>	0x2011001c	E1	-	-	UTC standard to be used
See section GNSS time base in the integration manual. See <a href="#">Table 24</a> below for a list of possible constants for this item.					
<i>CFG-NAVSPG-DYNMODEL</i>	0x20110021	E1	-	-	Dynamic platform model
See <a href="#">Table 25</a> below for a list of possible constants for this item.					
<i>CFG-NAVSPG-ACKAIDING</i>	0x10110025	L	-	-	Acknowledge assistance input messages
<i>CFG-NAVSPG-USE_USRDAT</i>	0x10110061	L	-	-	Use user geodetic datum parameters
This must be set together with all CFG-NAVSPG-USERDAT_* parameters.					
<i>CFG-NAVSPG-USRDAT_MAJA</i>	0x50110062	R8	-	m	Geodetic datum semi-major axis
Accepted range is from 6,300,000.0 to 6,500,000.0 meters This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
<i>CFG-NAVSPG-USRDAT_FLAT</i>	0x50110063	R8	-	-	Geodetic datum 1.0 / flattening
Accepted range is 0.0 to 500.0. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
<i>CFG-NAVSPG-USRDAT_DX</i>	0x40110064	R4	-	m	Geodetic datum X axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
<i>CFG-NAVSPG-USRDAT_DY</i>	0x40110065	R4	-	m	Geodetic datum Y axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
<i>CFG-NAVSPG-USRDAT_DZ</i>	0x40110066	R4	-	m	Geodetic datum Z axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
<i>CFG-NAVSPG-USRDAT_ROTX</i>	0x40110067	R4	-	arcsec	Geodetic datum rotation about the X axis

Configuration item	Key ID	Type	Scale	Unit	Description
Accepted range is +/- 20.0 milli arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-USRDAT_ROT_Y	0x40110068	R4	-	arcsec	Geodetic datum rotation about the Y axis ( )
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_ROT_Z	0x40110069	R4	-	arcsec	Geodetic datum rotation about the Z axis
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	Geodetic datum scale factor
Accepted range is 0.0 to 50.0 parts per million. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	Minimum number of satellites for navigation
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	Maximum number of satellites for navigation
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	Minimum satellite signal level for navigation
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	Minimum elevation for a GNSS satellite to be used in navigation
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	Number of satellites required to have C/N0 above CFG-NAVSPG-INFIL_CN0THRS for a fix to be attempted
CFG-NAVSPG-INFIL_CN0THRS	0x201100ab	U1	-	-	C/N0 threshold for deciding whether to attempt a fix
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	Output filter position DOP mask (threshold)
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	Output filter time DOP mask (threshold)
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	Output filter position accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	Output filter time accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	Output filter frequency accuracy mask (threshold)
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	Fixed altitude (mean sea level) for 2D fix mode
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	Fixed altitude variance for 2D mode
CFG-NAVSPG-CONSTR_DGNSSSTO	0x201100c4	U1	-	s	DGNSS timeout
CFG-NAVSPG-SIGATTCOMP	0x201100d6	E1	-	-	Permanently attenuated signal compensation mode
See <a href="#">Table 26</a> below for a list of possible constants for this item.					
CFG-NAVSPG-PL_ENA	0x101100d7	L	-	-	Enable Protection level
If enabled, protection level computing will be on.					

**Table 22: CFG-NAVSPG configuration items**

Constant	Value	Description
2DONLY	1	2D only
3DONLY	2	3D only
AUTO	3	Auto 2D/3D

**Table 23: Constants for CFG-NAVSPG-FIXMODE**

Constant	Value	Description
<i>AUTO</i>	0	Automatic; receiver selects based on GNSS configuration
<i>USNO</i>	3	UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time
<i>EU</i>	5	UTC as combined from multiple European laboratories; derived from Galileo time
<i>SU</i>	6	UTC as operated by the former Soviet Union (SU); derived from GLONASS time
<i>NTSC</i>	7	UTC as operated by the National Time Service Center (NTSC), China; derived from BeiDou time
<i>NPLI</i>	8	UTC as operated by the National Physics Laboratory, India (NPLI); derived from NavIC time
<i>NICT</i>	9	UTC as operated by the National Institute of Information and Communications Technology, Japan (NICT); derived from QZSS time

**Table 24: Constants for CFG-NAVSPG-UTCSTANDARD**

Constant	Value	Description
<i>PORT</i>	0	Portable
<i>STAT</i>	2	Stationary
<i>PED</i>	3	Pedestrian
<i>AUTOMOT</i>	4	Automotive
<i>SEA</i>	5	Sea
<i>AIR1</i>	6	Airborne with <1g acceleration
<i>AIR2</i>	7	Airborne with <2g acceleration
<i>AIR4</i>	8	Airborne with <4g acceleration
<i>WRIST</i>	9	Wrist-worn watch (not available in all products)
<i>BIKE</i>	10	Motorbike (not available in all products)
<i>MOWER</i>	11	Robotic lawn mower (not available in all products)
<i>ESCOOTER</i>	12	E-scooter (not available in all products)

**Table 25: Constants for CFG-NAVSPG-DYNMODEL**

Constant	Value	Description
<i>DIS</i>	0	Disable signal attenuation compensation
<i>AUTO</i>	255	Automatic signal attenuation compensation
<i>01DBHZ</i>	1	Maximum expected C/NO level is 1 dBHz
<i>02DBHZ</i>	2	Maximum expected C/NO level is 2 dBHz
<i>03DBHZ</i>	3	Maximum expected C/NO level is 3 dBHz
<i>04DBHZ</i>	4	Maximum expected C/NO level is 4 dBHz
<i>05DBHZ</i>	5	Maximum expected C/NO level is 5 dBHz
<i>06DBHZ</i>	6	Maximum expected C/NO level is 6 dBHz
<i>07DBHZ</i>	7	Maximum expected C/NO level is 7 dBHz
<i>08DBHZ</i>	8	Maximum expected C/NO level is 8 dBHz
<i>09DBHZ</i>	9	Maximum expected C/NO level is 9 dBHz
<i>10DBHZ</i>	10	Maximum expected C/NO level is 10 dBHz
<i>11DBHZ</i>	11	Maximum expected C/NO level is 11 dBHz
<i>12DBHZ</i>	12	Maximum expected C/NO level is 12 dBHz

Constant	Value	Description
13DBHZ	13	Maximum expected C/NO level is 13 dBHz
14DBHZ	14	Maximum expected C/NO level is 14 dBHz
15DBHZ	15	Maximum expected C/NO level is 15 dBHz
16DBHZ	16	Maximum expected C/NO level is 16 dBHz
17DBHZ	17	Maximum expected C/NO level is 17 dBHz
18DBHZ	18	Maximum expected C/NO level is 18 dBHz
19DBHZ	19	Maximum expected C/NO level is 19 dBHz
20DBHZ	20	Maximum expected C/NO level is 20 dBHz
21DBHZ	21	Maximum expected C/NO level is 21 dBHz
22DBHZ	22	Maximum expected C/NO level is 22 dBHz
23DBHZ	23	Maximum expected C/NO level is 23 dBHz
24DBHZ	24	Maximum expected C/NO level is 24 dBHz
25DBHZ	25	Maximum expected C/NO level is 25 dBHz
26DBHZ	26	Maximum expected C/NO level is 26 dBHz
27DBHZ	27	Maximum expected C/NO level is 27 dBHz
28DBHZ	28	Maximum expected C/NO level is 28 dBHz
29DBHZ	29	Maximum expected C/NO level is 29 dBHz
30DBHZ	30	Maximum expected C/NO level is 30 dBHz
31DBHZ	31	Maximum expected C/NO level is 31 dBHz
32DBHZ	32	Maximum expected C/NO level is 32 dBHz
33DBHZ	33	Maximum expected C/NO level is 33 dBHz
34DBHZ	34	Maximum expected C/NO level is 34 dBHz
35DBHZ	35	Maximum expected C/NO level is 35 dBHz
36DBHZ	36	Maximum expected C/NO level is 36 dBHz
37DBHZ	37	Maximum expected C/NO level is 37 dBHz
38DBHZ	38	Maximum expected C/NO level is 38 dBHz
39DBHZ	39	Maximum expected C/NO level is 39 dBHz
40DBHZ	40	Maximum expected C/NO level is 40 dBHz
41DBHZ	41	Maximum expected C/NO level is 41 dBHz
42DBHZ	42	Maximum expected C/NO level is 42 dBHz
43DBHZ	43	Maximum expected C/NO level is 43 dBHz
44DBHZ	44	Maximum expected C/NO level is 44 dBHz
45DBHZ	45	Maximum expected C/NO level is 45 dBHz
46DBHZ	46	Maximum expected C/NO level is 46 dBHz
47DBHZ	47	Maximum expected C/NO level is 47 dBHz
48DBHZ	48	Maximum expected C/NO level is 48 dBHz
49DBHZ	49	Maximum expected C/NO level is 49 dBHz
50DBHZ	50	Maximum expected C/NO level is 50 dBHz
51DBHZ	51	Maximum expected C/NO level is 51 dBHz
52DBHZ	52	Maximum expected C/NO level is 52 dBHz
53DBHZ	53	Maximum expected C/NO level is 53 dBHz

Constant	Value	Description
54DBHZ	54	Maximum expected C/NO level is 54 dBHz
55DBHZ	55	Maximum expected C/NO level is 55 dBHz
56DBHZ	56	Maximum expected C/NO level is 56 dBHz
57DBHZ	57	Maximum expected C/NO level is 57 dBHz
58DBHZ	58	Maximum expected C/NO level is 58 dBHz
59DBHZ	59	Maximum expected C/NO level is 59 dBHz
60DBHZ	60	Maximum expected C/NO level is 60 dBHz
61DBHZ	61	Maximum expected C/NO level is 61 dBHz
62DBHZ	62	Maximum expected C/NO level is 62 dBHz
63DBHZ	63	Maximum expected C/NO level is 63 dBHz

**Table 26: Constants for CFG-NAVSPG-SIGATTCOMP**

### 6.9.13 CFG-NMEA: NMEA protocol configuration

This group configures the [NMEA protocol](#). See section [NMEA protocol configuration](#) for a detailed description of the configuration effects on NMEA output.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NMEA-PROTVR	0x20930001	E1	-	-	NMEA protocol version See <a href="#">Table 28</a> below for a list of possible constants for this item.
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	Maximum number of SVs to report per Talker ID See <a href="#">Table 29</a> below for a list of possible constants for this item.
CFG-NMEA-COMPAT	0x10930003	L	-	-	Enable compatibility mode This might be needed for certain applications, e.g. for an NMEA parser that expects a fixed number of digits in position coordinates.
CFG-NMEA-CONSIDER	0x10930004	L	-	-	Enable considering mode This will affect NMEA output used satellite count. If set, also considered satellites (e.g. RAIMED) are counted as used satellites as well.
CFG-NMEA-LIMIT82	0x10930005	L	-	-	Enable strict limit to 82 characters maximum NMEA message length
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	Enable high precision mode This flag cannot be set in conjunction with either CFG-NMEA-COMPAT or CFG-NMEA-LIMIT82 mode.
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	Display configuration for SVs that do not have value defined in NMEA Configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also <a href="#">Satellite Numbering</a> . See <a href="#">Table 30</a> below for a list of possible constants for this item.
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	Disable reporting of GPS satellites
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	Disable reporting of SBAS satellites
CFG-NMEA-FILT_GAL	0x10930013	L	-	-	Disable reporting of Galileo satellites
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	Disable reporting of QZSS satellites
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	Disable reporting of GLONASS satellites
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	Disable reporting of BeiDou satellites
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	Enable position output for failed or invalid fixes
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	Enable position output for invalid fixes

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NMEA-OUT_INVTIME</i>	0x10930023	L	-	-	Enable time output for invalid times
<i>CFG-NMEA-OUT_INVDATE</i>	0x10930024	L	-	-	Enable date output for invalid dates
<i>CFG-NMEA-OUT_ONLYGPS</i>	0x10930025	L	-	-	Restrict output to GPS satellites only
<i>CFG-NMEA-OUT_FROZENCOG</i>	0x10930026	L	-	-	Enable course over ground output even if it is frozen
<i>CFG-NMEA-MAINTALKERID</i>	0x20930031	E1	-	-	Main Talker ID By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see <a href="#">CFG-SIGNAL</a> ). This field enables the main Talker ID to be overridden. See <a href="#">Table 31</a> below for a list of possible constants for this item.
<i>CFG-NMEA-GSVTALKERID</i>	0x20930032	E1	-	-	Talker ID for GSV NMEA messages By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden. See <a href="#">Table 32</a> below for a list of possible constants for this item.
<i>CFG-NMEA-BDSTALKERID</i>	0x30930033	U2	-	-	BeiDou Talker ID Sets the two ASCII characters that should be used for the BeiDou Talker ID. If these are set to zero, the default BeiDou Talker ID will be used.

**Table 27: CFG-NMEA configuration items**

Constant	Value	Description
<i>V21</i>	21	NMEA protocol version 2.1
<i>V23</i>	23	NMEA protocol version 2.3
<i>V40</i>	40	NMEA protocol version 4.0 (not available in all products)
<i>V41</i>	41	NMEA protocol version 4.10 (not available in all products)
<i>V411</i>	42	NMEA protocol version 4.11 (not available in all products)

**Table 28: Constants for CFG-NMEA-PROTVR**

Constant	Value	Description
<i>UNLIM</i>	0	Unlimited
<i>8SVS</i>	8	8 SVs
<i>12SVS</i>	12	12 SVs
<i>16SVS</i>	16	16 SVs

**Table 29: Constants for CFG-NMEA-MAXSVS**

Constant	Value	Description
<i>STRICT</i>	0	Strict - satellites are not output
<i>EXTENDED</i>	1	Extended - use proprietary numbering

**Table 30: Constants for CFG-NMEA-SVNUMBERING**

Constant	Value	Description
<i>AUTO</i>	0	Main Talker ID is not overridden
<i>GP</i>	1	Set main Talker ID to 'GP'
<i>GL</i>	2	Set main Talker ID to 'GL'
<i>GN</i>	3	Set main Talker ID to 'GN'
<i>GA</i>	4	Set main Talker ID to 'GA' (not available in all products)
<i>GB</i>	5	Set main Talker ID to 'GB' (not available in all products)

Constant	Value	Description
<i>GQ</i>	7	Set main Talker ID to 'GQ' (not available in all products)

**Table 31: Constants for CFG-NMEA-MAINTALKERID**

Constant	Value	Description
<i>GNSS</i>	0	Use GNSS-specific Talker ID (as defined by NMEA)
<i>MAIN</i>	1	Use the main Talker ID

**Table 32: Constants for CFG-NMEA-GSVTALKERID**

### 6.9.14 CFG-QZSS: QZSS system configuration

Note that enabling and disabling of individual GNSS is done via the [CFG-SIGNAL](#) configuration group.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-QZSS-USE_SLAS_DGNSS</i>	0x10370005	L	-	-	Apply QZSS SLAS DGNSS corrections
<i>CFG-QZSS-USE_SLAS_TESTMODE</i>	0x10370006	L	-	-	Use QZSS SLAS data when it is in test mode (SLAS msg 0)
<i>CFG-QZSS-USE_SLAS_RAIM_UNCORR</i>	0x10370007	L	-	-	Raim out measurements that are not corrected by QZSS SLAS, if at least 5 measurements are corrected
<i>CFG-QZSS-SLAS_MAX_BASELINE</i>	0x30370008	U2	-	km	Maximum baseline distance to closest GMS

SLAS corrections are only applied if the receiver is at most this far away from the closest ground monitoring station (GMS). Note that due to the nature of the service, the usefulness of corrections degrades with distance. When far away from GMS, SBAS may be a better correction source.

**Table 33: CFG-QZSS configuration items**

### 6.9.15 CFG-RATE: Navigation and measurement rate configuration

The configuration items in this group allow the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution will always be aligned to the top of a second zero (first second of the week) of the configured reference time system. The navigation period is an integer multiple of the measurement period.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-RATE-MEAS</i>	0x30210001	U2	0.001	s	Nominal time between GNSS measurements E.g. 100 ms results in 10 Hz measurement rate, 1000 ms = 1 Hz measurement rate. The minimum value is 25.
<i>CFG-RATE-NAV</i>	0x30210002	U2	-	-	Ratio of number of measurements to number of navigation solutions E.g. 5 means five measurements for every navigation solution. The minimum value is 1. The maximum value is 127.
<i>CFG-RATE-TIMEREF</i>	0x20210003	E1	-	-	Time system to which measurements are aligned See <a href="#">Table 35</a> below for a list of possible constants for this item.
<i>CFG-RATE-NAV_PRIOR</i>	0x20210004	U1	-	Hz	Output rate of priority navigation mode messages



Configuration item	Key ID	Type	Scale	Unit	Description
					<p>When not zero, the receiver outputs navigation data as a set of messages with two priority levels: 1) <i>Priority messages</i>: Navigation solution data are computed and output with high rate and low latency; 2) <i>Non-priority messages</i> auxiliary navigation data are computed and output with low rate and higher latency.</p> <p>When zero, the receiver outputs the navigation data as a set of messages with the same priority.</p> <p>The <i>priority messages</i> are: UBX-NAV-PVT, UBX-NAV-POSECEF, UBX-NAV-POSLLH, UBX-NAV-VELECEF, UBX-NAV-VELNED, UBX-NAV-HPPOSECEF, UBX-NAV-HPPOSLLH, UBX-ESF-INS, UBX-NAV-ATT, UBX-NAV-PVAT, NMEA-Standard-DTM, NMEA-Standard-RMC, NMEA-Standard-VTG, NMEA-Standard-GNS, NMEA-Standard-GGA, NMEA-Standard-GLL, NMEA-Standard-THS and NMEA-PUBX-POSITION. Note that some of these messages are not available on some products.</p> <p>The allowed range for the priority navigation mode is 0-30 Hz.</p> <p>See section Priority navigation mode in the integration manual.</p>

**Table 34: CFG-RATE configuration items**

Constant	Value	Description
UTC	0	Align measurements to UTC time
GPS	1	Align measurements to GPS time
GLO	2	Align measurements to GLONASS time
BDS	3	Align measurements to BeiDou time
GAL	4	Align measurements to Galileo time
NAVIC	5	Align measurements to NavIC time

**Table 35: Constants for CFG-RATE-TIMEREF**

### 6.9.16 CFG-RINV: Remote inventory

The remote inventory enables storing user-defined data in the non-volatile memory of the receiver. The data can be either binary or a string of ASCII characters. In the latter case, it can optionally be output at startup after the boot screen.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-RINV-DUMP	0x10c70001	L	-	-	Dump data at startup When true, data will be dumped to the interface on startup, unless CFG-RINV-BINARY is set.
CFG-RINV-BINARY	0x10c70002	L	-	-	Data is binary When true, the data is treated as binary data.
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	Size of data Size of data to store/be stored in the remote inventory (maximum 30 bytes).
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	Data bytes 1-8 (LSB) Data to store/be stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	Data bytes 9-16 Data to store/be stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	Data bytes 17-24 Data to store/be stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	Data bytes 25-30 (MSB) Data to store/be stored in remote inventory - max 6 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.

**Table 36: CFG-RINV configuration items**

### 6.9.17 CFG-RTCM: RTCM protocol configuration

Configures the RTCM protocol.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-RTCM-DF003_IN</i>	0x30090008	U2	-	-	RTCM DF003 (Reference station ID) input value Value to use for filtering out RTCM input messages based on their DF003 data field (Reference station ID) value. To be used in conjunction with CFG-RTCM-DF003_IN_FILTER. The value can be 0..4095.
<i>CFG-RTCM-DF003_IN_FILTER</i>	0x20090009	E1	-	-	RTCM input filter configuration based on RTCM DF003 (Reference station ID) value Configures if and how the filtering out of RTCM input messages based on their DF003 data field (Reference station ID) operates. See <a href="#">Table 38</a> below for a list of possible constants for this item.

**Table 37: CFG-RTCM configuration items**

Constant	Value	Description
<i>DISABLED</i>	0	Disabled RTCM input filter; all input messages allowed
<i>RELAXED</i>	1	Relaxed RTCM input filter; input messages allowed must contain a DF003 data field matching the CFG-RTCM-DF003_IN value or not contain by specification the DF003 data field
<i>STRICT</i>	2	Strict RTCM input filter; input messages allowed must contain a DF003 data field matching the CFG-RTCM-DF003 value

**Table 38: Constants for CFG-RTCM-DF003\_IN\_FILTER**

### 6.9.18 CFG-SBAS: SBAS configuration

This group configures the SBAS receiver subsystem (i.e. WAAS, EGNOS, MSAS). See SBAS configuration settings description in the integration manual for a detailed description of how these settings affect receiver operation.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SBAS-USE_TESTMODE</i>	0x10360002	L	-	-	Use SBAS data when it is in test mode (SBAS msg 0)
<i>CFG-SBAS-USE_RANGING</i>	0x10360003	L	-	-	Use SBAS GEOs as a ranging source (for navigation)
<i>CFG-SBAS-USE_DIFFCORR</i>	0x10360004	L	-	-	Use SBAS differential corrections
<i>CFG-SBAS-USE_INTEGRITY</i>	0x10360005	L	-	-	Use SBAS integrity information If enabled, the receiver will only use GPS satellites for which integrity information is available
<i>CFG-SBAS-USE_IONOONLY</i>	0x10360007	L	-	-	Use SBAS ionosphere correction only
<i>CFG-SBAS-PRNSCANMASK</i>	0x50360006	X8	-	-	SBAS PRN search configuration This configuration item determines which SBAS PRNs should be searched. Setting it to 0 indicates auto-scanning all SBAS PRNs. For non-zero values the bits correspond to the allocated SBAS PRNs ranging from PRN120 (bit 0) to PRN158 (bit 38), where a bit set enables searching for the corresponding PRN. See <a href="#">Table 40</a> below for a list of possible constants for this item.

**Table 39: CFG-SBAS configuration items**

Constant	Value	Description
<i>ALL</i>	0x0000000000000000	Enable search for all SBAS PRNs
<i>PRN120</i>	0x0000000000000001	Enable search for SBAS PRN120
<i>PRN121</i>	0x0000000000000002	Enable search for SBAS PRN121
<i>PRN122</i>	0x0000000000000004	Enable search for SBAS PRN122
<i>PRN123</i>	0x0000000000000008	Enable search for SBAS PRN123
<i>PRN124</i>	0x0000000000000010	Enable search for SBAS PRN124
<i>PRN125</i>	0x0000000000000020	Enable search for SBAS PRN125

Constant	Value	Description
PRN126	0x0000000000000040	Enable search for SBAS PRN126
PRN127	0x0000000000000080	Enable search for SBAS PRN127
PRN128	0x0000000000000100	Enable search for SBAS PRN128
PRN129	0x0000000000000200	Enable search for SBAS PRN129
PRN130	0x0000000000000400	Enable search for SBAS PRN130
PRN131	0x0000000000000800	Enable search for SBAS PRN131
PRN132	0x0000000000001000	Enable search for SBAS PRN132
PRN133	0x0000000000002000	Enable search for SBAS PRN133
PRN134	0x0000000000004000	Enable search for SBAS PRN134
PRN135	0x0000000000008000	Enable search for SBAS PRN135
PRN136	0x0000000000010000	Enable search for SBAS PRN136
PRN137	0x0000000000020000	Enable search for SBAS PRN137
PRN138	0x0000000000040000	Enable search for SBAS PRN138
PRN139	0x0000000000080000	Enable search for SBAS PRN139
PRN140	0x0000000000100000	Enable search for SBAS PRN140
PRN141	0x0000000000200000	Enable search for SBAS PRN141
PRN142	0x0000000000400000	Enable search for SBAS PRN142
PRN143	0x0000000000800000	Enable search for SBAS PRN143
PRN144	0x0000000001000000	Enable search for SBAS PRN144
PRN145	0x0000000002000000	Enable search for SBAS PRN145
PRN146	0x0000000004000000	Enable search for SBAS PRN146
PRN147	0x0000000008000000	Enable search for SBAS PRN147
PRN148	0x0000000010000000	Enable search for SBAS PRN148
PRN149	0x0000000020000000	Enable search for SBAS PRN149
PRN150	0x0000000040000000	Enable search for SBAS PRN150
PRN151	0x0000000080000000	Enable search for SBAS PRN151
PRN152	0x0000000100000000	Enable search for SBAS PRN152
PRN153	0x0000000200000000	Enable search for SBAS PRN153
PRN154	0x0000000400000000	Enable search for SBAS PRN154
PRN155	0x0000000800000000	Enable search for SBAS PRN155
PRN156	0x0000001000000000	Enable search for SBAS PRN156
PRN157	0x0000002000000000	Enable search for SBAS PRN157
PRN158	0x0000004000000000	Enable search for SBAS PRN158

**Table 40: Constants for CFG-SBAS-PRNSCANMASK**

## 6.9.19 CFG-SEC: Security configuration

Security configuration.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	Configuration lockdown When set, receiver configuration is locked and cannot be changed any more.
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	Configuration lockdown exempted group 1

Configuration item	Key ID	Type	Scale	Unit	Description
This item can be set before enabling the configuration lockdown. It will make writes to the specified group possible after the configuration lockdown has been enabled.					
<i>CFG-SEC-CFG_LOCK_UNLOCKGRP2</i>	0x30f6000b	U2	-	-	Configuration lockdown exempted group 2
This item can be set before enabling the configuration lockdown. It will make writes to the specified group possible after the configuration lockdown has been enabled.					
<i>CFG-SEC-JAMDET_SENSITIVITY_HI</i>	0x10f60051	L	-	-	When set, go for a more sensitive jamming detection (at the cost of increased false alarm rate).

**Table 41: CFG-SEC configuration items**

## 6.9.20 CFG-SFCORE: Sensor fusion (SF) core configuration

This group contains configuration items for dead reckoning (DR) products.

More details on the configuration parameters can be found in the ADR section of the integration manual.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SFCORE-USE_SF</i>	0x10080001	L	-	-	Use ADR/UDR sensor fusion

**Table 42: CFG-SFCORE configuration items**

## 6.9.21 CFG-SFIMU: Sensor fusion (SF) inertial measurement unit (IMU) configuration

This group contains configuration items related to the Inertial Measurement Unit (IMU) for Dead Reckoning (DR) products.

More details on the configuration parameters can be found in the sensor fusion sections of the integration manual.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SFIMU-GYRO_TC_UPDATE_PERIOD</i>	0x30060007	U2	-	s	Time period between each update for the saved temperature-dependent gyroscope bias table
<i>CFG-SFIMU-GYRO_RMSTHDL</i>	0x20060008	U1	2 <sup>-8</sup>	deg/s	Gyroscope sensor RMS threshold Gyroscope sensor RMS threshold below which automatically estimated gyroscope noise-level (accuracy) is updated.
<i>CFG-SFIMU-GYRO_FREQUENCY</i>	0x20060009	U1	-	Hz	Nominal gyroscope sensor data sampling frequency
<i>CFG-SFIMU-GYRO_LATENCY</i>	0x3006000a	U2	-	ms	Gyroscope sensor data latency due to e.g. CAN bus
<i>CFG-SFIMU-GYRO_ACCURACY</i>	0x3006000b	U2	1e-3	deg/s	Gyroscope sensor data accuracy Accuracy of gyroscope sensor data. If GYRO_ACCURACY is not set, the accuracy is estimated automatically.
<i>CFG-SFIMU-ACCEL_RMSTHDL</i>	0x20060015	U1	2 <sup>-6</sup>	m/s <sup>2</sup>	Accelerometer RMS threshold Accelerometer RMS threshold below which automatically estimated accelerometer noise-level (accuracy) is updated.
<i>CFG-SFIMU-ACCEL_FREQUENCY</i>	0x20060016	U1	-	Hz	Nominal accelerometer sensor data sampling frequency
<i>CFG-SFIMU-ACCEL_LATENCY</i>	0x30060017	U2	-	ms	Accelerometer sensor data latency due to e.g. CAN bus
<i>CFG-SFIMU-ACCEL_ACCURACY</i>	0x30060018	U2	1e-4	m/s <sup>2</sup>	Accelerometer sensor data accuracy Accuracy of accelerometer sensor data. If ACCEL_ACCURACY is not set, the accuracy is estimated automatically.
<i>CFG-SFIMU-IMU_EN</i>	0x1006001d	L	-	-	IMU enabled Flag indicating that IMU is connected to the sensor I2C.
<i>CFG-SFIMU-IMU_I2C_SCL_PIO</i>	0x2006001e	U1	-	-	SCL PIO of the IMU I2C

Configuration item	Key ID	Type	Scale	Unit	Description
					IMU I2C SCL PIO number that should be used by the FW for communication with the sensor.
<i>CFG-SFIMU-IMU_I2C_SDA_PIO</i>	0x2006001f	U1	-	-	SDA PIO of the IMU I2C
					IMU I2C SDA PIO number that should be used by the FW for communication with the sensor.
<i>CFG-SFIMU-AUTO_MNTALG_ENA</i>	0x10060027	L	-	-	Enable automatic IMU-mount alignment
					Enable automatic IMU-mount alignment. This flag can only be used with modules containing an internal IMU.
<i>CFG-SFIMU-IMU_MNTALG_YAW</i>	0x4006002d	U4	1e-2	deg	User-defined IMU-mount yaw angle [0, 36000]
					User-defined IMU-mount yaw angle, e.g. for 60.00 degree yaw angle the configured value would be 6000.
<i>CFG-SFIMU-IMU_MNTALG_PITCH</i>	0x3006002e	I2	1e-2	deg	User-defined IMU-mount pitch angle [-9000, 9000]
					User-defined IMU-mount pitch angle, e.g. for 60.00 degree pitch angle the configured value would be 6000.
<i>CFG-SFIMU-IMU_MNTALG_ROLL</i>	0x3006002f	I2	1e-2	deg	User-defined IMU-mount roll angle [-18000, 18000]
					User-defined IMU-mount roll angle, e.g. for 60.00 degree roll angle the configured value would be 6000.

**Table 43: CFG-SFIMU configuration items**

### 6.9.22 CFG-SFODO: Sensor fusion (SF) odometer configuration

This group contains configuration items related to odometer sensors for Dead Reckoning (DR) products.

More details on the configuration parameters can be found in the ADR section of the integration manual.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SFODO-COMBINE_TICKS</i>	0x10070001	L	-	-	Use combined rear wheel ticks instead of the single tick
<i>CFG-SFODO-USE_SPEED</i>	0x10070003	L	-	-	Use speed measurements
					Use speed measurements (data type 11 in ESF-MEAS) instead of single ticks (data type 10)
<i>CFG-SFODO-DIS_AUTOCOUNTMAX</i>	0x10070004	L	-	-	Disable automatic estimation of maximum absolute wheel tick counter
					Disable automatic estimation of maximum absolute wheel tick counter value. See <a href="#">CFG-SFODO-COUNT_MAX</a> item description for more details.
<i>CFG-SFODO-DIS_AUTODIRPINPOL</i>	0x10070005	L	-	-	Disable automatic wheel tick direction pin polarity detection
					Disable automatic wheel tick direction pin polarity detection. See <a href="#">CFG-SFODO-DIR_PINPOL</a> item description for more details.
<i>CFG-SFODO-DIS_AUTOSPEED</i>	0x10070006	L	-	-	Disable automatic receiver reconfiguration for processing speed data instead of wheel tick data
					Disable automatic receiver reconfiguration for processing speed data instead of wheel tick data if no wheel tick data are available but speed data were detected. See <a href="#">CFG-SFODO-USE_SPEED</a> item description for more details.
<i>CFG-SFODO-FACTOR</i>	0x40070007	U4	1e-6	-	Wheel tick scale factor
					Wheel tick scale factor to obtain distance [m] from wheel ticks.
<i>CFG-SFODO-QUANT_ERROR</i>	0x40070008	U4	1e-6	m (or m/s)	Wheel tick quantization
					Wheel tick quantization. If <a href="#">CFG-SFODO-USE_SPEED</a> is set then this is interpreted as the speed measurement error RMS.
<i>CFG-SFODO-COUNT_MAX</i>	0x40070009	U4	-	-	Wheel tick counter maximum value

Configuration item	Key ID	Type	Scale	Unit	Description
					<p>Wheel tick counter maximum value (rollover - 1). If null, relative wheel tick counts are assumed (and therefore no rollover). If not zero, absolute wheel tick counts are assumed and the value corresponds to the highest tick count value before rollover happens. If CFG-SFODO-USE_SPEED is set then this value is ignored.</p> <p>If value is set to 1, absolute wheel tick counts are assumed and the value will be automatically calculated if possible. It is only possible for automatic calibration to calculate wheel tick counter maximum value if it can be represented as a number of set bits (i.e. 2<sup>N</sup>). If it cannot be represented in this way it must be set to the correct absolute tick value manually.</p>
CFG-SFODO-LATENCY	0x3007000a	U2	-	ms	Wheel tick data latency due to e.g. CAN bus
CFG-SFODO-FREQUENCY	0x2007000b	U1	-	Hz	Nominal wheel tick data frequency (0 = not set)
CFG-SFODO-CNT_BOTH_EDGES	0x1007000d	L	-	-	Count both rising and falling edges on wheel tick signal
					<p>Count both rising and falling edges on wheel tick signal (only relevant if wheel tick is measured by the u-blox receiver).  <i>Only turn on this feature if the wheel tick signal has 50 % duty cycle. Turning on this feature with fixed-width pulses can lead to severe degradation of performance.</i></p> <p>Use wheel tick pin for speed measurement. This field can only be used with modules supporting analog wheel tick signals.</p>
CFG-SFODO-SPEED_BAND	0x3007000e	U2	-	cm/s	Speed sensor dead band (0 = not set)
CFG-SFODO-USE_WT_PIN	0x1007000f	L	-	-	Wheel tick signal enabled
					Flag indicating that wheel tick signal is connected.
CFG-SFODO-DIR_PINPOL	0x10070010	L	-	-	Wheel tick direction pin polarity
					<p>0 : Pin high means forwards direction            1 : Pin high means backwards direction</p>
CFG-SFODO-DIS_AUTOSW	0x10070011	L	-	-	Disable automatic use of wheel tick or speed data received over the software interface
					Disable automatic use of wheel tick or speed data received over the software interface if available. In this case, data coming from the hardware interface (wheel tick pins) will automatically be ignored if wheel tick/speed data are available from the software interface. See CFG-SFODO-USE_WT_PIN description for more details.
CFG-SFODO-DIS_DIR_INFO	0x1007001c	L	-	-	Do not use directional information
					Directional information including the direction bit and pin as well as the sign of the speed data is ignored.

**Table 44: CFG-SFODO configuration items**

### 6.9.23 CFG-SIGNAL: Satellite systems (GNSS) signal configuration

The enable items for individual signals are governed by their corresponding constellation enable item. It is necessary that at least one signal from a major GNSS constellation is enabled. See GNSS signal configuration in the integration manual for more details.

Configuration specific to a GNSS system is available in other groups (e.g. CFG-SBAS).

Note that changes to any items within this group will trigger a reset to the GNSS subsystem. The reset takes some time, so wait first for the acknowledgement from the receiver and then 0.5 seconds before sending the next command.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	GPS enable
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	GPS L1C/A
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	GPS L2C
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	SBAS enable
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	SBAS L1C/A
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	Galileo enable
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	Galileo E1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SIGNAL-GAL_E5B_ENA</i>	0x1031000a	L	-	-	Galileo E5b
<i>CFG-SIGNAL-BDS_ENA</i>	0x10310022	L	-	-	BeiDou Enable
<i>CFG-SIGNAL-BDS_B1_ENA</i>	0x1031000d	L	-	-	BeiDou B1I
<i>CFG-SIGNAL-BDS_B2_ENA</i>	0x1031000e	L	-	-	BeiDou B2I
<i>CFG-SIGNAL-QZSS_ENA</i>	0x10310024	L	-	-	QZSS enable
<i>CFG-SIGNAL-QZSS_L1CA_ENA</i>	0x10310012	L	-	-	QZSS L1C/A
<i>CFG-SIGNAL-QZSS_L1S_ENA</i>	0x10310014	L	-	-	QZSS L1S
<i>CFG-SIGNAL-QZSS_L2C_ENA</i>	0x10310015	L	-	-	QZSS L2C
<i>CFG-SIGNAL-GLO_ENA</i>	0x10310025	L	-	-	GLONASS enable
<i>CFG-SIGNAL-GLO_L1_ENA</i>	0x10310018	L	-	-	GLONASS L1
<i>CFG-SIGNAL-GLO_L2_ENA</i>	0x1031001a	L	-	-	GLONASS L2

**Table 45: CFG-SIGNAL configuration items**

### 6.9.24 CFG-SPARTN: SPARTN configuration

Configuration for the SPARTN input stream.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SPARTN-USE_SOURCE</i>	0x20a70001	E1	-	-	Selector for source SPARTN stream

See [Table 47](#) below for a list of possible constants for this item.

**Table 46: CFG-SPARTN configuration items**

Constant	Value	Description
<i>IP</i>	0x00	IP source (default)
Selects IP (Raw) source		
<i>LBAND</i>	0x01	L-Band source
Selects L-Band (UBX-RXM-PMP) source		

**Table 47: Constants for CFG-SPARTN-USE\_SOURCE**

### 6.9.25 CFG-SPI: Configuration of the SPI interface

Settings needed to configure the SPI communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SPI-MAXFF</i>	0x20640001	U1	-	-	Number of bytes containing 0xFF to receive before switching off reception. Range: 0 (mechanism off) - 63
<i>CFG-SPI-CPOLARITY</i>	0x10640002	L	-	-	Clock polarity select: 0: Active High Clock, SCLK idles low, 1: Active Low Clock, SCLK idles high
<i>CFG-SPI-CPHASE</i>	0x10640003	L	-	-	Clock phase select: 0: Data captured on first edge of SCLK, 1: Data captured on second edge of SCLK
<i>CFG-SPI-EXTENDEDTIMEOUT</i>	0x10640005	L	-	-	Flag to disable timeouting the interface after 1.5s

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SPI-ENABLED</i>	0x10640006	L	-	-	Flag to indicate if the SPI interface should be enabled

**Table 48: CFG-SPI configuration items**

### 6.9.26 CFG-SPIINPROT: Input protocol configuration of the SPI interface

Input protocol enable flags of the SPI interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SPIINPROT-UBX</i>	0x10790001	L	-	-	Flag to indicate if UBX should be an input protocol on SPI
<i>CFG-SPIINPROT-NMEA</i>	0x10790002	L	-	-	Flag to indicate if NMEA should be an input protocol on SPI
<i>CFG-SPIINPROT-RTCM3X</i>	0x10790004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on SPI
<i>CFG-SPIINPROT-SPARTN</i>	0x10790005	L	-	-	Flag to indicate if SPARTN should be an input protocol on SPI

**Table 49: CFG-SPIINPROT configuration items**

### 6.9.27 CFG-SPIOUTPROT: Output protocol configuration of the SPI interface

Output protocol enable flags of the SPI interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SPIOUTPROT-UBX</i>	0x107a0001	L	-	-	Flag to indicate if UBX should be an output protocol on SPI
<i>CFG-SPIOUTPROT-NMEA</i>	0x107a0002	L	-	-	Flag to indicate if NMEA should be an output protocol on SPI

**Table 50: CFG-SPIOUTPROT configuration items**

### 6.9.28 CFG-TP: Time pulse configuration

Use this group to configure the generation of time pulses.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-TP-PULSE_DEF</i>	0x20050023	E1	-	-	Determines whether the time pulse is interpreted as frequency or period
See <a href="#">Table 52</a> below for a list of possible constants for this item.					
<i>CFG-TP-PULSE_LENGTH_DEF</i>	0x20050030	E1	-	-	Determines whether the time pulse length is interpreted as length[us] or pulse ratio[%]
See <a href="#">Table 53</a> below for a list of possible constants for this item.					
<i>CFG-TP-ANT_CABLEDELAY</i>	0x30050001	I2	1e-9	s	Antenna cable delay in [ns]
<i>CFG-TP-PERIOD_TP1</i>	0x40050002	U4	1e-6	s	Time pulse period (TP1) in [us]
This will only be used if CFG-TP-PULSE_DEF=PERIOD.					
<i>CFG-TP-PERIOD_LOCK_TP1</i>	0x40050003	U4	1e-6	s	Time pulse period when locked to GNSS time (TP1) in [us]
Only used if CFG-TP-PULSE_DEF=PERIOD and CFG-TP-USE_LOCKED_TP1 is set.					
<i>CFG-TP-FREQ_TP1</i>	0x40050024	U4	-	Hz	Time pulse frequency (TP1) in [Hz]
This will only be used if CFG-TP-PULSE_DEF=FREQ.					
<i>CFG-TP-FREQ_LOCK_TP1</i>	0x40050025	U4	-	Hz	Time pulse frequency when locked to GNSS time (TP1) in [Hz]
Only used if CFG-TP-PULSE_DEF=FREQ and CFG-TP-USE_LOCKED_TP1 is set.					
<i>CFG-TP-LEN_TP1</i>	0x40050004	U4	1e-6	s	Time pulse length (TP1) in [us]



Configuration item	Key ID	Type	Scale	Unit	Description
Only used if CFG-TP-PULSE_LENGTH_DEF=LENGTH is set.					
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	1e-6	s	Time pulse length when locked to GNSS time (TP1) in [us]
Only used if CFG-TP-PULSE_LENGTH_DEF=LENGTH and CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	Time pulse duty cycle (TP1) in [%]
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO is set.					
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	Time pulse duty cycle when locked to GNSS time (TP1) in [%]
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO and CFG-TP-USE_LOCKED_TP1 are set.					
CFG-TP-USER_DELAY_TP1	0x40050006	I4	1e-9	s	User-configurable time pulse delay (TP1) in [ns]
CFG-TP_TP1_ENA	0x10050007	L	-	-	Enable the first time pulse if pin associated with time pulse is assigned for another function, the other function takes precedence. Must be set for frequency-time products.
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	Sync time pulse to GNSS time or local clock (TP1)  If set, sync to GNSS if GNSS time is valid. Otherwise, use local clock. This flag can be unset only in Timing product variants.
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	Use locked parameters when possible (TP1) If set, use CFG-TP-PERIOD_LOCK_TP1 and CFG-TP-LEN_LOCK_TP1 as soon as GNSS time is valid. Otherwise, use CFG-TP-PERIOD_TP1 and CFG-TP-LEN_TP1.
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	Align time pulse to top of second (TP1)  To use this feature, CFG-TP-SYNC_GNSS_TP1 must be set. Time pulse period must be an integer fraction of 1 second.
CFG-TP-POL_TP1	0x1005000b	L	-	-	Set time pulse polarity (TP1)  false (0) : falling edge at top of second. true (1) : rising edge at top of second.
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	Time grid to use (TP1)  Only relevant if CFG-TP-SYNC_GNSS_TP1 is set. Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it will attempt to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in CFG-SIGNAL-*. No TP is generated if the selected GNSS constellation is not configured. See <a href="#">Table 54</a> below for a list of possible constants for this item.
CFG-TP-DRSTR_TP1	0x20050035	E1	-	-	Set drive strength of TP1  Time Pulse pin 1 (TP1) can support 4 possible drive strength cases: 2, 4, 8 and 12 mA See <a href="#">Table 55</a> below for a list of possible constants for this item.

**Table 51: CFG-TP configuration items**

Constant	Value	Description
PERIOD	0	Time pulse period [us]
FREQ	1	Time pulse frequency [Hz]

**Table 52: Constants for CFG-TP-PULSE\_DEF**

Constant	Value	Description
RATIO	0	Time pulse ratio

Constant	Value	Description
<i>LENGTH</i>	1	Time pulse length

**Table 53: Constants for CFG-TP-PULSE\_LENGTH\_DEF**

Constant	Value	Description
<i>UTC</i>	0	UTC time reference
<i>GPS</i>	1	GPS time reference
<i>GLO</i>	2	GLONASS time reference
<i>BDS</i>	3	BeiDou time reference
<i>GAL</i>	4	Galileo time reference
<i>NAVIC</i>	5	NavIC time reference
<i>LOCAL</i>	15	Receiver's local time reference

**Table 54: Constants for CFG-TP-TIMEGRID\_TP1**

Constant	Value	Description
<i>DRIVE_STRENGTH_2MA</i>	0	2 mA drive strength
<i>DRIVE_STRENGTH_4MA</i>	1	4 mA drive strength
<i>DRIVE_STRENGTH_8MA</i>	2	8 mA drive strength
<i>DRIVE_STRENGTH_12MA</i>	3	12 mA drive strength

**Table 55: Constants for CFG-TP-DRSTR\_TP1**

### 6.9.29 CFG-TXREADY: TX ready configuration

Configuration of the TX ready pin.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-TXREADY-ENABLED</i>	0x10a20001	L	-	-	Flag to indicate if TX ready pin mechanism should be enabled
<i>CFG-TXREADY-POLARITY</i>	0x10a20002	L	-	-	The polarity of the TX ready pin: false:high-active, true:low-active
<i>CFG-TXREADY-PIN</i>	0x20a20003	U1	-	-	Pin number to use for the TX ready functionality
<i>CFG-TXREADY-THRESHOLD</i>	0x30a20004	U2	-	-	Amount of data that should be ready on the interface before triggering the TX ready pin  The value is amount of 8-byte chunks. For example, value of 250 sets the trigger to 2000 bytes.
<i>CFG-TXREADY-INTERFACE</i>	0x20a20005	E1	-	-	Interface where the TX ready feature should be linked to

See [Table 57](#) below for a list of possible constants for this item.

**Table 56: CFG-TXREADY configuration items**

Constant	Value	Description
<i>I2C</i>	0	I2C interface
<i>SPI</i>	1	SPI interface

**Table 57: Constants for CFG-TXREADY-INTERFACE**

### 6.9.30 CFG-UART1: Configuration of the UART1 interface

Settings needed to configure the UART1 communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART1-BAUDRATE</i>	0x40520001	U4	-	-	The baud rate that should be configured on the UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART1-STOPBITS</i>	0x20520002	E1	-	-	Number of stopbits that should be used on UART1
See <a href="#">Table 59</a> below for a list of possible constants for this item.					
<i>CFG-UART1-DATABITS</i>	0x20520003	E1	-	-	Number of databits that should be used on UART1
See <a href="#">Table 60</a> below for a list of possible constants for this item.					
<i>CFG-UART1-PARITY</i>	0x20520004	E1	-	-	Parity mode that should be used on UART1
See <a href="#">Table 61</a> below for a list of possible constants for this item.					
<i>CFG-UART1-ENABLED</i>	0x10520005	L	-	-	Flag to indicate if the UART1 should be enabled

**Table 58: CFG-UART1 configuration items**

Constant	Value	Description
<i>HALF</i>	0	0.5 stopbits
<i>ONE</i>	1	1.0 stopbits
<i>ONEHALF</i>	2	1.5 stopbits
<i>TWO</i>	3	2.0 stopbits

**Table 59: Constants for CFG-UART1-STOPBITS**

Constant	Value	Description
<i>EIGHT</i>	0	8 databits
<i>SEVEN</i>	1	7 databits

**Table 60: Constants for CFG-UART1-DATABITS**

Constant	Value	Description
<i>NONE</i>	0	No parity bit
<i>ODD</i>	1	Add an odd parity bit
<i>EVEN</i>	2	Add an even parity bit

**Table 61: Constants for CFG-UART1-PARITY**

### 6.9.31 CFG-UART1INPROT: Input protocol configuration of the UART1 interface

Input protocol enable flags of the UART1 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART1INPROT-UBX</i>	0x10730001	L	-	-	Flag to indicate if UBX should be an input protocol on UART1
<i>CFG-UART1INPROT-NMEA</i>	0x10730002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART1
<i>CFG-UART1INPROT-RTCM3X</i>	0x10730004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART1
<i>CFG-UART1INPROT-SPARTN</i>	0x10730005	L	-	-	Flag to indicate if SPARTN should be an input protocol on UART1

**Table 62: CFG-UART1INPROT configuration items**

### 6.9.32 CFG-UART1OUTPROT: Output protocol configuration of the UART1 interface

Output protocol enable flags of the UART1 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART1OUTPROT-UBX</i>	0x10740001	L	-	-	Flag to indicate if UBX should be an output protocol on UART1
<i>CFG-UART1OUTPROT-NMEA</i>	0x10740002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART1

**Table 63: CFG-UART1OUTPROT configuration items**

### 6.9.33 CFG-UART2: Configuration of the UART2 interface

Settings needed to configure the UART2 communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART2-BAUDRATE</i>	0x40530001	U4	-	-	The baud rate that should be configured on the UART2
<i>CFG-UART2-STOPBITS</i>	0x20530002	E1	-	-	Number of stopbits that should be used on UART2

See [Table 65](#) below for a list of possible constants for this item.

<i>CFG-UART2-DATABITS</i>	0x20530003	E1	-	-	Number of databits that should be used on UART2
---------------------------	------------	----	---	---	-------------------------------------------------

See [Table 66](#) below for a list of possible constants for this item.

<i>CFG-UART2-PARITY</i>	0x20530004	E1	-	-	Parity mode that should be used on UART2
-------------------------	------------	----	---	---	------------------------------------------

See [Table 67](#) below for a list of possible constants for this item.

<i>CFG-UART2-ENABLED</i>	0x10530005	L	-	-	Flag to indicate if the UART2 should be enabled
--------------------------	------------	---	---	---	-------------------------------------------------

**Table 64: CFG-UART2 configuration items**

Constant	Value	Description
<i>HALF</i>	0	0.5 stopbits
<i>ONE</i>	1	1.0 stopbits
<i>ONEHALF</i>	2	1.5 stopbits
<i>TWO</i>	3	2.0 stopbits

**Table 65: Constants for CFG-UART2-STOPBITS**

Constant	Value	Description
<i>EIGHT</i>	0	8 databits
<i>SEVEN</i>	1	7 databits

**Table 66: Constants for CFG-UART2-DATABITS**

Constant	Value	Description
<i>NONE</i>	0	No parity bit
<i>ODD</i>	1	Add an odd parity bit
<i>EVEN</i>	2	Add an even parity bit

**Table 67: Constants for CFG-UART2-PARITY**

### 6.9.34 CFG-UART2INPROT: Input protocol configuration of the UART2 interface

Input protocol enable flags of the UART2 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART2INPROT-UBX</i>	0x10750001	L	-	-	Flag to indicate if UBX should be an input protocol on UART2
<i>CFG-UART2INPROT-NMEA</i>	0x10750002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART2INPROT-RTCM3X</i>	0x10750004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART2
<i>CFG-UART2INPROT-SPARTN</i>	0x10750005	L	-	-	Flag to indicate if SPARTN should be an input protocol on UART2

**Table 68: CFG-UART2INPROT configuration items**

### 6.9.35 CFG-UART2OUTPROT: Output protocol configuration of the UART2 interface

Output protocol enable flags of the UART2 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-UART2OUTPROT-UBX</i>	0x10760001	L	-	-	Flag to indicate if UBX should be an output protocol on UART2
<i>CFG-UART2OUTPROT-NMEA</i>	0x10760002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART2

**Table 69: CFG-UART2OUTPROT configuration items**

### 6.9.36 CFG-USB: Configuration of the USB interface

Settings needed to configure the USB communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-USB-ENABLED</i>	0x10650001	L	-	-	Flag to indicate if the USB interface should be enabled
<i>CFG-USB-SELFPOW</i>	0x10650002	L	-	-	Self-powered device
<i>CFG-USB-VENDOR_ID</i>	0x3065000a	U2	-	-	Vendor ID
<i>CFG-USB-PRODUCT_ID</i>	0x3065000b	U2	-	-	Vendor ID
<i>CFG-USB-POWER</i>	0x3065000c	U2	-	mA	Power consumption
<i>CFG-USB-VENDOR_STR0</i>	0x5065000d	X8	-	-	Vendor string characters 0-7
<i>CFG-USB-VENDOR_STR1</i>	0x5065000e	X8	-	-	Vendor string characters 8-15
<i>CFG-USB-VENDOR_STR2</i>	0x5065000f	X8	-	-	Vendor string characters 16-23
<i>CFG-USB-VENDOR_STR3</i>	0x50650010	X8	-	-	Vendor string characters 24-31
<i>CFG-USB-PRODUCT_STR0</i>	0x50650011	X8	-	-	Product string characters 0-7
<i>CFG-USB-PRODUCT_STR1</i>	0x50650012	X8	-	-	Product string characters 8-15
<i>CFG-USB-PRODUCT_STR2</i>	0x50650013	X8	-	-	Product string characters 16-23
<i>CFG-USB-PRODUCT_STR3</i>	0x50650014	X8	-	-	Product string characters 24-31
<i>CFG-USB-SERIAL_NO_STR0</i>	0x50650015	X8	-	-	Serial number string characters 0-7
<i>CFG-USB-SERIAL_NO_STR1</i>	0x50650016	X8	-	-	Serial number string characters 8-15
<i>CFG-USB-SERIAL_NO_STR2</i>	0x50650017	X8	-	-	Serial number string characters 16-23
<i>CFG-USB-SERIAL_NO_STR3</i>	0x50650018	X8	-	-	Serial number string characters 24-31

**Table 70: CFG-USB configuration items**

### 6.9.37 CFG-USBINPROT: Input protocol configuration of the USB interface

Input protocol enable flags of the USB interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-USBINPROT-UBX</i>	0x10770001	L	-	-	Flag to indicate if UBX should be an input protocol on USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-USBINPROT-NMEA</i>	0x10770002	L	-	-	Flag to indicate if NMEA should be an input protocol on USB
<i>CFG-USBINPROT-RTCM3X</i>	0x10770004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on USB
<i>CFG-USBINPROT-SPARTN</i>	0x10770005	L	-	-	Flag to indicate if SPARTN should be an input protocol on USB

**Table 71: CFG-USBINPROT configuration items**

## 6.9.38 CFG-USBOUTPROT: Output protocol configuration of the USB interface

Output protocol enable flags of the USB interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-USBOUTPROT-UBX</i>	0x10780001	L	-	-	Flag to indicate if UBX should be an output protocol on USB
<i>CFG-USBOUTPROT-NMEA</i>	0x10780002	L	-	-	Flag to indicate if NMEA should be an output protocol on USB

**Table 72: CFG-USBOUTPROT configuration items**

## 6.10 Legacy UBX message fields reference

The following table lists the legacy UBX message fields and the corresponding configuration item. Note that the mapping from [UBX-CFG](#) message fields to configuration items is not necessarily 1:1 and that some legacy UBX-CFG messages may not be available for certain products.

UBX message and field	Configuration item(s)
<b>UBX-CFG-ANT</b>	
UBX-CFG-ANT.ocd	<a href="#">CFG-HW-ANT_CFG_OPENDET</a>
UBX-CFG-ANT.pdwnOnSCD	<a href="#">CFG-HW-ANT_CFG_PWRDOWN</a>
UBX-CFG-ANT.pinOCD	<a href="#">CFG-HW-ANT_SUP_OPEN_PIN</a>
UBX-CFG-ANT.pinSCD	<a href="#">CFG-HW-ANT_SUP_SHORT_PIN</a>
UBX-CFG-ANT.pinSwitch	<a href="#">CFG-HW-ANT_SUP_SWITCH_PIN</a>
UBX-CFG-ANT.recovery	<a href="#">CFG-HW-ANT_CFG_RECOVER</a>
UBX-CFG-ANT.scd	<a href="#">CFG-HW-ANT_CFG_SHORTDET</a>
UBX-CFG-ANT.svcs	<a href="#">CFG-HW-ANT_CFG_VOLTCTRL</a>
<b>UBX-CFG-DAT</b>	
UBX-CFG-DAT.dX	<a href="#">CFG-NAVSPG-USRDAT_DX</a>
UBX-CFG-DAT.dY	<a href="#">CFG-NAVSPG-USRDAT_DY</a>
UBX-CFG-DAT.dZ	<a href="#">CFG-NAVSPG-USRDAT_DZ</a>
UBX-CFG-DAT.flat	<a href="#">CFG-NAVSPG-USRDAT_FLAT</a>
UBX-CFG-DAT.majA	<a href="#">CFG-NAVSPG-USE_USRDAT</a> , <a href="#">CFG-NAVSPG-USRDAT_MAJA</a>
UBX-CFG-DAT.rotX	<a href="#">CFG-NAVSPG-USRDAT_ROTX</a>
UBX-CFG-DAT.rotY	<a href="#">CFG-NAVSPG-USRDAT_ROTY</a>
UBX-CFG-DAT.rotZ	<a href="#">CFG-NAVSPG-USRDAT_ROTZ</a>
UBX-CFG-DAT.scale	<a href="#">CFG-NAVSPG-USRDAT_SCALE</a>
<b>UBX-CFG-DGNSS</b>	
UBX-CFG-DGNSS.dgnssMode	<a href="#">CFG-NAVHPG-DGNSSMODE</a>
<b>UBX-CFG-ESFA</b>	
UBX-CFG-ESFA.accelRmsThdl	<a href="#">CFG-SFIMU-ACCEL_RMSTHDL</a>

UBX message and field	Configuration item(s)
UBX-CFG-ESFA.accuracy	CFG-SFIMU-ACCEL_ACCURACY
UBX-CFG-ESFA.frequency	CFG-SFIMU-ACCEL_FREQUENCY
UBX-CFG-ESFA.latency	CFG-SFIMU-ACCEL_LATENCY
<b>UBX-CFG-ESFALG</b>	
UBX-CFG-ESFALG.doAutoMntAlg	CFG-SFIMU-AUTO_MNTALG_ENA
UBX-CFG-ESFALG.pitch	CFG-SFIMU-IMU_MNTALG_PITCH
UBX-CFG-ESFALG.roll	CFG-SFIMU-IMU_MNTALG_ROLL
UBX-CFG-ESFALG.yaw	CFG-SFIMU-IMU_MNTALG_YAW
<b>UBX-CFG-ESFG</b>	
UBX-CFG-ESFG.accuracy	CFG-SFIMU-GYRO_ACCURACY
UBX-CFG-ESFG.frequency	CFG-SFIMU-GYRO_FREQUENCY
UBX-CFG-ESFG.gyroRmsThdl	CFG-SFIMU-GYRO_RMSTHDL
UBX-CFG-ESFG.latency	CFG-SFIMU-GYRO_LATENCY
UBX-CFG-ESFG.tcTableSaveRate	CFG-SFIMU-GYRO_TC_UPDATE_PERIOD
<b>UBX-CFG-ESFGAWT</b>	
UBX-CFG-ESFGAWT.accelAcc	CFG-SFIMU-ACCEL_ACCURACY
UBX-CFG-ESFGAWT.accelFrequency	CFG-SFIMU-ACCEL_FREQUENCY
UBX-CFG-ESFGAWT.accelLatency	CFG-SFIMU-ACCEL_LATENCY
UBX-CFG-ESFGAWT.accelRmsThdl	CFG-SFIMU-ACCEL_RMSTHDL
UBX-CFG-ESFGAWT.gyroAcc	CFG-SFIMU-GYRO_ACCURACY
UBX-CFG-ESFGAWT.gyroFrequency	CFG-SFIMU-GYRO_FREQUENCY
UBX-CFG-ESFGAWT.gyroLatency	CFG-SFIMU-GYRO_LATENCY
UBX-CFG-ESFGAWT.gyroRmsThdl	CFG-SFIMU-GYRO_RMSTHDL
UBX-CFG-ESFGAWT.tcTableSaveRate	CFG-SFIMU-GYRO_TC_UPDATE_PERIOD
<b>UBX-CFG-ESFGWT</b>	
UBX-CFG-ESFGWT.gyroAcc	CFG-SFIMU-GYRO_ACCURACY
UBX-CFG-ESFGWT.gyroFrequency	CFG-SFIMU-GYRO_FREQUENCY
UBX-CFG-ESFGWT.gyroLatency	CFG-SFIMU-GYRO_LATENCY
UBX-CFG-ESFGWT.gyroRmsThdl	CFG-SFIMU-GYRO_RMSTHDL
UBX-CFG-ESFGWT.tcTableSaveRate	CFG-SFIMU-GYRO_TC_UPDATE_PERIOD
<b>UBX-CFG-ESFWT</b>	
UBX-CFG-ESFWT.autoDirPinPolOff	CFG-SFODO-DIS_AUTODIRPINPOL
UBX-CFG-ESFWT.autoSoftwareWtOff	CFG-SFODO-DIS_AUTOSW
UBX-CFG-ESFWT.autoUseWtSpeedOff	CFG-SFODO-DIS_AUTOSPEED
UBX-CFG-ESFWT.autoWtCountMaxOff	CFG-SFODO-DIS_AUTOCOUNTMAX
UBX-CFG-ESFWT.cntBothEdges	CFG-SFODO-CNT_BOTH_EDGES
UBX-CFG-ESFWT.combineTicks	CFG-SFODO-COMBINE_TICKS
UBX-CFG-ESFWT.dirPinPol	CFG-SFODO-DIR_PINPOL
UBX-CFG-ESFWT.speedDeadBand	CFG-SFODO-SPEED_BAND
UBX-CFG-ESFWT.useWtPin	CFG-SFODO-USE_WT_PIN
UBX-CFG-ESFWT.useWtSpeed	CFG-SFODO-USE_SPEED
UBX-CFG-ESFWT.wtCountMax	CFG-SFODO-COUNT_MAX
UBX-CFG-ESFWT.wtFactor	CFG-SFODO-FACTOR
UBX-CFG-ESFWT.wtFrequency	CFG-SFODO-FREQUENCY

UBX message and field	Configuration item(s)
UBX-CFG-ESFWT.wtLatency	CFG-SFODO-LATENCY
UBX-CFG-ESFWT.wtQuantError	CFG-SFODO-QUANT_ERROR
<b>UBX-CFG-GEOFENCE</b>	
UBX-CFG-GEOFENCE.confLvl	CFG-GEOFENCE-CONFLVL
UBX-CFG-GEOFENCE.lat	CFG-GEOFENCE-FENCE1_LAT, CFG-GEOFENCE-FENCE2_LAT, CFG-GEOFENCE-FENCE3_LAT, CFG-GEOFENCE-FENCE4_LAT
UBX-CFG-GEOFENCE.lon	CFG-GEOFENCE-FENCE1_LON, CFG-GEOFENCE-FENCE2_LON, CFG-GEOFENCE-FENCE3_LON, CFG-GEOFENCE-FENCE4_LON
UBX-CFG-GEOFENCE.numFences	CFG-GEOFENCE-USE_FENCE1, CFG-GEOFENCE-USE_FENCE2, CFG-GEOFENCE-USE_FENCE3, CFG-GEOFENCE-USE_FENCE4
UBX-CFG-GEOFENCE.pin	CFG-GEOFENCE-PIN
UBX-CFG-GEOFENCE.pinPolarity	CFG-GEOFENCE-PINPOL
UBX-CFG-GEOFENCE.pioEnabled	CFG-GEOFENCE-USE_PIO
UBX-CFG-GEOFENCE.radius	CFG-GEOFENCE-FENCE1_RAD, CFG-GEOFENCE-FENCE2_RAD, CFG-GEOFENCE-FENCE3_RAD, CFG-GEOFENCE-FENCE4_RAD
<b>UBX-CFG-GNSS</b>	
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-GPS_ENA, CFG-SIGNAL-SBAS_ENA, CFG-SIGNAL-BDS_ENA, CFG-SIGNAL-QZSS_ENA, CFG-SIGNAL-GLO_ENA
<b>UBX-CFG-INF</b>	
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_I2C, CFG-INFMSG-UBX_UART1, CFG-INFMSG-UBX_UART2, CFG-INFMSG-UBX_USB, CFG-INFMSG-UBX_SPI, CFG-INFMSG-NMEA_I2C, CFG-INFMSG-NMEA_UART1, CFG-INFMSG-NMEA_UART2, CFG-INFMSG-NMEA_USB, CFG-INFMSG-NMEA_SPI
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_UART1, CFG-INFMSG-UBX_UART2, CFG-INFMSG-UBX_USB, CFG-INFMSG-UBX_SPI, CFG-INFMSG-NMEA_I2C, CFG-INFMSG-NMEA_UART1, CFG-INFMSG-NMEA_UART2, CFG-INFMSG-NMEA_USB, CFG-INFMSG-NMEA_SPI
<b>UBX-CFG-MOT</b>	
UBX-CFG-MOT.gnssDistThdl	CFG-MOT-GNSSDIST_THRS
UBX-CFG-MOT.gnssSpeedThdl	CFG-MOT-GNSSSPEED_THRS
<b>UBX-CFG-NAV5</b>	
UBX-CFG-NAV5.cnoThresh	CFG-NAVSPG-INFIL_CNOTHR
UBX-CFG-NAV5.cnoThreshNumSVs	CFG-NAVSPG-INFIL_NCNOTHR
UBX-CFG-NAV5.dgnssTimeout	CFG-NAVSPG-CONSTR_DGNSSTO
UBX-CFG-NAV5.dynModel	CFG-NAVSPG-DYNMODEL
UBX-CFG-NAV5.fixMode	CFG-NAVSPG-FIXMODE
UBX-CFG-NAV5.fixedAlt	CFG-NAVSPG-CONSTR_ALT
UBX-CFG-NAV5.fixedAltVar	CFG-NAVSPG-CONSTR_ALTVAR
UBX-CFG-NAV5.minElev	CFG-NAVSPG-INFIL_MINELEV
UBX-CFG-NAV5.pAcc	CFG-NAVSPG-OUTFIL_PACC
UBX-CFG-NAV5.pDop	CFG-NAVSPG-OUTFIL_PDOP
UBX-CFG-NAV5.staticHoldMaxDist	CFG-MOT-GNSSDIST_THRS
UBX-CFG-NAV5.staticHoldThresh	CFG-MOT-GNSSSPEED_THRS



UBX message and field	Configuration item(s)
UBX-CFG-NAV5.tAcc	CFG-NAVSPG-OUTFIL_TACC, CFG-NAVSPG-OUTFIL_FACC
UBX-CFG-NAV5.tDop	CFG-NAVSPG-OUTFIL_TDOP
UBX-CFG-NAV5.utcStandard	CFG-NAVSPG-UTCSTANDARD
<b>UBX-CFG-NAVX5</b>	
UBX-CFG-NAVX5.ackAiding	CFG-NAVSPG-ACKAIDING
UBX-CFG-NAVX5.iniFix3D	CFG-NAVSPG-INIFIX3D
UBX-CFG-NAVX5.maxSVs	CFG-NAVSPG-INFIL_MAXSVS
UBX-CFG-NAVX5.minCNO	CFG-NAVSPG-INFIL_MINCNO
UBX-CFG-NAVX5.minSVs	CFG-NAVSPG-INFIL_MINSVS
UBX-CFG-NAVX5.sigAttenCompMode	CFG-NAVSPG-SIGATTCOMP
UBX-CFG-NAVX5.useAdr	CFG-SFCORE-USE_SF
UBX-CFG-NAVX5.wknRollover	CFG-NAVSPG-WKNROLLOVER
<b>UBX-CFG-NMEA</b>	
UBX-CFG-NMEA.bdsTalkerId	CFG-NMEA-BDSTALKERID
UBX-CFG-NMEA.beidou	CFG-NMEA-FILT_BDS
UBX-CFG-NMEA.compat	CFG-NMEA-COMPAT
UBX-CFG-NMEA.consider	CFG-NMEA-CONSIDER
UBX-CFG-NMEA.dateFilt	CFG-NMEA-OUT_INVDATE
UBX-CFG-NMEA.galileo	CFG-NMEA-FILT_GAL
UBX-CFG-NMEA.glonass	CFG-NMEA-FILT_GLO
UBX-CFG-NMEA.gps	CFG-NMEA-FILT_GPS
UBX-CFG-NMEA.gpsOnlyFilter	CFG-NMEA-OUT_ONLYGPS
UBX-CFG-NMEA.gsvTalkerId	CFG-NMEA-GSVTALKERID
UBX-CFG-NMEA.highPrec	CFG-NMEA-HIGHPREC
UBX-CFG-NMEA.limit82	CFG-NMEA-LIMIT82
UBX-CFG-NMEA.mainTalkerId	CFG-NMEA-MAINTALKERID
UBX-CFG-NMEA.mskPosFilt	CFG-NMEA-OUT_MSKFIX
UBX-CFG-NMEA.nmeaVersion	CFG-NMEA-PROTVER
UBX-CFG-NMEA.numSV	CFG-NMEA-MAXSVS
UBX-CFG-NMEA.posFilt	CFG-NMEA-OUT_INVFIX
UBX-CFG-NMEA.qzss	CFG-NMEA-FILT_QZSS
UBX-CFG-NMEA.sbas	CFG-NMEA-FILT_SBAS
UBX-CFG-NMEA.svNumbering	CFG-NMEA-SVNUMBERING
UBX-CFG-NMEA.timeFilt	CFG-NMEA-OUT_INVTIME
UBX-CFG-NMEA.trackFilt	CFG-NMEA-OUT_FROZENCOG
<b>UBX-CFG-PRT</b>	
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-I2C-EXTENDEDTIMEOUT
UBX-CFG-PRT.inNmea	CFG-I2CINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-I2CINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-I2CINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-I2COUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-I2C-ENABLED

UBX message and field	Configuration item(s)
UBX-CFG-PRT.outUbx	CFG-I2COUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.slaveAddr	CFG-I2C-ADDRESS
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-SPI-EXTENDEDTIMEOUT
UBX-CFG-PRT.ffCnt	CFG-SPI-MAXFF
UBX-CFG-PRT.inNmea	CFG-SPIINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-SPIINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-SPIINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-SPIOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.outUbx	CFG-SPIOUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.spiMode	CFG-SPI-CPOLARITY, CFG-SPI-CPHASE
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.baudRate	CFG-UART1-BAUDRATE, CFG-UART2-BAUDRATE
UBX-CFG-PRT.charLen	CFG-UART1-DATABITS, CFG-UART2-DATABITS
UBX-CFG-PRT.inNmea	CFG-UART1INPROT-NMEA, CFG-UART2INPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-UART1-ENABLED, CFG-UART2-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-UART1INPROT-RTCM3X, CFG-UART2INPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-UART1INPROT-UBX, CFG-UART2INPROT-UBX
UBX-CFG-PRT.nStopBits	CFG-UART1-STOPBITS, CFG-UART2-STOPBITS
UBX-CFG-PRT.outNmea	CFG-UART1OUTPROT-NMEA, CFG-UART2OUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-UART1-ENABLED, CFG-UART2-ENABLED
UBX-CFG-PRT.outUbx	CFG-UART1OUTPROT-UBX, CFG-UART2OUTPROT-UBX
UBX-CFG-PRT.parity	CFG-UART1-PARITY, CFG-UART2-PARITY
UBX-CFG-PRT.inNmea	CFG-USBINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-USBINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-USBINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-USBOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.outUbx	CFG-USBOUTPROT-UBX
<b>UBX-CFG-RATE</b>	
UBX-CFG-RATE.measRate	CFG-RATE-MEAS
UBX-CFG-RATE.navRate	CFG-RATE-NAV
UBX-CFG-RATE.timeRef	CFG-RATE-TIMEREF
<b>UBX-CFG-RINV</b>	
UBX-CFG-RINV.data	CFG-RINV-DATA_SIZE, CFG-RINV-CHUNK0, CFG-RINV-CHUNK1, CFG-RINV-CHUNK2, CFG-RINV-CHUNK3

UBX message and field	Configuration item(s)
UBX-CFG-RINV.flags	CFG-RINV-DUMP, CFG-RINV-BINARY
<b>UBX-CFG-SBAS</b>	
UBX-CFG-SBAS.diffCorr	CFG-SBAS-USE_DIFFCORR
UBX-CFG-SBAS.integrity	CFG-SBAS-USE_INTEGRITY
UBX-CFG-SBAS.range	CFG-SBAS-USE_RANGING
UBX-CFG-SBAS.scanmode1	CFG-SBAS-PRNSCANMASK
UBX-CFG-SBAS.test	CFG-SBAS-USE_TESTMODE
<b>UBX-CFG-SENIF</b>	
UBX-CFG-SENIF.i2cSclPio	CFG-SFIMU-IMU_I2C_SCL_PIO
UBX-CFG-SENIF.i2cSdaPio	CFG-SFIMU-IMU_I2C_SDA_PIO
<b>UBX-CFG-SLAS</b>	
UBX-CFG-SLAS.enabled	CFG-QZSS-USE_SLAS_DGNSS
UBX-CFG-SLAS.raim	CFG-QZSS-USE_SLAS_RAIM_UNCORR
UBX-CFG-SLAS.test	CFG-QZSS-USE_SLAS_TESTMODE
<b>UBX-CFG-TP5</b>	
UBX-CFG-TP5.active	CFG-TP-TP1_ENA
UBX-CFG-TP5.alignToTow	CFG-TP-ALIGN_TO_TOW_TP1
UBX-CFG-TP5.antCableDelay	CFG-TP-ANT_CABLEDELAY
UBX-CFG-TP5.freqPeriod	CFG-TP-PERIOD_TP1, CFG-TP-FREQ_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-PERIOD_LOCK_TP1, CFG-TP-FREQ_LOCK_TP1
UBX-CFG-TP5.gridUtcGnss	CFG-TP-TIMEGRID_TP1
UBX-CFG-TP5.isFreq	CFG-TP-PULSE_DEF
UBX-CFG-TP5.isLength	CFG-TP-PULSE_LENGTH_DEF
UBX-CFG-TP5.lockGnssFreq	CFG-TP-SYNC_GNSS_TP1
UBX-CFG-TP5.lockedOtherSet	CFG-TP-USE_LOCKED_TP1
UBX-CFG-TP5.polarity	CFG-TP-POL_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-LEN_TP1, CFG-TP-DUTY_TP1
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-LEN_LOCK_TP1, CFG-TP-DUTY_LOCK_TP1
UBX-CFG-TP5.userConfigDelay	CFG-TP-USER_DELAY_TP1
<b>UBX-CFG-USB</b>	
UBX-CFG-USB.powerConsumption	CFG-USB-POWER
UBX-CFG-USB.powerMode	CFG-USB-SELFPOW
UBX-CFG-USB.productId	CFG-USB-PRODUCT_ID
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR0, CFG-USB-PRODUCT_STR1, CFG-USB-PRODUCT_STR2, CFG-USB-PRODUCT_STR3
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR0, CFG-USB-SERIAL_NO_STR1, CFG-USB-SERIAL_NO_STR2, CFG-USB-SERIAL_NO_STR3
UBX-CFG-USB.vendorID	CFG-USB-VENDOR_ID
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR0, CFG-USB-VENDOR_STR1, CFG-USB-VENDOR_STR2, CFG-USB-VENDOR_STR3

**Table 73: Legacy UBX message fields and the corresponding configuration items**

## Configuration defaults

The following tables contain the configuration defaults for the firmware. Some of these values may be changed in production. Refer to the integration manual for product-specific details.

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-BDS-USE_GEO_PRN</a>	0x10340014	L	-	-	0 (false)

**Table 74: CFG-BDS configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-GEOFENCE-CONFLVL</a>	0x20240011	E1	-	-	0 (L000)
<a href="#">CFG-GEOFENCE-USE_PIO</a>	0x10240012	L	-	-	0 (false)
<a href="#">CFG-GEOFENCE-PINPOL</a>	0x20240013	E1	-	-	0 (LOW_IN)
<a href="#">CFG-GEOFENCE-PIN</a>	0x20240014	U1	-	-	12
<a href="#">CFG-GEOFENCE-USE_FENCE1</a>	0x10240020	L	-	-	0 (false)
<a href="#">CFG-GEOFENCE-FENCE1_LAT</a>	0x40240021	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE1_LON</a>	0x40240022	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE1_RAD</a>	0x40240023	U4	0.01	m	0
<a href="#">CFG-GEOFENCE-USE_FENCE2</a>	0x10240030	L	-	-	0 (false)
<a href="#">CFG-GEOFENCE-FENCE2_LAT</a>	0x40240031	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE2_LON</a>	0x40240032	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE2_RAD</a>	0x40240033	U4	0.01	m	0
<a href="#">CFG-GEOFENCE-USE_FENCE3</a>	0x10240040	L	-	-	0 (false)
<a href="#">CFG-GEOFENCE-FENCE3_LAT</a>	0x40240041	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE3_LON</a>	0x40240042	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE3_RAD</a>	0x40240043	U4	0.01	m	0
<a href="#">CFG-GEOFENCE-USE_FENCE4</a>	0x10240050	L	-	-	0 (false)
<a href="#">CFG-GEOFENCE-FENCE4_LAT</a>	0x40240051	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE4_LON</a>	0x40240052	I4	1e-7	deg	0
<a href="#">CFG-GEOFENCE-FENCE4_RAD</a>	0x40240053	U4	0.01	m	0

**Table 75: CFG-GEOFENCE configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-HW-ANT_CFG_VOLTCTRL</a>	0x10a3002e	L	-	-	0 (false)
<a href="#">CFG-HW-ANT_CFG_SHORTDET</a>	0x10a3002f	L	-	-	0 (false)
<a href="#">CFG-HW-ANT_CFG_SHORTDET_POL</a>	0x10a30030	L	-	-	1 (true)
<a href="#">CFG-HW-ANT_CFG_OPENDET</a>	0x10a30031	L	-	-	0 (false)
<a href="#">CFG-HW-ANT_CFG_OPENDET_POL</a>	0x10a30032	L	-	-	1 (true)
<a href="#">CFG-HW-ANT_CFG_PWRDOWN</a>	0x10a30033	L	-	-	0 (false)
<a href="#">CFG-HW-ANT_CFG_PWRDOWN_POL</a>	0x10a30034	L	-	-	1 (true)
<a href="#">CFG-HW-ANT_CFG_RECOVER</a>	0x10a30035	L	-	-	0 (false)
<a href="#">CFG-HW-ANT_SUP_SWITCH_PIN</a>	0x20a30036	U1	-	-	13
<a href="#">CFG-HW-ANT_SUP_SHORT_PIN</a>	0x20a30037	U1	-	-	15
<a href="#">CFG-HW-ANT_SUP_OPEN_PIN</a>	0x20a30038	U1	-	-	16

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-HW-ANT_ON_SHORT_US</a>	0x30a3003c	U2	-	-	500
<a href="#">CFG-HW-SENS_WOM_MODE</a>	0x20a30063	E1	-	-	0 (DISABLED)
<a href="#">CFG-HW-SENS_WOM_THLD</a>	0x20a30064	U1	-	-	0
<a href="#">CFG-HW-ANT_SUP_ENGINE</a>	0x20a30054	E1	-	-	0 (EXT)
<a href="#">CFG-HW-ANT_SUP_SHORT_THR</a>	0x20a30055	U1	-	mV	0
<a href="#">CFG-HW-ANT_SUP_OPEN_THR</a>	0x20a30056	U1	-	mV	0

**Table 76: CFG-HW configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-I2C-ADDRESS</a>	0x20510001	U1	-	-	132
<a href="#">CFG-I2C-EXTENDEDTIMEOUT</a>	0x10510002	L	-	-	0 (false)
<a href="#">CFG-I2C-ENABLED</a>	0x10510003	L	-	-	1 (true)

**Table 77: CFG-I2C configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-I2CINPROT-UBX</a>	0x10710001	L	-	-	1 (true)
<a href="#">CFG-I2CINPROT-NMEA</a>	0x10710002	L	-	-	1 (true)
<a href="#">CFG-I2CINPROT-RTCM3X</a>	0x10710004	L	-	-	1 (true)
<a href="#">CFG-I2CINPROT-SPARTN</a>	0x10710005	L	-	-	1 (true)

**Table 78: CFG-I2CINPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-I2COUTPROT-UBX</a>	0x10720001	L	-	-	1 (true)
<a href="#">CFG-I2COUTPROT-NMEA</a>	0x10720002	L	-	-	1 (true)

**Table 79: CFG-I2COUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-INFMSG-UBX_I2C</a>	0x20920001	X1	-	-	0x00
<a href="#">CFG-INFMSG-UBX_UART1</a>	0x20920002	X1	-	-	0x00
<a href="#">CFG-INFMSG-UBX_UART2</a>	0x20920003	X1	-	-	0x00
<a href="#">CFG-INFMSG-UBX_USB</a>	0x20920004	X1	-	-	0x00
<a href="#">CFG-INFMSG-UBX_SPI</a>	0x20920005	X1	-	-	0x00
<a href="#">CFG-INFMSG-NMEA_I2C</a>	0x20920006	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
<a href="#">CFG-INFMSG-NMEA_UART1</a>	0x20920007	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
<a href="#">CFG-INFMSG-NMEA_UART2</a>	0x20920008	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
<a href="#">CFG-INFMSG-NMEA_USB</a>	0x20920009	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
<a href="#">CFG-INFMSG-NMEA_SPI</a>	0x2092000a	X1	-	-	0x07 (ERROR   WARNING   NOTICE)

**Table 80: CFG-INFMSG configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-MOT-GNSSSPEED_THRS</a>	0x20250038	U1	0.01	m/s	0

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-MOT-GNSSDIST_THRS</a>	0x3025003b	U2	-	-	0

**Table 81: CFG-MOT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-MSGOUT-NMEA_ID_DTM_I2C</a>	0x209100a6	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_DTM_SPI</a>	0x209100aa	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_DTM_UART1</a>	0x209100a7	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_DTM_UART2</a>	0x209100a8	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_DTM_USB</a>	0x209100a9	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GBS_I2C</a>	0x209100dd	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GBS_SPI</a>	0x209100e1	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GBS_UART1</a>	0x209100de	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GBS_UART2</a>	0x209100df	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GBS_USB</a>	0x209100e0	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GGA_I2C</a>	0x209100ba	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GGA_SPI</a>	0x209100be	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GGA_UART1</a>	0x209100bb	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GGA_UART2</a>	0x209100bc	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GGA_USB</a>	0x209100bd	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GLL_I2C</a>	0x209100c9	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GLL_SPI</a>	0x209100cd	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GLL_UART1</a>	0x209100ca	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GLL_UART2</a>	0x209100cb	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GLL_USB</a>	0x209100cc	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GNS_I2C</a>	0x209100b5	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GNS_SPI</a>	0x209100b9	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GNS_UART1</a>	0x209100b6	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GNS_UART2</a>	0x209100b7	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GNS_USB</a>	0x209100b8	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GRS_I2C</a>	0x209100ce	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GRS_SPI</a>	0x209100d2	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GRS_UART1</a>	0x209100cf	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GRS_UART2</a>	0x209100d0	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GRS_USB</a>	0x209100d1	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GSA_I2C</a>	0x209100bf	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GSA_SPI</a>	0x209100c3	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GSA_UART1</a>	0x209100c0	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GSA_UART2</a>	0x209100c1	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GSA_USB</a>	0x209100c2	U1	-	-	1
<a href="#">CFG-MSGOUT-NMEA_ID_GST_I2C</a>	0x209100d3	U1	-	-	0
<a href="#">CFG-MSGOUT-NMEA_ID_GST_SPI</a>	0x209100d7	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RLM_I2C	0x20910400	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_SPI	0x20910404	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_UART1	0x20910401	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_UART2	0x20910402	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_USB	0x20910403	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	1
CFG-MSGOUT-NMEA_ID_THS_I2C	0x209100e2	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_SPI	0x209100e6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_UART1	0x209100e3	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_UART2	0x209100e4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_USB	0x209100e5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_I2C	0x20910661	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_SPI	0x20910665	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART1	0x20910662	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART2	0x20910663	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_USB	0x20910664	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_I2C	0x20910670	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_SPI	0x20910674	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART1	0x20910671	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART2	0x20910672	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_USB	0x20910673	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_I2C	0x2091065c	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_SPI	0x20910660	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART1	0x2091065d	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART2	0x2091065e	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_USB	0x2091065f	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_I2C	0x20910666	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_SPI	0x2091066a	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART1	0x20910667	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART2	0x20910668	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_USB	0x20910669	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_I2C	0x20910652	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_SPI	0x20910656	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART1	0x20910653	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART2	0x20910654	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_USB	0x20910655	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_I2C	0x20910657	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_SPI	0x2091065b	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART1	0x20910658	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART2	0x20910659	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_USB	0x2091065a	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_I2C	0x2091067f	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_SPI	0x20910683	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART1	0x20910680	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART2	0x20910681	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_USB	0x20910682	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART2	0x209100ee	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART2	0x209100f3	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART2	0x209100f8	U1	-	-	0



Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_I2C	0x2091010f	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_SPI	0x20910113	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_UART1	0x20910110	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_UART2	0x20910111	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_USB	0x20910112	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_I2C	0x20910114	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_SPI	0x20910118	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_UART1	0x20910115	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_UART2	0x20910116	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_USB	0x20910117	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_I2C	0x20910277	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_SPI	0x2091027b	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_UART1	0x20910278	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_UART2	0x20910279	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_USB	0x2091027a	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_I2C	0x2091029f	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_SPI	0x209102a3	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_UART1	0x209102a0	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_UART2	0x209102a1	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_USB	0x209102a2	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_I2C	0x20910105	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_SPI	0x20910109	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_UART1	0x20910106	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_UART2	0x20910107	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_USB	0x20910108	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_I2C	0x2091034f	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_SPI	0x20910353	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_UART1	0x20910350	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_UART2	0x20910351	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_USB	0x20910352	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART2	0x209101bb	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_USB	0x209101bc	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART2	0x20910356	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART2	0x20910198	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_USB	0x20910199	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART2	0x209101a2	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_USB	0x209101a3	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART2	0x20910189	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_I2C	0x2091038b	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_SPI	0x2091038f	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_UART1	0x2091038c	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_UART2	0x2091038d	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_USB	0x2091038e	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_I2C	0x2091069d	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_SPI	0x209106a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_UART1	0x2091069e	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_UART2	0x2091069f	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_USB	0x209106a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART2	0x2091019d	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_USB	0x2091019e	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_I2C	0x20910430	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_SPI	0x20910434	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_UART1	0x20910431	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_UART2	0x20910432	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_USB	0x20910433	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_I2C	0x20910435	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_SPI	0x20910439	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_UART1	0x20910436	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_UART2	0x20910437	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_USB	0x20910438	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_I2C	0x20910465	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_SPI	0x20910469	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_UART1	0x20910466	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_UART2	0x20910467	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_USB	0x20910468	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_I2C	0x20910470	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_SPI	0x20910474	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_UART1	0x20910471	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_UART2	0x20910472	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_USB	0x20910473	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_I2C	0x20910565	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_SPI	0x20910569	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_UART1	0x20910566	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_UART2	0x20910567	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_USB	0x20910568	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_I2C	0x20910480	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_SPI	0x20910484	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_UART1	0x20910481	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_UART2	0x20910482	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_USB	0x20910483	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_I2C	0x20910485	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_SPI	0x20910489	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_UART1	0x20910486	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_UART2	0x20910487	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_USB	0x20910488	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_I2C	0x2091062f	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_SPI	0x20910633	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_PVAT_UART1	0x20910630	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_UART2	0x20910631	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_USB	0x20910632	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_I2C	0x20910490	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_SPI	0x20910494	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_UART1	0x20910491	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_UART2	0x20910492	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_USB	0x20910493	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_I2C	0x20910495	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_SPI	0x20910499	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_UART1	0x20910496	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_UART2	0x20910497	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_USB	0x20910498	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_I2C	0x20910500	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_SPI	0x20910504	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_UART1	0x20910501	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_UART2	0x20910502	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_USB	0x20910503	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_I2C	0x20910505	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_SPI	0x20910509	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_UART1	0x20910506	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_UART2	0x20910507	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_USB	0x20910508	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_I2C	0x20910510	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_SPI	0x20910514	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_UART1	0x20910511	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_UART2	0x20910512	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_USB	0x20910513	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_I2C	0x20910515	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_SPI	0x20910519	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_UART1	0x20910516	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_UART2	0x20910517	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_USB	0x20910518	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_I2C	0x20910525	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_SPI	0x20910529	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART1	0x20910526	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART2	0x20910527	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_USB	0x20910528	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_I2C	0x20910530	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_SPI	0x20910534	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART1	0x20910531	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART2	0x20910532	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_USB	0x20910533	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_I2C	0x20910535	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_SPI	0x20910539	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART1	0x20910536	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART2	0x20910537	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_USB	0x20910538	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_I2C	0x20910540	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_SPI	0x20910544	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART1	0x20910541	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART2	0x20910542	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_USB	0x20910543	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_I2C	0x20910545	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_SPI	0x20910549	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_UART1	0x20910546	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_UART2	0x20910547	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_USB	0x20910548	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_I2C	0x20910575	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_SPI	0x20910579	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART1	0x20910576	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART2	0x20910577	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_USB	0x20910578	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_I2C	0x20910550	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_SPI	0x20910554	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART1	0x20910551	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART2	0x20910552	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_USB	0x20910553	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_I2C	0x20910555	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_SPI	0x20910559	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_UART1	0x20910556	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_UART2	0x20910557	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_USB	0x20910558	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_I2C	0x20910560	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_SPI	0x20910564	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_UART1	0x20910561	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_UART2	0x20910562	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_USB	0x20910563	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_I2C	0x2091001f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_SPI	0x20910023	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_UART1	0x20910020	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_UART2	0x20910021	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_ATT_USB	0x20910022	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART2	0x20910067	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_I2C	0x20910083	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_SPI	0x20910087	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_UART1	0x20910084	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_UART2	0x20910085	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_USB	0x20910086	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART2	0x2091003a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_I2C	0x20910313	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_SPI	0x20910317	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_UART1	0x20910314	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_UART2	0x20910315	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_USB	0x20910316	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C	0x209100a1	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI	0x209100a5	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1	0x209100a2	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2	0x209100a3	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_USB	0x209100a4	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_I2C	0x2091002e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_SPI	0x20910032	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART1	0x2091002f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART2	0x20910030	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_USB	0x20910031	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_I2C	0x20910033	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_SPI	0x20910037	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART1	0x20910034	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART2	0x20910035	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_USB	0x20910036	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART2	0x20910012	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_I2C	0x20910415	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_SPI	0x20910419	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_UART1	0x20910416	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_UART2	0x20910417	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_USB	0x20910418	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART2	0x20910026	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_USB	0x20910027	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART2	0x2091002b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_USB	0x2091002c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_I2C	0x2091062a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_SPI	0x2091062e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_UART1	0x2091062b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_UART2	0x2091062c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_USB	0x2091062d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_I2C	0x2091008d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_SPI	0x20910091	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1	0x2091008e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART2	0x2091008f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_USB	0x20910090	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	0



Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART1	0x2091006b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART2	0x2091006c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_USB	0x2091006d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_I2C	0x20910336	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_SPI	0x2091033a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_UART1	0x20910337	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_UART2	0x20910338	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_USB	0x20910339	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART2	0x2091001c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_USB	0x2091001d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2	0x20910053	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_USB	0x20910054	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2	0x20910058	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_USB	0x20910059	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2	0x2091004e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_USB	0x2091004f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2	0x20910049	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_USB	0x2091004a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	0



Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART2	0x20910062	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_USB	0x20910063	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_I2C	0x20910386	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_SPI	0x2091038a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART1	0x20910387	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART2	0x20910388	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_USB	0x20910389	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2	0x2091005d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_USB	0x2091005e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART2	0x2091003f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_USB	0x20910040	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART2	0x20910044	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_USB	0x20910045	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_I2C	0x209106b6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_SPI	0x209106ba	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_UART1	0x209106b7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_UART2	0x209106b8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_USB	0x209106b9	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART2	0x20910206	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_USB	0x20910207	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART1	0x209102a5	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART2	0x209102a6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_RXM_RLM_UART2	0x20910260	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART1	0x20910269	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART2	0x2091026a	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART2	0x20910233	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_I2C	0x20910605	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_SPI	0x20910609	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_UART1	0x20910606	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_UART2	0x20910607	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_USB	0x20910608	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_I2C	0x20910689	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_SPI	0x2091068d	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_UART1	0x2091068a	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_UART2	0x2091068b	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_USB	0x2091068c	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_I2C	0x20910634	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_SPI	0x20910638	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_UART1	0x20910635	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_UART2	0x20910636	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_USB	0x20910637	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART2	0x20910094	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	0

**Table 82: CFG-MSGOUT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAV2-OUT_ENABLED	0x10170001	L	-	-	0 (false)
CFG-NAV2-SBAS_USE_INTEGRITY	0x10170002	L	-	-	0 (false)

**Table 83: CFG-NAV2 configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVHPG-DGNSSMODE	0x20140011	E1	-	-	3 (RTK_FIXED)

**Table 84: CFG-NAVHPG configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	3 (AUTO)
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	0 (false)
CFG-NAVSPG-WKNRollover	0x30110017	U2	-	-	2227
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	0 (AUTO)
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	4 (AUTOMOT)
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	0 (false)
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	0 (false)
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	6378137
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	298.25722356300002502
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	0
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	0
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	0
CFG-NAVSPG-USRDAT_ROT_X	0x40110067	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROT_Y	0x40110068	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROT_Z	0x40110069	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	0
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	5
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	32
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	20
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	10
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	0
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	0
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	100
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	350
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	150
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	0
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	10000
CFG-NAVSPG-CONSTR_DGNSSTO	0x201100c4	U1	-	s	60

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-NAVSPG-SIGATTCOMP</a>	0x201100d6	E1	-	-	0 (DIS)
<a href="#">CFG-NAVSPG-PL_ENA</a>	0x101100d7	L	-	-	1 (true)

**Table 85: CFG-NAVSPG configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-NMEA-PROTVR</a>	0x20930001	E1	-	-	42 (V411)
<a href="#">CFG-NMEA-MAXSVS</a>	0x20930002	E1	-	-	0 (UNLIM)
<a href="#">CFG-NMEA-COMPAT</a>	0x10930003	L	-	-	0 (false)
<a href="#">CFG-NMEA-CONSIDER</a>	0x10930004	L	-	-	1 (true)
<a href="#">CFG-NMEA-LIMIT82</a>	0x10930005	L	-	-	0 (false)
<a href="#">CFG-NMEA-HIGHPREC</a>	0x10930006	L	-	-	0 (false)
<a href="#">CFG-NMEA-SVNUMBERING</a>	0x20930007	E1	-	-	0 (STRICT)
<a href="#">CFG-NMEA-FILT_GPS</a>	0x10930011	L	-	-	0 (false)
<a href="#">CFG-NMEA-FILT_SBAS</a>	0x10930012	L	-	-	0 (false)
<a href="#">CFG-NMEA-FILT_GAL</a>	0x10930013	L	-	-	0 (false)
<a href="#">CFG-NMEA-FILT_QZSS</a>	0x10930015	L	-	-	0 (false)
<a href="#">CFG-NMEA-FILT_GLO</a>	0x10930016	L	-	-	0 (false)
<a href="#">CFG-NMEA-FILT_BDS</a>	0x10930017	L	-	-	0 (false)
<a href="#">CFG-NMEA-OUT_INVFIX</a>	0x10930021	L	-	-	0 (false)
<a href="#">CFG-NMEA-OUT_MSKFIX</a>	0x10930022	L	-	-	0 (false)
<a href="#">CFG-NMEA-OUT_INVTIME</a>	0x10930023	L	-	-	0 (false)
<a href="#">CFG-NMEA-OUT_INVDATE</a>	0x10930024	L	-	-	0 (false)
<a href="#">CFG-NMEA-OUT_ONLYGPS</a>	0x10930025	L	-	-	0 (false)
<a href="#">CFG-NMEA-OUT_FROZENCOG</a>	0x10930026	L	-	-	0 (false)
<a href="#">CFG-NMEA-MAINTALKERID</a>	0x20930031	E1	-	-	0 (AUTO)
<a href="#">CFG-NMEA-GSVTALKERID</a>	0x20930032	E1	-	-	0 (GNSS)
<a href="#">CFG-NMEA-BDSTALKERID</a>	0x30930033	U2	-	-	0

**Table 86: CFG-NMEA configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-QZSS-USE_SLAS_DGNSS</a>	0x10370005	L	-	-	1 (true)
<a href="#">CFG-QZSS-USE_SLAS_TESTMODE</a>	0x10370006	L	-	-	0 (false)
<a href="#">CFG-QZSS-USE_SLAS_RAIM_UNCORR</a>	0x10370007	L	-	-	0 (false)
<a href="#">CFG-QZSS-SLAS_MAX_BASELINE</a>	0x30370008	U2	-	km	350

**Table 87: CFG-QZSS configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-RATE-MEAS</a>	0x30210001	U2	0.001	s	1000
<a href="#">CFG-RATE-NAV</a>	0x30210002	U2	-	-	1
<a href="#">CFG-RATE-TIMEREFP</a>	0x20210003	E1	-	-	1 (GPS)
<a href="#">CFG-RATE-NAV_PPIO</a>	0x20210004	U1	-	Hz	0

**Table 88: CFG-RATE configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RINV-DUMP	0x10c70001	L	-	-	0 (false)
CFG-RINV-BINARY	0x10c70002	L	-	-	0 (false)
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	22
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	0x203a656369746f4e ("Notice: ")
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	0x2061746164206f6e ("no data ")
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	0x0000216465766173 ("saved!\0\0")
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	0x0000000000000000

**Table 89: CFG-RINV configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RTCM-DF003_IN	0x30090008	U2	-	-	0
CFG-RTCM-DF003_IN_FILTER	0x20090009	E1	-	-	0 (DISABLED)

**Table 90: CFG-RTCM configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	0 (false)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	1 (true)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	1 (true)
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	0 (false)
CFG-SBAS-USE_IONOONLY	0x10360007	L	-	-	0 (false)
CFG-SBAS-PRNSCANMASK	0x50360006	X8	-	-	0x00000000000072b88 (ALL   PRN123   PRN127   PRN128   PRN129   PRN131   PRN133   PRN136   PRN137   PRN138)

**Table 91: CFG-SBAS configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	0 (false)
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	0
CFG-SEC-CFG_LOCK_UNLOCKGRP2	0x30f6000b	U2	-	-	0
CFG-SEC-JAMDET_SENSITIVITY_HI	0x10f60051	L	-	-	1 (true)

**Table 92: CFG-SEC configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SFCORE-USE_SF	0x10080001	L	-	-	1 (true)

**Table 93: CFG-SFCORE configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SFIMU-GYRO_TC_UPDATE_PERIOD	0x30060007	U2	-	s	1200
CFG-SFIMU-GYRO_RMSTHDL	0x20060008	U1	2 <sup>-8</sup>	deg/s	128
CFG-SFIMU-GYRO_FREQUENCY	0x20060009	U1	-	Hz	0
CFG-SFIMU-GYRO_LATENCY	0x3006000a	U2	-	ms	0
CFG-SFIMU-GYRO_ACCURACY	0x3006000b	U2	1e-3	deg/s	100
CFG-SFIMU-ACCEL_RMSTHDL	0x20060015	U1	2 <sup>-6</sup>	m/s <sup>2</sup>	32

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SFIMU-ACCEL_FREQUENCY	0x20060016	U1	-	Hz	0
CFG-SFIMU-ACCEL_LATENCY	0x30060017	U2	-	ms	0
CFG-SFIMU-ACCEL_ACCURACY	0x30060018	U2	1e-4	m/s <sup>2</sup>	1000
CFG-SFIMU-IMU_EN	0x1006001d	L	-	-	1 (true)
CFG-SFIMU-IMU_I2C_SCL_PIO	0x2006001e	U1	-	-	4
CFG-SFIMU-IMU_I2C_SDA_PIO	0x2006001f	U1	-	-	3
CFG-SFIMU-AUTO_MNTALG_ENA	0x10060027	L	-	-	0 (false)
CFG-SFIMU-IMU_MNTALG_YAW	0x4006002d	U4	1e-2	deg	0
CFG-SFIMU-IMU_MNTALG_PITCH	0x3006002e	I2	1e-2	deg	0
CFG-SFIMU-IMU_MNTALG_ROLL	0x3006002f	I2	1e-2	deg	0

**Table 94: CFG-SFIMU configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SFODO-COMBINE_TICKS	0x10070001	L	-	-	0 (false)
CFG-SFODO-USE_SPEED	0x10070003	L	-	-	0 (false)
CFG-SFODO-DIS_AUTOCOUNTMAX	0x10070004	L	-	-	0 (false)
CFG-SFODO-DIS_AUTODIRPINPOL	0x10070005	L	-	-	0 (false)
CFG-SFODO-DIS_AUTOSPEED	0x10070006	L	-	-	0 (false)
CFG-SFODO-FACTOR	0x40070007	U4	1e-6	-	0
CFG-SFODO-QUANT_ERROR	0x40070008	U4	1e-6	m (or m/s)	0
CFG-SFODO-COUNT_MAX	0x40070009	U4	-	-	1
CFG-SFODO-LATENCY	0x3007000a	U2	-	ms	0
CFG-SFODO-FREQUENCY	0x2007000b	U1	-	Hz	0
CFG-SFODO-CNT_BOTH_EDGES	0x1007000d	L	-	-	0 (false)
CFG-SFODO-SPEED_BAND	0x3007000e	U2	-	cm/s	0
CFG-SFODO-USE_WT_PIN	0x1007000f	L	-	-	1 (true)
CFG-SFODO-DIR_PINPOL	0x10070010	L	-	-	0 (false)
CFG-SFODO-DIS_AUTOSW	0x10070011	L	-	-	1 (true)
CFG-SFODO-DIS_DIR_INFO	0x1007001c	L	-	-	0 (false)

**Table 95: CFG-SFODO configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	1 (true)
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	1 (true)
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	1 (true)
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	1 (true)
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	1 (true)
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	1 (true)
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	1 (true)
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	1 (true)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	1 (true)
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	1 (true)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	1 (true)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1S_ENA	0x10310014	L	-	-	0 (false)
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	1 (true)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	1 (true)
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	1 (true)
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	1 (true)

**Table 96: CFG-SIGNAL configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPARTN-USE_SOURCE	0x20a70001	E1	-	-	0 (IP)

**Table 97: CFG-SPARTN configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPI-MAXFF	0x20640001	U1	-	-	50
CFG-SPI-CPOLARITY	0x10640002	L	-	-	0 (false)
CFG-SPI-CPHASE	0x10640003	L	-	-	0 (false)
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	0 (false)
CFG-SPI-ENABLED	0x10640006	L	-	-	0 (false)

**Table 98: CFG-SPI configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPIINPROT-UBX	0x10790001	L	-	-	1 (true)
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	1 (true)
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	1 (true)
CFG-SPIINPROT-SPARTN	0x10790005	L	-	-	1 (true)

**Table 99: CFG-SPIINPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	1 (true)
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	1 (true)

**Table 100: CFG-SPIOUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	0 (PERIOD)
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	1 (LENGTH)
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	1e-9	s	50
CFG-TP-PERIOD_TP1	0x40050002	U4	1e-6	s	1000000
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	1e-6	s	1000000
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	1
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	1
CFG-TP-LEN_TP1	0x40050004	U4	1e-6	s	0
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	1e-6	s	100000

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-TP-DUTY_TP1</a>	0x5005002a	R8	-	%	0
<a href="#">CFG-TP-DUTY_LOCK_TP1</a>	0x5005002b	R8	-	%	10
<a href="#">CFG-TP-USER_DELAY_TP1</a>	0x40050006	I4	1e-9	s	0
<a href="#">CFG-TP-TP1_ENA</a>	0x10050007	L	-	-	1 (true)
<a href="#">CFG-TP-SYNC_GNSS_TP1</a>	0x10050008	L	-	-	1 (true)
<a href="#">CFG-TP-USE_LOCKED_TP1</a>	0x10050009	L	-	-	1 (true)
<a href="#">CFG-TP-ALIGN_TO_TOW_TP1</a>	0x1005000a	L	-	-	1 (true)
<a href="#">CFG-TP-POL_TP1</a>	0x1005000b	L	-	-	1 (true)
<a href="#">CFG-TP-TIMEGRID_TP1</a>	0x2005000c	E1	-	-	0 (UTC)
<a href="#">CFG-TP-DRSTR_TP1</a>	0x20050035	E1	-	-	1 (DRIVE_STRENGTH_4MA)

**Table 101: CFG-TP configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-TXREADY-ENABLED</a>	0x10a20001	L	-	-	0 (false)
<a href="#">CFG-TXREADY-POLARITY</a>	0x10a20002	L	-	-	0 (false)
<a href="#">CFG-TXREADY-PIN</a>	0x20a20003	U1	-	-	0
<a href="#">CFG-TXREADY-THRESHOLD</a>	0x30a20004	U2	-	-	0
<a href="#">CFG-TXREADY-INTERFACE</a>	0x20a20005	E1	-	-	0 (I2C)

**Table 102: CFG-TXREADY configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-UART1-BAUDRATE</a>	0x40520001	U4	-	-	38400
<a href="#">CFG-UART1-STOPBITS</a>	0x20520002	E1	-	-	1 (ONE)
<a href="#">CFG-UART1-DATABITS</a>	0x20520003	E1	-	-	0 (EIGHT)
<a href="#">CFG-UART1-PARITY</a>	0x20520004	E1	-	-	0 (NONE)
<a href="#">CFG-UART1-ENABLED</a>	0x10520005	L	-	-	1 (true)

**Table 103: CFG-UART1 configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-UART1INPROT-UBX</a>	0x10730001	L	-	-	1 (true)
<a href="#">CFG-UART1INPROT-NMEA</a>	0x10730002	L	-	-	1 (true)
<a href="#">CFG-UART1INPROT-RTCM3X</a>	0x10730004	L	-	-	1 (true)
<a href="#">CFG-UART1INPROT-SPARTN</a>	0x10730005	L	-	-	1 (true)

**Table 104: CFG-UART1INPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-UART1OUTPROT-UBX</a>	0x10740001	L	-	-	1 (true)
<a href="#">CFG-UART1OUTPROT-NMEA</a>	0x10740002	L	-	-	1 (true)

**Table 105: CFG-UART1OUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-UART2-BAUDRATE</a>	0x40530001	U4	-	-	38400
<a href="#">CFG-UART2-STOPBITS</a>	0x20530002	E1	-	-	1 (ONE)
<a href="#">CFG-UART2-DATABITS</a>	0x20530003	E1	-	-	0 (EIGHT)



Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-UART2-PARITY</a>	0x20530004	E1	-	-	0 (NONE)
<a href="#">CFG-UART2-ENABLED</a>	0x10530005	L	-	-	1 (true)

**Table 106: CFG-UART2 configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-UART2INPROT-UBX</a>	0x10750001	L	-	-	1 (true)
<a href="#">CFG-UART2INPROT-NMEA</a>	0x10750002	L	-	-	0 (false)
<a href="#">CFG-UART2INPROT-RTCM3X</a>	0x10750004	L	-	-	1 (true)
<a href="#">CFG-UART2INPROT-SPARTN</a>	0x10750005	L	-	-	1 (true)

**Table 107: CFG-UART2INPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-UART2OUTPROT-UBX</a>	0x10760001	L	-	-	0 (false)
<a href="#">CFG-UART2OUTPROT-NMEA</a>	0x10760002	L	-	-	0 (false)

**Table 108: CFG-UART2OUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-USB-ENABLED</a>	0x10650001	L	-	-	1 (true)
<a href="#">CFG-USB-SELFPOW</a>	0x10650002	L	-	-	1 (true)
<a href="#">CFG-USB-VENDOR_ID</a>	0x3065000a	U2	-	-	5446
<a href="#">CFG-USB-PRODUCT_ID</a>	0x3065000b	U2	-	-	425
<a href="#">CFG-USB-POWER</a>	0x3065000c	U2	-	mA	0
<a href="#">CFG-USB-VENDOR_STR0</a>	0x5065000d	X8	-	-	0x4120786f6c622d75 ("u-blox A")
<a href="#">CFG-USB-VENDOR_STR1</a>	0x5065000e	X8	-	-	0x2e777777202d2047 ("G - www.")
<a href="#">CFG-USB-VENDOR_STR2</a>	0x5065000f	X8	-	-	0x632e786f6c622d75 ("u-blox.c")
<a href="#">CFG-USB-VENDOR_STR3</a>	0x50650010	X8	-	-	0x0000000000006d6f ("om\0\0\0\0")
<a href="#">CFG-USB-PRODUCT_STR0</a>	0x50650011	X8	-	-	0x4720786f6c622d75 ("u-blox G")
<a href="#">CFG-USB-PRODUCT_STR1</a>	0x50650012	X8	-	-	0x656365722053534e ("NSS rece")
<a href="#">CFG-USB-PRODUCT_STR2</a>	0x50650013	X8	-	-	0x0000000072657669 ("iver\0\0\0")
<a href="#">CFG-USB-PRODUCT_STR3</a>	0x50650014	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR0</a>	0x50650015	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR1</a>	0x50650016	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR2</a>	0x50650017	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR3</a>	0x50650018	X8	-	-	0x0000000000000000

**Table 109: CFG-USB configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-USBINPROT-UBX</a>	0x10770001	L	-	-	1 (true)
<a href="#">CFG-USBINPROT-NMEA</a>	0x10770002	L	-	-	1 (true)
<a href="#">CFG-USBINPROT-RTCM3X</a>	0x10770004	L	-	-	1 (true)

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-USBINPROT-SPARTN</a>	0x10770005	L	-	-	1 (true)

**Table 110: CFG-USBINPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
<a href="#">CFG-USBOUTPROT-UBX</a>	0x10780001	L	-	-	1 (true)
<a href="#">CFG-USBOUTPROT-NMEA</a>	0x10780002	L	-	-	1 (true)

**Table 111: CFG-USBOUTPROT configuration defaults**

## Related documents

- [1] ZED-F9R-03B Data sheet, UBX-22024085
- [2] ZED-F9R integration manual, UBX-20039643
- [3] RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3
- [4] Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11)
- [5] NMEA 0183 Standard for Interfacing Marine Electronic Devices, Version 4.11, November 2018
- [6] Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021



For regular updates to u-blox documentation and to receive product change notifications please register on our homepage (<https://www.u-blox.com>).

## Revision history

Revision	Date	Name	Status / Comments
R01	16-Sep-2022	ssid	- Advance information for ZED-F9R-03B
R02	28-Apr-2023	ssid	UBX-MGA-INI-ATT added

## Contact

### u-blox AG

Address: Zürcherstrasse 68  
8800 Thalwil  
Switzerland

For further support and contact information, visit us at [www.u-blox.com/support](http://www.u-blox.com/support).